



# Standard PTT Application User Guide

Release 12.3

JANUARY 2024

# Intellectual Property and Regulatory Notices

## Copyrights

The Motorola Solutions products described in this document may include copyrighted Motorola Solutions computer programs. Laws in the United States and other countries preserve for Motorola Solutions certain exclusive rights for copyrighted computer programs. Accordingly, any copyrighted Motorola Solutions computer programs contained in the Motorola Solutions products described in this document may not be copied or reproduced in any manner without the express written permission of Motorola Solutions.

No part of this document may be reproduced, transmitted, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, without the prior written permission of Motorola Solutions, Inc.

## Trademarks

MOTOROLA, MOTO, MOTOROLA SOLUTIONS, and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC, and are used under license. All other trademarks are the property of their respective owners.

## License Rights

The purchase of Motorola Solutions products shall not be deemed to grant directly or by implication, estoppel or otherwise, any license under the copyrights, patents, or patent applications of Motorola Solutions, except for the normal nonexclusive, royalty-free license to use that arises by operation of law in the sale of a product.

## Open Source Content

This product may contain Open Source software used under license. Refer to the product installation media for full Open Source Legal Notices and Attribution content.

## European Union (EU) and United Kingdom (UK) Waste of Electrical and Electronic Equipment (WEEE) Directive



The European Union's WEEE directive and the UK's WEEE regulation require that products sold into EU countries and the UK must have the crossed-out wheeled bin label on the product (or the package in some cases). As defined by the WEEE directive, this crossed-out wheeled bin label means that customers and end-users in EU and UK countries should not dispose of electronic and electrical equipment or accessories in household waste.

Customers or end-users in EU and UK countries should contact their local equipment supplier representative or service center for information about the waste collection system in their country.

## Disclaimer

Please note that certain features, facilities, and capabilities described in this document may not be applicable to or licensed for use on a specific system, or may be dependent upon the characteristics of a specific mobile subscriber unit or configuration of certain parameters. Please refer to your Motorola Solutions contact for further information.

# Contact Us

The Centralized Managed Support Operations (CMSO) is the primary contact for technical support included in your organization's service agreement with Motorola Solutions. To enable faster response time to customer issues, Motorola Solutions provides support from multiple countries around the world.

Service agreement customers should be sure to call the CMSO in all situations listed under Customer Responsibilities in their agreement, such as:

- To confirm troubleshooting results and analysis before taking action

Your organization received support phone numbers and other contact information appropriate for your geographic region and service agreement. Use that contact information for the most efficient response. However, if needed, you can also find general support contact information on the Motorola Solutions website, by following these steps:

1. Enter [motorolasolutions.com](https://motorolasolutions.com) in your browser.
2. Ensure that your organization's country or region is displayed on the page. Clicking or tapping the name of the region provides a way to change it.
3. Select "Support" on the [motorolasolutions.com](https://motorolasolutions.com) page.

## Comments

Send questions and comments regarding user documentation to [documentation@motorolasolutions.com](mailto:documentation@motorolasolutions.com).

Provide the following information when reporting a documentation error:

- The document title and part number
- The page number or title of the section with the error
- A description of the error

Motorola Solutions offers various courses designed to assist in learning about the system. For information, go to <https://learning.motorolasolutions.com> to view the current course offerings and technology paths.

# Document History

Version	Description	Date
MN009645A01-006	Updated <a href="#">Viewing Active Geofences on page 87</a> .	January 2024
MN009645A01-005	Updated <a href="#">User ID and Password User Login on page 31</a> . Updated <a href="#">Talkgroups on page 110</a> with the following sentence "The maximum number of members per talk group is <b>250</b> or more depending on the group type configuration by the administrator." Updated <a href="#">Minimizing a Video Call on page 160</a> .	December 2023
MN009645A01-004	Updated <a href="#">Integrated Secure Messaging on page 137</a> with the 3GPP MCDATA compliant messaging solution.	September 2023
MN009645A01-003	Updated <a href="#">Tones on page 59</a> section with Emergency Cancel Tone. Updated <a href="#">Declaring an Emergency on page 80</a> section with the following note: "If the emergency cannot be declared, the emergency fail tone is played, and a toast message is displayed." Updated <a href="#">Canceling Emergencies on page 82</a> section with the following information: "The emergency is canceled, a message indicating that the emergency is canceled is displayed, and an <b>Emergency Cancel</b> tone is played". Updated <a href="#">Viewing Active Geofences on page 87</a> section with the following information: "You can see the currently active geofences, the type, the dispatcher maintaining the geofence, the group name, and you can see whether you are inside or outside the geofence. You can see an indication that the geofence tone (Bell icon) is active. If no geofences are active, the following message displays: No record found". Updated <a href="#">Receiving an Incoming Video Call on page 163</a> section with the following note: "If you receive a video call while transmitting on a PTT call (holding the floor), you will receive a system notification to indicate the incoming video call." Updated hyperlinks for Broadcast Call Confirmation and Voice Message Fallback in the <a href="#">Settings on page 168</a> section.	August 2023
MN009645A01-002	Updated the Google and ESRI map supportability.	June 2023
MN009645A01-001	Initial version.	November 2022

# Contents

<b>Intellectual Property and Regulatory Notices .....</b>	<b>2</b>
<b>Contact Us.....</b>	<b>3</b>
<b>Document History.....</b>	<b>4</b>
<b>List of Figures .....</b>	<b>16</b>
<b>List of Tables .....</b>	<b>18</b>
<b>List of Procedures .....</b>	<b>19</b>
<b>Chapter 1: Introduction and Key Features .....</b>	<b>24</b>
1.1 What's New in This Release? .....	25
<b>Chapter 2: Application Installation and Getting Started .....</b>	<b>27</b>
2.1 Installation Prerequisites .....	27
2.2 Downloading the PTT Application .....	27
2.3 Programmable Key Assignment .....	28
2.3.1 Assigning a Programmable Key with a Kyocera DuraForce Pro .....	28
2.3.2 Assigning a Programmable Key with a Sonim XP8 Phone .....	28
2.4 First-time Activation .....	29
2.4.1 Activating on an Android Phone .....	29
2.4.2 Activating on an Android Phone Using only Wi-Fi Network.....	30
2.5 User ID and Password User Login .....	31
2.5.1 Logging In the First Time.....	31
2.5.2 Setting Your Password.....	32
2.5.3 Remembering Your Password (Private Device) .....	32
2.5.4 Subsequent Login .....	32
2.5.5 Forgetting Your Password.....	33
2.5.6 Switch User for Users with User ID and Password .....	33
2.5.6.1 Accessing the Switch User Option.....	33
2.6 Tutorial.....	34
2.7 Login .....	34
2.7.1 Manually Logging In to the PTT Application .....	34
2.8 Application Updates.....	34
2.9 In Application Update Notification.....	34
<b>Chapter 3: Navigating the Push-to-Talk Application.....</b>	<b>35</b>
3.1 History.....	35
3.2 Favorites .....	36
3.3 Contacts.....	37

3.4 Talkgroups .....	37
3.5 Map .....	38
3.6 Call Screen .....	39
3.7 Menu .....	40
3.7.1 Menu Options.....	40
3.8 Actions .....	40
3.9 Context Menus.....	41
3.10 Emergency Key .....	43
3.11 PTT Button .....	44
3.11.1 External PTT Button.....	44
3.11.2 On-screen Soft PTT Button.....	44
3.12 Navigating to the Previous Screen .....	44
3.13 One Touch Calling and Landing Page .....	44
3.13.1 Using a Wired Accessory without One Touch Calling.....	44
3.13.2 Using a Bluetooth Accessory without One Touch Calling .....	45
3.14 Scrolling .....	45
3.15 Searching.....	45
3.16 Icons .....	46
3.16.1 Action Icons .....	46
3.16.2 Avatar Icons.....	47
3.16.3 Call Screen Icons.....	50
3.16.4 Contacts Icons .....	51
3.16.5 Emergency Icons .....	52
3.16.6 History Icons .....	52
3.16.7 Integrated Secure Messaging Icons .....	53
3.16.8 Talkgroup Icons .....	54
3.16.9 Map Icons .....	54
3.16.10 Miscellaneous Icons.....	56
3.16.11 Presence Icons .....	56
3.16.12 Tab Icons.....	57
3.16.13 Title Bar Icons .....	58
3.16.14 Video Streaming Icons.....	58
3.17 Tones.....	59
<b>Chapter 4: Network Connectivity .....</b>	<b>61</b>
4.1 PTT over 4G LTE Networks.....	61
4.2 PTT over Wi-Fi.....	61
4.2.1 Switching between Cellular Data Networks and Wi-Fi Networks during a Call .....	61
4.2.2 Authenticated Wi-Fi Connections .....	62
<b>Chapter 5: User Information Display .....</b>	<b>63</b>

5.1 Viewing User Information.....	63
<b>Chapter 6: Making and Receiving PTT Calls.....</b>	<b>64</b>
6.1 Making Calls .....	64
6.1.1 Making One-to-One (1:1) Calls with Automatic Call Answer .....	64
6.1.2 Making One-to-One (1:1) Calls with Manual Call Answer .....	64
6.1.3 Calling a Contact That Is Offline or Has a Do Not Disturb (DND) Status .....	65
6.1.4 Making Talkgroup Calls .....	65
6.1.5 Making Quick Group Calls .....	66
6.1.6 Making Broadcast Calls .....	67
6.1.7 Calling from Device Contacts .....	69
6.1.7.1 Placing a Call from Device Contacts .....	69
6.1.8 Calling from History .....	69
6.1.9 Calling from Missed Call Alert.....	70
6.1.10 Calling from Instant Personal Alert .....	70
6.1.11 One Touch Calling Behavior.....	70
6.1.12 Call Behavior while the Screen Is Locked .....	71
6.1.13 Call Behavior when Contact or Talkgroup Is Unavailable .....	71
6.1.14 Dialing a Manual Call to a PTT User .....	72
6.2 Receiving Calls .....	72
6.2.1 Receiving One-to-One (1:1) Calls.....	73
6.2.2 Receiving Broadcast Talkgroup Calls .....	73
6.2.3 Broadcast Call History .....	74
6.3 Turning the Speaker On/Off and Setting the PTT Call Volume .....	75
6.4 Interacting with Silent or Sound Mode.....	76
6.5 Interacting between PTT and Cellular Calls .....	76
6.6 Call Behavior in the Background .....	77
6.7 Call Behavior while the Screen Is Locked .....	78
6.8 Rejoining a PTT Talkgroup Call .....	78
<b>Chapter 7: Emergency Calling and Alert (Optional).....</b>	<b>79</b>
7.1 Declaring an Emergency .....	79
7.1.1 Declaring an Emergency .....	80
7.2 Authorized User Remotely Declaring an Emergency on Your Behalf .....	80
7.3 Receiving an Emergency.....	81
7.3.1 Receiving an Emergency Call.....	81
7.3.2 Receiving an Emergency Cancel Notification.....	81
7.4 Emergency Cancellation.....	82
7.4.1 Canceling Emergencies.....	82
7.5 Authorized User .....	82
7.5.1 Declaring an Emergency on Behalf of Another User.....	82

7.5.2 Canceling an Emergency on Behalf of Another User .....	84
7.5.2.1 Canceling an Emergency from the Context Menu .....	84
7.5.2.2 Canceling an Emergency from the Call Screen .....	85
7.6 Enabling Emergency User Check.....	85
7.6.1 Enabling Emergency User Check from the Call Screen .....	85
7.6.2 Monitoring Device Location.....	86
7.6.3 Monitoring Device Cellular Network Signal Strength .....	86
7.6.4 Monitoring Device Wi-Fi Signal Strength .....	86
7.6.5 Monitoring Device Battery Level .....	86
<b>Chapter 8: Area-based Warning Tones .....</b>	<b>87</b>
8.1 Entering a Geofence.....	87
8.2 Exiting a Geofence .....	87
8.3 Viewing Active Geofences .....	87
<b>Chapter 9: Entering a Geofence .....</b>	<b>89</b>
<b>Chapter 10: Supervisory Override .....</b>	<b>90</b>
10.1 Supervisor Talkgroup .....	90
10.2 Non-supervisor Talkgroup Members .....	90
<b>Chapter 11: Alerts .....</b>	<b>91</b>
11.1 Instant Personal Alert (IPA).....	91
11.1.1 Sending an Alert.....	91
11.1.2 Receiving an Alert .....	91
11.2 Missed Call Alert (MCA).....	92
11.2.1 Replying to a Missed Call Alert .....	92
11.3 Multiple Missed Call Alerts or Instant Personal Alerts per Caller.....	92
11.4 Setting the PTT Alert Volume.....	92
<b>Chapter 12: Real-time Presence.....</b>	<b>93</b>
12.1 My Presence .....	93
12.1.1 Setting Self-presence.....	93
12.2 PTT Contact Presence .....	94
<b>Chapter 13: History .....</b>	<b>95</b>
13.1 Access History .....	95
13.2 Search History .....	95
13.3 History Icons .....	96
13.4 Access Conversation Details .....	96
13.5 Making a PTT Call .....	96
13.6 Adding a PTT Contact (Optional).....	96
13.7 Adding a Phone Contact (Optional).....	97
13.8 Deleting History.....	97

13.9 Clearing All History .....	97
13.10 Deleting a Message .....	98
13.11 Forwarding a Message .....	98
13.12 Photo and Video Sending.....	98
<b>Chapter 14: Favorites .....</b>	<b>99</b>
14.1 Favorite Icons .....	100
14.2 Search Favorites.....	100
14.3 Viewing or Editing Favorite Contacts.....	100
14.4 Adding Favorite Contacts .....	100
14.5 Removing Favorite Contacts .....	100
14.6 Viewing or Editing Favorite Groups.....	101
14.7 Adding Favorite Groups.....	101
14.8 Removing Favorite Groups.....	101
<b>Chapter 15: Contacts .....</b>	<b>102</b>
15.1 Contacts Icons .....	102
15.2 Searching Contacts .....	102
15.2.1 Your Contact List.....	102
15.2.2 Searching Corporate Global Directory Contacts .....	103
15.3 Viewing Contacts .....	103
15.3.1 Sorting the Contact List .....	103
15.3.2 Showing or Hiding Offline Contacts.....	104
15.3.2.1 Showing Only Online Contacts.....	104
15.3.2.2 Showing All Contacts .....	104
15.4 Viewing Contact Details.....	105
15.5 Contact Additions.....	105
15.5.1 Adding a New PTT Contact Manually.....	105
15.5.2 Importing a PTT Contact from the Device's Contact List.....	106
15.5.3 Adding a New Phone Contact Manually (Optional).....	106
15.5.4 Importing a New Phone Contact from the Device's Contact List (Optional).....	107
15.6 Editing Contact Details .....	107
15.6.1 Editing a Contact Name.....	108
15.6.2 Adding or Changing a Contact Avatar .....	108
15.6.3 Changing Contact Color .....	108
15.6.4 Making Contact a Favorite or Removing as a Favorite .....	108
15.7 Deleting a Contact .....	109
<b>Chapter 16: Talkgroups .....</b>	<b>110</b>
16.1 Talkgroup Icons.....	110
16.2 Searching Talkgroups.....	110

16.3 Viewing Talkgroups .....	110
16.4 Call Permissions .....	111
16.5 Dynamic Area-based Talkgroups (Optional) .....	112
16.6 Viewing Talkgroup Details .....	112
16.6.1 Broadcast Talkgroup Details (Broadcasters Only) .....	113
16.7 Adding a Talkgroup .....	113
16.8 Editing Talkgroup Details .....	113
16.8.1 Editing a Talkgroup Name .....	114
16.8.2 Adding One or More Members to a Talkgroup .....	114
16.8.3 Removing a Member from a Talkgroup .....	114
16.8.4 Renaming a Talkgroup Member .....	115
16.8.5 Adding or Changing a Talkgroup Avatar .....	116
16.8.6 Changing Talkgroup Color .....	116
16.8.7 Making Talkgroup a Favorite or Removing as a Favorite .....	116
16.9 Deleting a Talkgroup .....	116
<b>Chapter 17: Talkgroup Scanning .....</b>	<b>118</b>
17.1 Enabling/Disabling Scanning .....	118
17.2 Adding Talkgroups to Scan Lists .....	119
17.3 Removing Talkgroups from Scan Lists or Changing the Scanning Priority .....	120
<b>Chapter 18: Map .....</b>	<b>121</b>
18.1 Map Icons .....	121
18.2 Searching the Map .....	122
18.3 Recentering the Map .....	122
18.4 Individuals .....	122
18.4.1 Sending My Location or an Arbitrary Location to a Contact .....	122
18.4.2 Sending My Location or an Arbitrary Location to a Quick Group .....	123
18.4.3 Sending My Location or an Arbitrary Location to a Talkgroup .....	123
18.5 Supervisor with Location Capability .....	124
18.5.1 Talkgroup Member Location .....	124
18.5.1.1 Viewing Talkgroup Member Locations .....	124
18.5.1.2 Viewing Talkgroup Member Location Details .....	125
18.5.1.3 Calling a Talkgroup Member .....	126
18.5.1.4 Sharing Your Location or an Arbitrary Location to a Talkgroup with Location Capability .....	127
18.5.2 Boundary .....	128
18.5.2.1 Creating a Boundary .....	129
18.5.2.2 Recentering a Boundary on the Map .....	130
18.5.2.3 Recentering the Map to Your Location .....	131
18.5.2.4 Boundary Settings .....	131

18.5.3 Creating a Quick Group from the Map.....	133
18.5.3.1 Adding Members to a Quick Group .....	135
18.5.3.2 Removing Quick Group Members .....	136
<b>Chapter 19: Integrated Secure Messaging.....</b>	<b>137</b>
19.1 Integrated Secure Messaging Icons .....	138
19.2 Multimedia Content.....	138
19.2.1 Text Messaging.....	138
19.2.1.1 Sending a Text Message.....	139
19.2.1.2 Selecting Quick Text.....	141
19.2.1.3 Adding Quick Text.....	142
19.2.1.4 Deleting Quick Text.....	145
19.2.1.5 Receiving a Text Message .....	146
19.2.2 Image Messaging .....	148
19.2.2.1 Saving an Image Message .....	148
19.2.3 Video Messaging .....	149
19.2.3.1 Saving a Video Message .....	149
19.2.4 Voice Messaging.....	149
19.2.4.1 Saving a Voice Message.....	150
19.2.4.2 Receiving a Voice Message.....	150
19.2.4.3 Sending a Voice Message from History.....	151
19.2.5 File Messaging.....	151
19.2.5.1 Sending a File Message .....	151
19.2.5.2 Receiving a File Message.....	152
19.2.5.3 Saving a File Message.....	152
19.2.6 Receiving a Location Message.....	152
19.3 Message Actions .....	153
19.3.1 Forwarding a Message to a Contact or Talkgroup .....	153
19.3.2 Forwarding a Message to a Quick Group.....	154
19.3.3 Replying to a Sender .....	154
19.3.4 Replying to a Talkgroup (Talkgroup Messages).....	155
19.3.5 Deleting a Message .....	155
19.3.6 History Message Actions .....	155
19.3.6.1 Sending a Text Message from History .....	155
19.3.6.2 Copying a Text Message from History .....	156
19.3.6.3 Sending a Photo or a Video from History .....	156
19.3.6.4 Sending a Voice Message from History.....	157
19.3.6.5 Sending a File from History .....	157
19.3.6.6 Sharing My Location from History.....	158
<b>Chapter 20: Video Streaming (Optional) .....</b>	<b>159</b>

20.1 Video Streaming Icons.....	159
20.2 Minimizing a Video Call .....	160
20.3 Making a Video Call to a Contact .....	160
20.4 Making a Video Call to a Quick Group.....	161
20.5 Making a Video Call to a Talkgroup.....	162
20.6 Receiving an Incoming Video Call .....	163
20.6.1 Receiving an Incoming Video Call .....	163
20.6.2 Receiving a Video Stream Request.....	164
20.6.3 Receiving an Unconfirmed Video Stream Request .....	164
<b>Chapter 21: Airplane Mode .....</b>	<b>165</b>
<b>Chapter 22: Accessories and Bluetooth Use .....</b>	<b>166</b>
22.1 Using a Wired Audio Headset.....	166
22.2 Using Bluetooth.....	166
22.2.1 Car Kit .....	166
22.2.2 External PTT Button.....	167
22.2.3 Bluetooth for PTT .....	167
22.3 Using a Remote Speaker Microphone.....	167
22.3.1 Wired.....	167
22.3.2 Bluetooth .....	167
<b>Chapter 23: Settings .....</b>	<b>168</b>
23.1 Accessing the PTT Application Settings .....	169
23.2 Important Message .....	169
23.2.1 Upgrading the PTT Application .....	169
23.3 Advanced.....	170
23.3.1 Changing the Advanced Settings.....	170
23.3.2 Audio Profile.....	170
23.3.2.1 Changing the Audio Profile Setting .....	170
23.3.3 Audio Rate .....	170
23.3.3.1 Changing the Audio Rate Setting.....	170
23.3.4 Audio Mode.....	171
23.3.4.1 Changing the Audio Mode Setting .....	171
23.3.5 Accessory Compatibility.....	171
23.3.5.1 Changing the Accessory Compatibility Setting .....	171
23.4 Alert Repeat.....	171
23.4.1 Changing the Alert Repeat Setting .....	171
23.5 Alert Tone .....	172
23.5.1 Changing the Alert Tone Setting .....	172
23.6 Allow Unconfirmed Video Transmission .....	172

23.6.1 Changing the Allow Unconfirmed Video Transmission Setting .....	172
23.7 Audio Interaction .....	173
23.7.1 Changing the Audio Interaction Setting .....	173
23.8 Auto Answer Video Call .....	173
23.8.1 Changing the Auto Answer Video Call Setting .....	173
23.9 Auto Download .....	173
23.9.1 Changing the Auto Download Setting .....	174
23.10 Auto Start .....	174
23.10.1 Changing the Auto Start Setting .....	174
23.11 Background Mode .....	174
23.11.1 Changing the Background Mode Setting .....	174
23.12 Broadcast Call Confirmation .....	175
23.12.1 Changing the Broadcast Call Confirmation Setting .....	175
23.13 Call From Lock Screen .....	175
23.13.1 Changing the Call From Lock Screen Setting .....	175
23.14 Call Priority .....	176
23.14.1 Changing the Call Priority Setting .....	176
23.15 Capacity .....	176
23.15.1 Viewing the Phone Capacity Setting .....	176
23.16 Contact Sorting .....	176
23.16.1 Changing the Contact Sorting Setting .....	177
23.17 Display Name .....	177
23.17.1 Viewing or Changing Your Display Name Setting .....	177
23.18 Emergency .....	177
23.18.1 Viewing Your Emergency Contacts Setting .....	178
23.19 Emergency Alert .....	178
23.19.1 Changing the Emergency Alert Setting .....	178
23.20 Enhanced Loudness .....	178
23.20.1 Changing the Enhanced Loudness Setting .....	178
23.21 History Sorting .....	179
23.21.1 Changing the History Sorting Setting .....	179
23.22 In Call Tones .....	179
23.22.1 Changing the In Call Tones Setting .....	179
23.23 Instant Personal Alert .....	180
23.23.1 Changing the Instant Personal Alert Setting .....	180
23.24 Logout .....	180
23.24.1 Changing the Logout Setting .....	181
23.25 Message Alert .....	181
23.25.1 Changing the Message Alert Setting .....	181

23.26 Message Alert Tone .....	181
23.26.1 Changing the Message Alert Tone Setting .....	181
23.27 Missed Call Alert .....	182
23.27.1 Changing the Missed Call Alert Setting .....	182
23.28 My PTT Number .....	182
23.28.1 Viewing the My PTT Number Setting.....	182
23.28.1.1 Missed Call Alert .....	182
23.29 Network Loss Tone Repeat.....	183
23.29.1 Changing the Network Loss Tone Repeat Setting .....	183
23.30 Network Up/Down Tones .....	183
23.30.1 Changing the Network Up/Down Tones Setting.....	183
23.31 One Touch Action.....	184
23.31.1 Changing the One Touch Action Setting.....	184
23.32 Privacy Mode .....	185
23.32.1 Changing the Privacy Mode Setting .....	185
23.33 PTT Key .....	185
23.33.1 Changing the PTT Key Setting .....	185
23.34 Restore Defaults .....	186
23.34.1 Restoring the Default Settings .....	186
23.35 Using Bluetooth.....	186
23.35.1 Changing the Bluetooth Setting .....	186
23.36 Vibrate Alert .....	186
23.36.1 Changing Vibrate Alert Setting .....	186
23.37 Vibrate Call .....	187
23.37.1 Changing the Vibrate Call Setting.....	187
23.38 Voice Message Fallback .....	187
23.38.1 Changing the Voice Message Fallback Setting .....	187
23.39 Volume Boost.....	187
23.39.1 Changing Volume Boost Setting .....	188
<b>Chapter 24: Troubleshooting .....</b>	<b>189</b>
24.1 General .....	189
24.2 Activation Failures .....	189
24.3 Restarting an Unresponsive PTT Application.....	189
24.4 Application Asks You to Enter an Activation Code .....	190
24.5 Application Is Not Visible during an Incoming Call .....	190
24.6 Call Failures .....	190
24.7 Unexpected Call Endings .....	190
24.8 Incoming Call Rejection .....	190
24.9 Calls Are Always Heard in the Earpiece .....	191

24.10 Calls Are Only Received from a Small Number of Groups.....	191
24.11 Unable to Change the Phone Number of a PTT Contact .....	191
24.12 Unable to Create/Update/Delete a Contact or Group.....	191
24.13 Unable to Hear an Incoming Call.....	192
24.14 Unable to Send an Instant Personal Alert .....	192
24.15 Changing Your SIM Card .....	192
24.16 Explanation of Error Messages .....	192
24.16.1 Loss of Data Network Connection .....	192
24.16.2 User Busy .....	193
24.16.3 User Unreachable .....	193
24.17 Login Failures .....	193
24.18 Presence Status Does Not Update.....	193
24.19 PTT Button Is Not Working or Accesses a Different Application.....	193
24.20 Quick Group Calls I Receive Are Shown in History as a One-to-One Call.....	194
24.21 Wi-Fi Connection Problems .....	194
<b>Chapter 25: Glossary .....</b>	<b>195</b>
25.2 Alert Types.....	195
25.3 Call Types.....	195

# List of Figures

Figure 1: Main Screen .....	35
Figure 2: History.....	36
Figure 3: Favorites.....	36
Figure 4: Contacts .....	37
Figure 5: Groups.....	38
Figure 6: Map.....	38
Figure 7: Call Screen .....	39
Figure 8: Placing a PTT Talkgroup Call .....	66
Figure 9: Call Screen .....	67
Figure 10: PTT Broadcast Call Screen.....	68
Figure 11: History.....	69
Figure 12: Manual Dialing Screen .....	72
Figure 13: Nonbroadcaster Call History.....	74
Figure 14: Broadcaster Call History.....	74
Figure 15: Earpiece Is On.....	75
Figure 16: Speaker Is On.....	75
Figure 17: Volume Control .....	75
Figure 18: Call Screen - Speaker ON/OFF Button .....	76
Figure 19: Contact Context Menu.....	83
Figure 20: Emergency User Check.....	84
Figure 21: Contacts .....	94
Figure 22: History.....	95
Figure 23: Favorite Contacts .....	99
Figure 24: Contacts .....	103
Figure 25: Talkgroups.....	111
Figure 26: Talkgroup Scanning .....	119
Figure 27: Map.....	121
Figure 28: My Location .....	122
Figure 29: My Location .....	123
Figure 30: My Location .....	124
Figure 31: Groups with Location Capability .....	125
Figure 32: Talkgroup Member Location .....	125
Figure 33: Viewing a Talkgroup Member's Location Details .....	126
Figure 34: Viewing a Talkgroup Member's Location Details .....	127
Figure 35: Groups with Location Capability .....	128
Figure 36: My Location .....	128

Figure 37: Setting the Boundary Popover .....	129
Figure 38: Boundary Preview .....	129
Figure 39: Boundary ON.....	130
Figure 40: Setting the Boundary Popover .....	131
Figure 41: Map.....	134
Figure 42: Creating a Quick Group from the Map .....	134
Figure 43: Creating a Quick Group from the Map .....	135
Figure 44: Contact Context Menu.....	139
Figure 45: Talkgroup Context Menu.....	140
Figure 46: Text Message Box .....	140
Figure 47: Text Box.....	141
Figure 48: Editing Quick Text.....	141
Figure 49: Sending Quick Text .....	142
Figure 50: Text Box.....	142
Figure 51: Selecting Quick Text.....	143
Figure 52: Entering Quick Text .....	143
Figure 53: Creating Quick Text.....	144
Figure 54: Sending Quick Text .....	144
Figure 55: Text Box.....	145
Figure 56: Editing Quick Text.....	145
Figure 57: Deleting Quick Text .....	146
Figure 58: Deleting Quick Text Confirmation .....	146
Figure 59: History .....	147
Figure 60: History Details .....	147
Figure 61: Transmitting a Live Video Stream to a Contact.....	160
Figure 62: Transmitting a Live Video Stream to a Quick Group.....	161
Figure 63: Transmitting a Live Video Stream to a Talkgroup .....	162

# List of Tables

Table 1: Menu Options .....	40
Table 2: Context Menus .....	41
Table 3: Action Icons .....	46
Table 4: Unassigned Avatar Icons .....	47
Table 5: Assigned Avatar Icons .....	48
Table 6: Call Screen Icons .....	50
Table 7: Contacts Icons.....	51
Table 8: Emergency Icons .....	52
Table 9: History Icons.....	52
Table 10: Integrated Secure Messaging Icons .....	53
Table 11: Talkgroup Icons.....	54
Table 12: Map Icons.....	54
Table 13: Miscellaneous Icons.....	56
Table 14: Presence Icons .....	56
Table 15: Tab Icons .....	57
Table 16: Title Bar Icons.....	58
Table 17: Video Streaming Icons .....	58
Table 18: Tones .....	59
Table 19: Area-based Warning Tones .....	87
Table 20: Call Permissions.....	111

# List of Procedures

Downloading the PTT Application .....	27
Assigning a Programmable Key with a Kyocera DuraForce Pro.....	28
Assigning a Programmable Key with a Sonim XP8 Phone .....	28
Activating on an Android Phone .....	29
Activating on an Android Phone Using Only Wi-Fi Network.....	30
Logging In the First Time .....	31
Setting Your Password .....	32
Remembering Your Password (Private Device) .....	32
Forgetting Your Password .....	33
Accessing the Switch User Option .....	33
Manually Logging In to the PTT Application.....	34
Using a Wired Accessory without One Touch Calling.....	44
Using a Bluetooth Accessory without One Touch Calling.....	45
Searching.....	45
Viewing User Information .....	63
Making One-to-One (1:1) Calls with Automatic Call Answer.....	64
Making One-to-One (1:1) Calls with Manual Call Answer .....	64
Making Talkgroup Calls.....	65
Making Quick Group Calls.....	66
Making Broadcast Calls.....	67
Placing a Call from Device Contacts .....	69
Calling from History .....	69
Calling from Missed Call Alert .....	70
Calling from Instant Personal Alert.....	70
Dialing a Manual Call to a PTT User .....	72
Receiving Calls.....	72
Declaring an Emergency .....	80
Receiving an Emergency Call .....	81
Receiving an Emergency Cancel Notification .....	81
Canceling Emergencies.....	82
Declaring an Emergency on Behalf of Another User.....	82
Canceling an Emergency from the Context Menu.....	84
Canceling an Emergency from Call Screen .....	85
Enabling Emergency User Check from Call Screen.....	85
Viewing Active Geofences.....	87
Sending an Alert.....	91

List of Tables	
Receiving an Alert.....	91
Replying to a Missed Call Alert.....	92
Setting Self-presence .....	93
Making a PTT Call .....	96
Adding a PTT Contact (Optional) .....	96
Adding a Phone Contact (Optional).....	97
Deleting History .....	97
Clearing All History .....	97
Deleting a Message .....	98
Adding Favorite Contacts .....	100
Removing Favorite Contacts .....	100
Adding Favorite Groups.....	101
Removing Favorite Groups.....	101
Searching Corporate Global Directory Contacts .....	103
Sorting the Contact List .....	103
Showing Only Online Contacts.....	104
Showing All Contacts.....	104
Viewing Contact Details.....	105
Adding a New PTT Contact Manually.....	105
Importing a PTT Contact from the Device's Contact List.....	106
Adding a New Phone Contact Manually (Optional) .....	106
Importing a New Phone Contact from the Device's Contact List (Optional).....	107
Editing a Contact Name.....	108
Adding or Changing a Contact Avatar .....	108
Changing Contact Color .....	108
Deleting a Contact .....	109
Viewing Talkgroup Details.....	112
Adding a Talkgroup.....	113
Editing Talkgroup Details .....	113
Editing a Talkgroup Name.....	114
Adding One or More Members to a Talkgroup .....	114
Removing a Member from a Talkgroup.....	114
Renaming a Talkgroup Member.....	115
Adding or Changing a Talkgroup Avatar .....	116
Changing Talkgroup Color .....	116
Deleting a Talkgroup.....	116
Enabling/Disabling Scanning.....	118
Adding Talkgroups to Scan Lists.....	119
Removing Talkgroups from Scan Lists or Changing the Scanning Priority .....	120

Sending My Location or an Arbitrary Location to a Contact .....	122
Sending My Location or an Arbitrary Location to a Quick Group .....	123
Sending My Location or an Arbitrary Location to a Talkgroup .....	123
Viewing Talkgroup Member Locations .....	124
Viewing Talkgroup Member Location Details.....	125
Calling a Talkgroup Member .....	126
Sharing Your Location or an Arbitrary Location to a Talkgroup with Location Capability .....	127
Creating a Boundary.....	129
Recentering Boundary on the Map.....	130
Recentering the Map to Your Location.....	131
Changing the Boundary Settings .....	131
Changing the Update Interval.....	132
Changing the Active Boundary Time .....	132
Changing the Notify Me Setting.....	132
Changing the Notify Member Setting.....	133
Changing the Initial Member Notification Setting .....	133
Creating a Quick Group from the Map .....	133
Adding Members to a Quick Group .....	135
Removing Quick Group Members .....	136
Sending a Text Message .....	139
Selecting Quick Text .....	141
Adding Quick Text.....	142
Deleting Quick Text .....	145
Receiving a Text Message.....	146
Saving an Image Message .....	148
Saving a Video Message .....	149
Saving a Voice Message .....	150
Receiving a Voice Message .....	150
Sending a Voice Message from History.....	151
Saving a File Message .....	152
Forwarding a Message to a Contact or Talkgroup.....	153
Forwarding a Message to a Quick Group.....	154
Replying to a Sender .....	154
Replying to Talkgroup (Talkgroup Messages).....	155
Deleting a Message .....	155
Sending a Text Message from History.....	155
Copying a Text Message from History.....	156
Sending a Photo or a Video from History .....	156
Sending a Voice Message from History.....	157

List of Tables	
Sending a File from History .....	157
Sharing My Location from History .....	158
Minimizing a Video Call .....	160
Making a Video Call to a Contact .....	160
Making a Video Call to a Quick Group .....	161
Making a Video Call to a Talkgroup .....	162
Receiving an Incoming Video Call .....	163
Receiving a Video Stream Request .....	164
Accessing the PTT Application Settings .....	169
Upgrading the PTT Application .....	169
Changing the Advanced Settings .....	170
Changing the Audio Profile Setting .....	170
Changing the Audio Rate Setting .....	170
Changing the Audio Mode Setting .....	171
Changing the Accessory Compatibility Setting .....	171
Changing the Alert Repeat Setting .....	171
Changing the Alert Tone Setting .....	172
Changing the Allow Unconfirmed Video Transmission Setting .....	172
Changing the Audio Interaction Setting .....	173
Changing the Auto Answer Video Call Setting .....	173
Changing the Auto Download Setting .....	174
Changing the Auto Start Setting .....	174
Changing the Background Mode Setting .....	174
Changing the Broadcast Call Confirmation Setting .....	175
Changing the Call From Lock Screen Setting .....	175
Changing the Call Priority Setting .....	176
Viewing the Phone Capacity Setting .....	176
Changing the Contact Sorting Setting .....	177
Viewing or Changing Your Display Name Setting .....	177
Viewing Your Emergency Contacts Setting .....	178
Changing the Emergency Alert Setting .....	178
Changing the Enhanced Loudness Setting .....	178
Changing the History Sorting Setting .....	179
Changing the In Call Tones Setting .....	179
Changing the Instant Personal Alert Setting .....	180
Changing the Logout Setting .....	181
Changing the Message Alert Setting .....	181
Changing the Message Alert Tone Setting .....	181
Changing the Missed Call Alert Setting .....	182

Viewing the My PTT Number Setting .....	182
Changing the Missed Call Alert Setting .....	182
Changing the Network Loss Tone Repeat Setting .....	183
Changing the Network Up/Down Tones Setting .....	183
Changing the One Touch Action Setting .....	184
Changing the Privacy Mode Setting .....	185
Changing the PTT Key Setting .....	185
Restoring the Default Settings .....	186
Changing the Bluetooth Setting .....	186
Changing the Vibrate Alert Setting .....	186
Changing the Vibrate Call Setting .....	187
Changing the Voice Message Fallback Setting .....	187
Changing the Volume Boost Setting .....	188
Restarting an Unresponsive PTT Application .....	189

## Chapter 1

# Introduction and Key Features

The Push-to-Talk (PTT) application supports two modes: Standard PTT and PTT Radio. Your administrator assigns one of these modes. This document describes the Standard PTT mode.

The Standard PTT application mode provides instant communication to individuals and talkgroups at the push of a button. Here is a brief description of the key features of the Standard PTT mode:

## Alerts

### Instant Personal Alert (IPA)

Allows you to send a message to another person asking for a callback.

### Missed Call Alert (MCA)

Shown whenever you miss an incoming PTT call because you were in another PTT call or a regular cellular call.

For more information, see [Alerts on page 91](#).

### Dynamic Area-based Talkgroups

Makes talkgroups dynamically available while in a geographical area.

For more information, see [Dynamic Area-based Talkgroups \(Optional\) on page 112](#).

### Broadcast Talkgroup Calling

Allows designated talkgroup members to make high-priority one-way calls typically used for making important announcements to large talkgroups.



**NOTE:** In the PTT application, groups created by the administrator are also known as talkgroups.

For more information, see [Making Broadcast Calls on page 67](#).

### Contact and Talkgroup Management

PTT contacts and talkgroups can be centrally managed by an administrator (“Administrator-managed”) or by you (“personal”).

For more information, see [Contacts on page 102](#) and [Talkgroups on page 110](#).



**NOTE:** In the PTT application, groups (created by the subscriber or administrator) are also known as Talkgroups.

### Device ID Management

Allows login to the service with a username and password. It also allows multiple users to share a device.

For more information, see [User ID and Password User Login on page 31](#).

### Emergency Calling and Alert

Allows you to originate or receive an emergency call and receive an emergency alert.

For more information, see [Emergency Calling and Alert \(Optional\) on page 79](#).

### Favorites

You can manage your list of favorites for quick access to contacts and talkgroups.

For more information, see [Favorites on page 99](#).

### Integrated Secure Messaging

Allows a PTT user to send and receive secure text messages, multimedia content, and location information to and from other PTT users.

For more information, see [Integrated Secure Messaging on page 137](#).

**Location Tracking**

Allows a supervisor with Location Capability, enabled by your administrator at the talkgroup level, to track talkgroup members' location.

For more information, see [Supervisor with Location Capability on page 124](#).

**PTT Calling to Individuals and Talkgroups**

Allows instant communication to one or more people at the push of a button.

For more information, see [Making Calls on page 64](#).

**Real-time Presence**

Allows you to see whether your contacts are available and ready to receive calls before making a call. You can also indicate if you want to receive PTT calls to your contacts.

For more information, see [Real-time Presence on page 93](#).

**Supervisory Override**

Allows a supervisor to take the floor and speak at any time during a talkgroup call, even if someone else is speaking.

For more information, see [Supervisory Override on page 90](#).

**Talkgroup Scanning with Priority**

Allows the phone of a subscriber to scan through a list of corporate talkgroups for calls. The higher-priority talkgroup calls take precedence over lower-priority talkgroup calls.

For more information, see [Talkgroup Scanning on page 118](#).

**Video Streaming**

Allows you to stream your video in real time to another user, typically a dispatcher.

For more information, see [Video Streaming \(Optional\) on page 159](#).

**Wi-Fi support**

In addition to the broad coverage of PTT service provided by the cellular data network, you can use PTT over a home, office, or public Wi-Fi connection.

For more information, see [PTT over Wi-Fi on page 61](#).

**1.1****What's New in This Release?**

Release 12.3 contains the following new features:

- Updated the Google and ESRI map supportability.
- Added the [Area-based Warning Tones on page 87](#) section. These tones are added to the [Tones on page 59](#) section and active geofences to the [Menu on page 40](#) section.
- Updated the [Emergency Calling and Alert \(Optional\) on page 79](#) section to include that when a user initiates an emergency, the PTT application queries the device OS for the user's last known location, and it is sent as a part of the initial emergency alert during the activation of the emergency.
- Updated the [Emergency Calling and Alert \(Optional\) on page 79](#) section (Declaring an Emergency) to include a note: You can perform an emergency initiation while in a two-way call. When an emergency is declared the two-way call ends immediately.
- Updated the [Video Streaming \(Optional\) on page 159](#) section (Minimizing a Video Call) to include that a user can minimize ongoing streaming video calls to participate in other activities, for example, PTT, messaging, location, etc. The minimized video thumbnail on the PTT application can be dragged to any corner of the PTT application to allow users to perform other actions within the PTT app.
- Updated the [Video Streaming \(Optional\) on page 159](#) section with screenshots which include a long talkgroup name and streamer ID which is displayed with "..." and underlined (to indicate actionable) when it cannot be displayed completely.
- Updated the [Settings on page 168](#) section to include the Broadcast Call Confirmation setting.

- Updated the [Settings on page 168](#) section to include the Voice Message Fallback setting.

## Chapter 2

# Application Installation and Getting Started

This section describes the steps you must take to install the Push-to-Talk (PTT) application and how to get started.

## 2.1

### Installation Prerequisites

You must ensure you have the following prerequisites before installation.

- Subscription to the PTT service.
- A supported Android smartphone.  
For more details, please check the website of your service provider.
- Battery Saver mode on your device should be disabled. Otherwise, it could interfere with the PTT operation.
- A Google account to download the application from Google Play Store. A Google account can be set up by you or assigned by your employer if it has a corporate account with Google.  
For information on creating a Google account, see [Google Account Help](#).  
For information on setting up a phone to use Google Play, see [Google Play Help](#).

## 2.2

### Downloading the PTT Application

You can search for the PTT application and download the application directly from your phone or Google Play.

#### Procedure:

1. Search for the PTT application on the Google Play Store.
2. Download the application by touching the **Install** button.  
The application downloads and installs automatically.
3. Once the download is complete, select **Open**.

## 2.3

# Programmable Key Assignment

If your device has a programmable key, you can assign it to the PTT application.

### 2.3.1

## Assigning a Programmable Key with a Kyocera DuraForce Pro

If you are using a Kyocera DuraForce Pro phone, you can assign the programmable key to the PTT application.

Follow this procedure to set the PTT function for the programmable key.

#### Procedure:

1. Navigate to the phone **Settings**.
2. Under the **Device** section, tap the **Programmable key** option.  
The current function assigned to the key shows.
3. Tap the **Programmable key** menu item.  
A list of behaviors assignable to the key is shown.
4. Tap **PTT operation**.  
The key is now assigned to the PTT operation.
5. Tap the **Wake up device** toggle to **ON**.  
Holding down the PTT key wakes up the device.

### 2.3.2

## Assigning a Programmable Key with a Sonim XP8 Phone

If you are using a Sonim XP8 phone, you can assign the programmable key to the PTT application for declaring an emergency.

Follow this procedure to set the PTT function for the programmable key.

#### Procedure:

1. Navigate to the phone **Settings**.
2. Under the **Personal** section, tap the **Programmable Keys** option.  
The current function assigned to the keys will be shown.



**NOTE:** E911App is currently assigned and must be reassigned.

3. Tap the **Select ALARM Key app** menu item.  
A list of behaviors assignable to the key is shown.
4. Tap **PTT operation**.  
The key is now assigned to the PTT operation.

## 2.4

## First-time Activation

There are two ways to activate the PTT application. You can activate a phone using your service provider's network or Wi-Fi with an activation code.

- [Activating on an Android Phone on page 29](#)
- [Activating on an Android Phone Using Only Wi-Fi Network on page 30](#)



**NOTE:** If your administrator has provided you with a user ID and password, see [User ID and Password User Login on page 31](#).

## 2.4.1

### Activating on an Android Phone

The first time you start the application after download, the application must “activate” with the PTT server. This activation process ensures that you are a PTT subscriber and that you are using a supported Android phone.

**Procedure:**

1. Tap on the **Push-to-Talk** icon under **Apps** to launch the PTT application.

The **Activation Confirmation** dialog displays.



**NOTE:**

If prompted, make PTT the default app for your programmable key.

When prompted, you must **ALLOW** the application to send and view SMS messages, to record audio, take pictures, record video, access the location of the device, make and manage phone calls, access photos, media, access files on your device, and access your contacts.

When prompted, you must always **ALLOW** the application to run in the background. This action may reduce battery life.

2. Perform one of the following actions:
  - To activate to open the **Authentication Required** screen, tap **Yes**.
  - To cancel, tap **No**.
3. Tap **OK** to authenticate your subscription, an SMS must be sent. Do not modify the message contents. Press the Back button to return to the app after sending the text.  
Message and data rates may apply.
4. If activation fails, select **Exit**, which closes the application, and start over at [Step 1](#).
  - a. If your administrator has provided you with a User ID and Password, tap **Log In with Username** and continue to the [User ID and Password User Login on page 31](#) section.  
The **End User License Agreement (EULA)** page is displayed.
5. To activate the PTT service on your phone, read and accept the EULA.
6. If you agree to the EULA, tap **Accept** to activate the PTT service on the phone.

## 2.4.2

# Activating on an Android Phone Using Only Wi-Fi Network

In situations where the cellular network is not available, you can activate the application over a Wi-Fi network in Airplane Mode. Your PTT service provider may allow this functionality.



**NOTE:** To activate over Wi-Fi, you must have an activation code provided by your administrator.

### Procedure:

1. To launch the PTT application, tap the **Push-to-Talk** icon under **Apps**.



#### **NOTE:**

If prompted, make PTT the default app for your programmable key.

When prompted, you must **ALLOW** the application to send and view SMS messages, to record audio, take pictures, record video, access the location of the device, make and manage phone calls, access photos, media, access files on your device, and access your contacts.

When prompted, you must always **ALLOW** the application to run in the background. This action may reduce battery life.

2. You may see a dialog about the unavailability of the data network with an option to use an available Wi-Fi network. Select **Use Wi-Fi** option and tap **OK**. Enable the **Use Wi-Fi** setting and choose an available WiFi network.

An activation confirmation appears.

3. Perform one of the following actions:

- To continue the activation process, tap **Yes**.
- To cancel the activation process, tap **No**.

The **No Cellular Connection** dialog is displayed.

4. Perform one of the following actions:

- To continue with the activation process, tap **Enter Code**.
- To exit the activation process, tap **Exit**.

5. Enter the activation code received from your administrator.

6. Tap **OK** to activate or tap **Log In with Username**. A **Log In** screen displays.

7. If activation fails, select **Exit**, which closes the application, and start over at [Step 1](#).

- a. If your administrator has provided you with a User ID and Password, tap **Log In with Username** and continue to the [User ID and Password User Login on page 31](#) section.

8. The **End User License Agreement** page is displayed.

You must read and accept the EULA to activate the PTT service on your phone.

9. To activate the PTT service on the phone if you agree to the EULA, tap **Accept**.

## 2.5

## User ID and Password User Login

There are steps that you must take to log in to the PTT application when the PTT service is using device ID management or your network service provider is not the same as your PTT service provider.

Device ID Management increases security by requiring users to enter a user ID and password and supports the ability for multiple PTT users to share a device with another PTT user, for example, between shift workers. For more information on password requirements, see [Setting Your Password on page 32](#).



**NOTE:** Your password may expire based on your service provider configuration.

If your network service provider is not the same as your PTT service provider, you must select **Yes** when prompted. Failure to correctly answer this question may result in your PTT service not working correctly.



**NOTE:** The Device ID Management supports release 9.1 PTT applications and later. It is required for cross-carrier users and tablet users.



Other than shift users, you can also use Device ID Management to log in to multiple devices a user may possess, for example, a tablet and phone owned by the same user. However, the PTT user can have only one active session at any point in time. Once logged in to one device, a session from another previously logged-in device is deactivated.

The user ID is an email ID or a PTT number.

## 2.5.1

### Logging In the First Time

#### Procedure:

1. Tap the **Username or email** field.
2. Using your on-screen keyboard, type the **PTT number or email**.
  -  **TIP:** Tap the **Refresh** icon (circular arrow icon) located at the upper right to clear all values entered.
3. Tap the **Password** field.
4. Enter your temporary password using your on-screen keyboard.
  -  **NOTE:** If you forgot your password, tap the **Forgot Password?** link and go to [Forgetting Your Password on page 33](#).
5. Optional: On private devices, if you do not want to enter a user ID and password every time, tap the **Remember User** checkbox.
6. To log in to the PTT application, tap the **Log In** button. The **Update Password** screen is displayed.
7. Optional: If the application has been idle on the **Log In** screen for a while, you may see a timeout error. Enter your user ID and password again.

This security feature is intended to prevent unauthorized access.



**NOTE:** Shared device session expires after 24 hours or time configured by your service provider from the first time you log in. You need to log in again each time the shared device session expires.

### 2.5.2

## Setting Your Password

During the first-time login, you are prompted to enter your password. You must re-enter it each time you log in.

**Prerequisites:** Ensure that your password meets the following requirements:

- At least 10 characters
- At least one lowercase letter (a-z)
- At least one uppercase letter (A-Z)
- At least one number (0-9)
- At least one of these special characters: @#\$%^&+=



**TIP:** Tap the **Refresh** icon (circular arrow icon) located at the upper right to clear all values entered.

You must set your password the first time you log in. Follow this procedure to set your password to activate your account.

**Procedure:**

1. Tap the **New Password** field.
2. Type your password using your on-screen keyboard.
3. Tap the **Confirm Password** field and type your password using your on-screen keyboard.
4. To update your password, tap the **Submit** button.

### 2.5.3

## Remembering Your Password (Private Device)

When you set your username and password, you can choose to remember your username and password so that the next time you start the PTT application, it enables automatic login. This information is encrypted and stored on this device and automatically erased when another user logs in to this device.

**Procedure:**

1. Tap the **Username or email** field.
2. Using your on-screen keyboard, type your user ID or PTT number.
3. Tap the **Password** field.
4. Using your on-screen keyboard, type your password.
5. At the upper right corner, tap **Save**.

You are logged in to the PTT application.

### 2.5.4

## Subsequent Login

For each subsequent login, you need to enter your user ID and password. If the application has been idle on the **Log In** screen for a while, you may see a timeout error after entering your user ID and password. You must enter your user ID and password each time you log in.

After you log in, the server retrieves your contacts and talkgroups. It may take some time before your contacts and talkgroups are displayed. This behavior is normal.

If you have a user ID and password and have selected **Remember User** on the **Log In** screen, you do not need to enter your user ID and password again.

If you forget your password, see [Forgetting Your Password on page 33](#).

For more information on password requirements, see [Setting Your Password on page 32](#).

### 2.5.5

## Forgetting Your Password

Follow this procedure when you forget your password. A temporary password is automatically sent to your email address.



**NOTE:** You can get a temporary password from your administrator.

#### Procedure:

1. To return to the **Log In** screen, tap **Back to Login**.
2. Tap the **Username or email** field.
3. Using your on-screen keyboard, type your user ID or PTT number.
4. Tap **Submit**.

**Result:** An email is sent to you with a temporary password.

For more information about how to set a new password, see [Logging In the First Time on page 31](#).

### 2.5.6

## Switch User for Users with User ID and Password

If the PTT application is marked for `Private` use, there is an option to switch user where the currently logged-in user is logged out and another end-user can log in to the same device.

Once you have selected the **Switch User** option, you are prompted for your user ID and password each time you log out. The new user can choose **Remember User** mode again after successful login by selecting **Confirm Remember User**.



**NOTE:** The **Switch User** functionality may not be available in certain cases, such as on a call, emergency call, or a device deactivation by an authorized user.

#### 2.5.6.1

### Accessing the Switch User Option

#### Procedure:

1. From the **Menu**, tap the **Switch User** option.

A message appears similar to the following: You are about to log out and re-enable username and password login. History stored only on this device will be lost. Continue?

2. Perform one of the following actions:
  - To log out, tap **Yes**.
  - To cancel, tap **No**.

## 2.6

# Tutorial

The tutorial provides helpful information about how to get started with the PTT application.

The application automatically launches the mobile browser and loads the tutorial.

You can move between pages of the tutorial by swiping your finger right to left to move forward or left to right to move backward. You can also use the on-screen **Next** and **Previous** buttons shown on the edges of the screen.

## 2.7

# Login

To use the PTT service, you must connect to the PTT server. This process is called “login”. After you download and successfully register your connection with the server, the PTT application automatically starts and logs in each time you power on your phone. To make or receive PTT calls, you must log in.

It is possible for you to log out of the PTT service. While you are logged out, your presence status shows as *Offline* to others, and you cannot receive PTT calls or alerts. For more information, see [Logout on page 180](#).

### 2.7.1

## Manually Logging In to the PTT Application

### Procedure:

1. Under **Apps**, tap the **Push-to-Talk** icon.  
A pop-up dialog displays to confirm that you want to log in to the PTT application.
2. To log in to the PTT application, tap **Yes**.

## 2.8

# Application Updates

Google Play Store Settings:

When an update for the PTT application becomes available, and the application was downloaded from the Google Play Store, your Android phone notifies you that there is an update available. When installing an update, it is recommended that you enable the **Auto-update apps** setting so that you always have the latest updates to the PTT application.

## 2.9

# In Application Update Notification

The PTT application may indicate that there is an update available.

You need to update the application; otherwise, it may not function properly. For more information, see [Important Message on page 169](#).


After updating, your PTT contacts and talkgroups are always retained. When the PTT application is updated, your settings are generally retained. In some rare cases of a major update to the application, your settings reset to their default values.

## Chapter 3


# Navigating the Push-to-Talk Application

You can navigate to the Push-to-Talk (PTT) application by using the touchscreen on your phone.

The screen consists of five major tabs: **History**, **Favorites**, **Contacts**, **Groups**, and **Map**.

 **NOTE:** Portrait mode is supported for handset and tablet devices. Landscape mode is only supported for tablet devices.

**Figure 1: Main Screen**

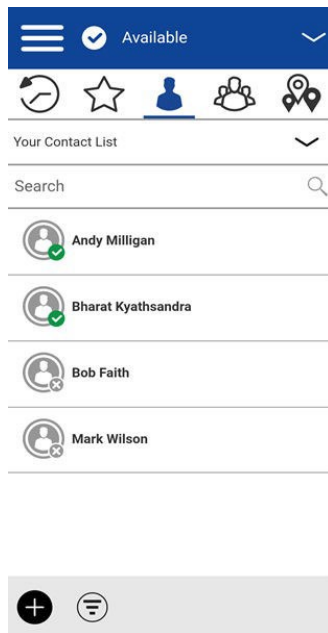

### 3.1


## History

The **History** screen displays all your conversation history of calls, contacts, talkgroups, alerts, and messages (text, image, video, and voice). You can view your history, return a call, view messages, add contacts, delete history and messages, and forward any message to a contact or talkgroup.

The **History** screen contains two-level screens: the **Main** and **Details** screens. The **Main** screen contains a high-level view. The second-level screen contains the conversation details including a time stamp. Messages from the previous day are shown with the date stamp `YESTERDAY`. The Date/Time (12-/24-hour display) format follows the device setting for internationalization.

Each top-level history entry displays the conversation type (such as `Broadcast Call`, `Group Call`, `Quick Group Call`, and `Private Call`); contact name, group name, or participant names for quick groups; `<message text preview>` (if a text message); and `Voice Message`, `File`, `Image`, `Location`, and `Video`. For more information on how to manage your History, see [History on page 95](#). Also, for information on the History icons, see [History Icons on page 52](#).

**Figure 2: History**

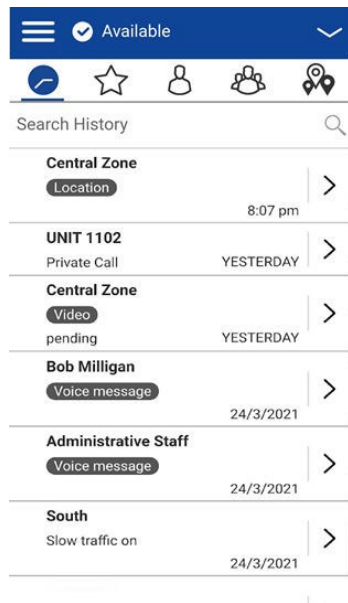

### 3.2

## Favorites


The **Favorites** screen displays your favorite PTT contacts and talkgroups.

You can quickly start a PTT call with your favorites.

For more information on how to view, add, and remove your favorite contacts, see [Favorites on page 99](#).

For information on the Favorites icons, see [Icons on page 46](#).

**Figure 3: Favorites**

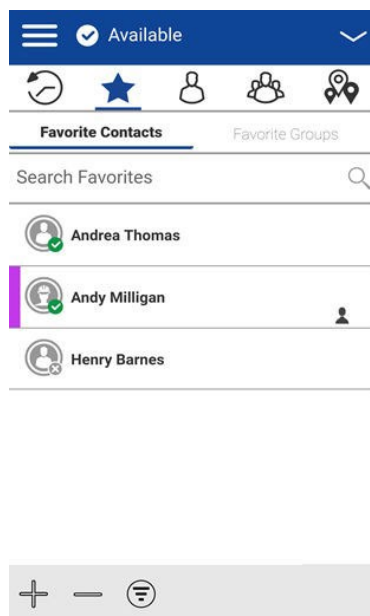

## 3.3

## Contacts

The **Contacts** tab displays your PTT contacts and allows you to search for contacts, select a contact, display the presence for each contact, start a quick group call, start a PTT call, or send an alert or message.


If enabled by an administrator, you can also add PTT contacts and create personal PTT talkgroups.

Icons may display to indicate if you have supervisory permissions for that user.

For more information on how to view, add, edit, and delete your personal contacts, see [Contacts on page 102](#).

For information on the contacts icons, see [Icons on page 46](#).

**Figure 4: Contacts**

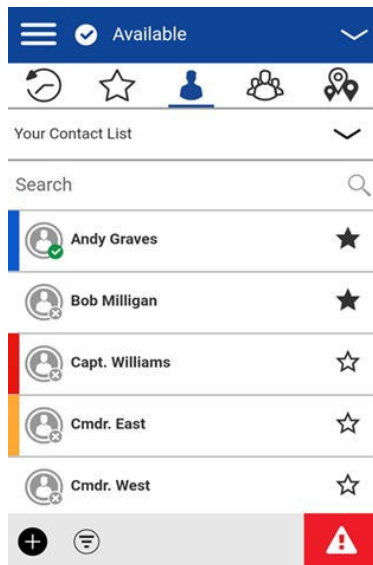


## 3.4

## Talkgroups

The **Talkgroups** tab displays your talkgroups and allows you to search for talkgroups or start a PTT talkgroup call. If enabled by an administrator, you can also create, change, or delete your personal PTT talkgroups here. Icons are shown next to the talkgroups in which you are a broadcaster or supervisor. Icons also indicate Interop talkgroups, location tracking, and talkgroup scan priority.

For more information on Talkgroup icons and how to view, add, edit, and delete your personal talkgroups, see [Talkgroups on page 110](#) and [Icons on page 46](#).

**Figure 5: Groups**

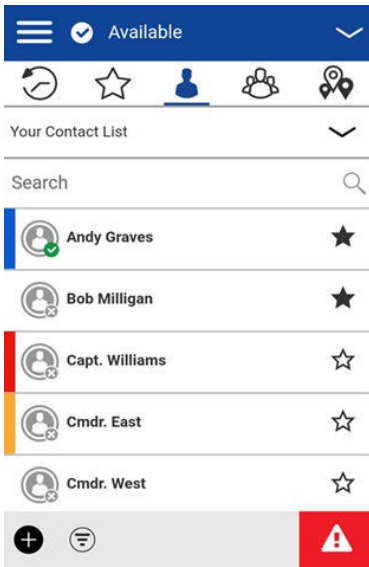

### 3.5


## Map

The **Map** screen displays your location and allows you to send your location to others. It also displays the location of your talkgroup members for which you are a supervisor and allows you to search for talkgroups or start a PTT talkgroup call.

For more information on how to search the map; recenter the map; send your location to a contact, quick group, or talkgroup; track talkgroup members; and set the boundary of the tracked group, see [Map on page 121](#).

For information on the map icons, see [Map Icons on page 54](#).

**Figure 6: Map**

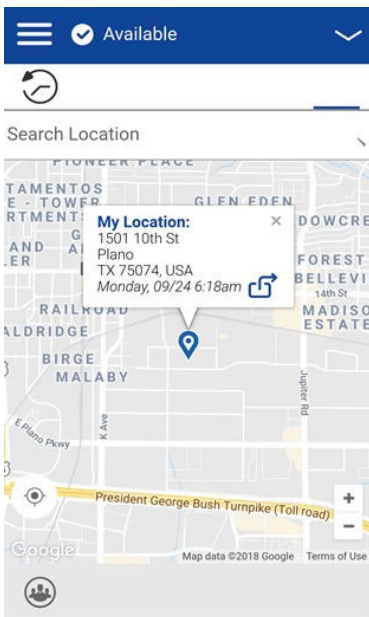

3.6

# Call Screen

The **Call** screen is the main screen for communication.

You make a call, make a quick group call, enable or disable the speaker, send a text message, send your location, send an alert, send a photo, and record and send a voice message.

For more information on how to make and receive calls, see [Making and Receiving PTT Calls on page 64](#).

For more information on how to send or receive streaming video, see [Video Streaming \(Optional\) on page 159](#).

For more information on how to send or receive Integrated Secure Messaging, see [Integrated Secure Messaging on page 137](#).

For information on the **Call** screen icons, see [Icons on page 46](#).

**Figure 7: Call Screen**



## 3.7

## Menu

On the **Main** screen, you can access the menu options by tapping the **Menu** icon at the upper left corner.

## 3.7.1

### Menu Options

The following table lists the Menu options and their descriptions.

**Table 1: Menu Options**

Name	Description
Presence Status	Displays your presence status. “Available”, “Do Not Disturb”, or “Offline”. The “Offline” icon also displays your “No Connection” presence status. For more details, see the <a href="#">Real-time Presence on page 93</a> section.
Active Fences	Tap to access the active geofences. Displays a list of active geofences. For more details, see the <a href="#">Area-based Warning Tones on page 87</a> section.
Talkgroup Scan (Available if enabled)	Tap the Talkgroup Scan toggle from <b>OFF</b> to <b>ON</b> . For more details, see the <a href="#">Talkgroup Scanning on page 118</a> section.
Manual Dial	Tap to manually dial a contact. For more details, see the <a href="#">Dialing a Manual Call to a PTT User on page 72</a> section.
Use Wi-Fi	Tap to toggle Use Wi-Fi from <b>ON</b> (default) to <b>OFF</b> .
Enhanced Loudness	Tap to increase the audio volume of PTT calls using the speaker- phone. This feature is only available on supported devices. For more details, see the <a href="#">Enhanced Loudness on page 178</a> section.
Settings	Tap to access the application settings. For more details, see the <a href="#">Settings on page 168</a> section.
Tutorial	Tap to access the application tutorial.
About	Tap to access more information on the application.

## 3.8

## Actions

The **Actions** soft buttons located at the top and the bottom of the screen let you call, alert, manually dial a phone number, add a new contact or talkgroup, and more.

For more information on **Actions**, see [Action Icons on page 46](#).

## 3.9

## Context Menus

Context or pop-up menus are available throughout the application based on the features provisioned for the user. To display these menus, you can touch and hold the selected history entry, favorite, contact, talkgroup, or talkgroup details.

**Table 2: Context Menus**

Location	Description	Condition	
Call screen/History Details Camera Option	Take Photo	No conditions	
	Record Video		
	Image Gallery		
	Video Gallery		
Contacts	Contact Details	All contacts	
	Delete Contact	User-managed contacts	
	Send Text	All contacts	
	My Location	All contacts	
	Send Instant Personal Alert	All contacts	
	Send Document	All contacts	
	Camera	Take Photo	All contacts
		Record Video	All contacts
		Image Gallery	All contacts
		Video Gallery	All contacts
		Record Voice	All contacts
		History	All contacts
		Details	All contacts
Contact Details	Delete Contact	User-managed contacts	
Favorite Contacts	Remove Favorite	All contacts	
	Send Text	All contacts	
	My Location	All contacts	
	Send Instant Personal Alert	All contacts	
	Send Document	All contacts	
	Camera	Take Photo	All contacts
		Record Video	All contacts
		Image Gallery	All contacts
		Video Gallery	All contacts

Location	Description	Condition	
	Record Voice	All contacts	
	History	All contacts	
	Details	All contacts	
Favorite Groups	Remove Favorite	All entries	
	Send Text	All groups	
	My Location	All groups	
	Send Instant Personal Alert	All groups	
	Send Document	All groups	
	Camera	Take Photo	All groups
		Record Video	All groups
		Image Gallery	All groups
		Video Gallery	All groups
	Record Voice	All groups	
	History	All groups	
	Details	All groups	
	Scan List	Set Priority 1	Administrator-managed group
		Set Priority 2	Administrator-managed group
Set Priority 3		Administrator-managed group	
No Priority		Administrator-managed group	
Remove		Administrator-managed group	
History	Add Contact	Manually dial call or receive a call from a PTT user not in your contact list	
	Clear All	All history entries	
	Delete History	All history entries	
History Details	Forward to Contact	All messages	
	Forward to Quick Group	All messages	
	Forward to Group	All group messages	
	Reply to Sender	All messages	
	Delete Message	All messages	
	Copy Message	All text messages	
Groups	Group Details	All entries	

Location	Description	Condition
	Delete Group	User-managed group
	Send Text	All groups
	My Location	All groups except broadcast
	Send Instant Personal Alert	All groups except broadcast
	Send Document	All groups except broadcast
Camera	Take Photo	All groups except broadcast
	Record Video	All groups except broadcast
	Image Gallery	All groups except broadcast
	Video Gallery	All groups except broadcast
	Record Voice	All groups except broadcast
Scan List	Set Priority 1	Administrator-managed group
	Set Priority 2	Administrator-managed group
	Set Priority 3	Administrator-managed group
	Normal Priority	Administrator-managed group
	Remove	Administrator-managed group
Group Details	Rename Member	User-managed group
	Remove Member	User-managed group
	Delete Contact	User-managed group
	Delete Group	User-managed group

### 3.10

## Emergency Key

Certain purpose-built devices and accessories allow you to declare an emergency by pressing and holding the **Emergency** key up to three seconds.

To cancel an emergency, you can press and hold the Emergency key up to three seconds to cancel by passing the on-screen **Cancel Emergency Reason** screen.

For more information, see the [Emergency Calling and Alert \(Optional\) on page 79](#).

### 3.11

## PTT Button

There are two PTT buttons available: the external PTT button and the on-screen soft PTT button.

#### 3.11.1

### External PTT Button

Depending on the phone, there may be a button on the side or a PTT accessory that can be used by the PTT application. While the PTT application is not visible, you can always press this button to bring the application to the foreground of the screen. With the PTT application in the foreground, you can use this button to start a PTT call or take and release the floor during a PTT call.

For information on the **Bluetooth Low Energy** button, see [Accessories and Bluetooth Use on page 166](#).



**NOTE:** This behavior assumes that Background Calling is disabled. For more information on Background Calling, see [Call Behavior in the Background on page 77](#).

#### 3.11.2

### On-screen Soft PTT Button

Whenever you initiate or are in a PTT call, you see an on-screen **PTT** button.

You can take the floor and speak during a call by touching and holding the on-screen button. You can release the floor and allow others to speak by releasing your finger from the on-screen button.

### 3.12

## Navigating to the Previous Screen

To navigate to the previous screen, you can tap the **Back** button located on the phone. Some screens within the application also have an on-screen button to return to the previous screen.

### 3.13

## One Touch Calling and Landing Page

When One Touch Action is set to call, PTT users can call a particular contact or talkgroup or most recent history entry when the **PTT** button is pressed once. Alternatively, a user can assign the PTT button to open the application to the preferred **Landing Page**, including **History**, **Contacts**, **Groups**, **Favorite Contacts**, **Favorite Groups**, and **Map**.



**NOTE:** One Touch Calling is available on supported devices. If your device does not support One Touch Calling, you can still set the **Landing Page**. The **Landing Page** option is not supported with Android 10 and later.

The **Landing Page** option has no effect when the phone is locked.

#### 3.13.1

### Using a Wired Accessory without One Touch Calling

If your device does not have a **PTT** hard button, the **One Touch Action** and **Call From Lock Screen** settings are hidden.

When a wired accessory is connected, the **One Touch Action** and **Call From Lock Screen** settings are available. The **One Touch Action** setting has the **Landing Page** and **None** options.

When your device is locked, on the **Lock** screen, and **Call from Lock Screen** is on, then:

**Procedure:**

1. A first press of the **PTT** button on the wired accessory shows the **Call** screen for the last call history, regardless of the **Landing Page** option.
2. A second press of the **PTT** button on the wired accessory originates a call.

**Result:** When your device is not locked, and the application is in the background, the wired accessory **PTT** button opens the application to the **Landing Page**.

### 3.13.2

## Using a Bluetooth Accessory without One Touch Calling

If your device does not have a **PTT** hard button, the **One Touch Action** and **Call from Lock Screen** settings are hidden.

When a Bluetooth accessory is connected, the **One Touch Action** and **Call From Lock Screen** settings are available. The **One Touch Action** setting has the **Landing Page** and **None** options.



**NOTE:** If the **One Touch Action** and **Call From Lock Screen** settings are hidden, you can pair, connect, and press the **PTT** button on the BT accessory.

When your device is locked, on the **Lock** screen, and **Call from Lock Screen** is on, then:

**Procedure:**

A single press of the **PTT** button on the Bluetooth accessory originates a call for the last call history entry and brings the **Call** screen to foreground, regardless of the **One Touch Action** settings option.

**Result:** When your device is not locked, and the application is in the background, the Bluetooth accessory **PTT** button opens the application to the **Landing Page**.

For devices that support One Touch Calling, see [One Touch Calling Behavior on page 70](#).

For more information on how to set up or change your **Landing Page**, see [One Touch Action on page 184](#).

### 3.14

## Scrolling

If you are viewing a list that has more entries than can be displayed on one screen, you can touch the list and drag your finger up or down to view the rest of the list.

### 3.15

## Searching

Searching allows you to quickly find history, favorites, contacts, talkgroups, or locations, including addresses, points of interest, and cross streets. The search results are displayed in a list for you to scroll and choose the desired result quickly.

**Procedure:**

1. Touch within the search bar to bring up the on-screen keyboard.  
As you type, contacts or talkgroups names containing the letters or numbers entered displays automatically.
2. Tap the searched result to open it.



**NOTE:** You must be on the respective **History**, **Favorites**, **Contacts**, **Talkgroups**, or **Map** screen to search. The search function does not search outside the selected screen.

## 3.16

## Icons

The icons available throughout the application are based on the features provisioned for the user. Refer to the following sections on different types of icons:






- [Actions Icons on page 46](#)
- [Avatar Icons on page 47](#)
- [Call Screen Icons on page 50](#)
- [Contacts Icons on page 51](#)
- [Emergency Icons on page 52](#)
- [History Icons on page 52](#)
- [Integrated Secure Messaging Icons on page 53](#)
- [Talkgroup Icons on page 54](#)
- [Map Icons on page 54](#)
- [Miscellaneous Icons on page 56](#)
- [Presence Icons on page 56](#)
- [Tab Icons on page 57](#)
- [Title Bar Icons on page 58](#)
- [Video Streaming Icons on page 58](#)











## 3.16.1

### Action Icons

The **Action** icon buttons are located at the top and the bottom of the screen.

**Table 3: Action Icons**

Icon	Title	Description
	<b>Add</b>	Displayed on the <b>Contacts</b> , <b>Favorites</b> , <b>Groups</b> , and <b>Quick Text</b> . You can add contacts, favorites, groups, or a quick text by tapping this button.
	<b>Alert</b>	You can send an Instant Personal Alert (IPA) to a contact by tapping this button.
	<b>Attach File</b>	You can attach a file to send as an attachment by tapping this button. Requires the Integrated Secure Messaging feature to be enabled by your administrator.
	<b>Camera</b>	You can choose from taking a photo, video, or selecting a file in the gallery by tapping this button. Requires the Integrated Secure Messaging feature to be enabled by your administrator.
	<b>Cancel</b>	You can cancel the current action and go back to the previous screen by tapping this button.


Icon	Title	Description
	<b>Delete</b>	You can delete the contact, group, and more by tapping this button.
	<b>Details</b>	You can access the contact details by tapping this button.
	<b>Filter ON</b>	You can toggle filter <b>ON</b> to <b>OFF</b> (default) by tapping this button.
	<b>Filter OFF</b>	You can toggle filter <b>OFF</b> (default) to <b>ON</b> by tapping this button.
	<b>Gallery</b>	You can save to your device by tapping this button. Requires the Integrated Secure Messaging feature to be enabled by your administrator.
	<b>Location</b>	You can share your location by tapping this button. Requires the Integrated Secure Messaging feature to be enabled by your administrator.
	<b>Send Message</b>	You can send a text message by tapping this button. Requires the Integrated Secure Messaging feature to be enabled by your administrator.
	<b>Forward</b>	You can forward an image or video by tapping this button. Requires the Integrated Secure Messaging feature to be enabled by your administrator.
	<b>Save</b>	You can save current contact or group by tapping this button.
	<b>Voice Message</b>	You can send a recorded voice message by tapping this button. Requires the Integrated Secure Messaging feature to be enabled by your administrator.


## 3.16.2

## Avatar Icons













You can use the Avatar icons to understand when avatars are assigned.














**Table 4: Unassigned Avatar Icons**

Icon	Title	Description
	<b>Contact</b>	The default contact icon that is used on the <b>Contact List</b> screen when there is no avatar assigned.

Icon	Title	Description
	Group	The default group icon used on the <b>Group List</b> screen when there is no avatar assigned.


**Table 5: Assigned Avatar Icons**

Icons	Name
	Airplane
	Book
	Car
	Construction
	Delivery
	Desktop PC
	Dispatcher
	Driver
	Envelope
	Field Service
	Flower
	Front Desk










Icons	Name
	Housekeeping
	Laptop
	Medical
	Notepad
	PTT Phone
	Room Service
	Security
	Supervisor
	Telephone
	Tree
	Truck
	Warehouse
	Worker






## 3.16.3

## Call Screen Icons

 **NOTE:** For more information on Integrated Secure Messaging icons, see the [Integrated Secure Messaging Icons on page 53](#) section.

**Table 6: Call Screen Icons**




Icon	Title	Description
	<b>Cancel Call</b>	You can cancel a private call by tapping this button.
	<b>End Call</b>	You can end the current PTT call by tapping this button.
	<b>Call Accept</b>	You can accept a call by tapping this button.
	<b>Call Contact</b>	You can call a contact by tapping this button.
	<b>Call Favorites</b>	You can open your favorites to make a call by tapping this button.
	<b>Access Channels/Zones</b>	You can open the folder channels and zones by tapping this button.
	<b>Group Location</b>	You can access the map for the group by tapping this button. Requires the Geofencing and Geolocation feature to be enabled by your administrator.
	<b>In-Call Add Participant</b>	You can add participants to make a temporary group before making a PTT call by tapping this button.
	<b>Contact/Group Details</b>	You can access the details information of the group or contact by tapping this button.
	<b>Instant Personal Alert</b>	You can send an IPA to the contact by tapping this button.
	<b>Listen-only</b>	Listen-only call indicator.
	<b>Idle</b>	<b>PTT</b> button Indicates an idle state and the floor is available.

Icon	Title	Description
	Floor Taken	<b>PTT</b> button Indicates the floor-taken state.
	Acquired	<b>PTT</b> button Indicates the acquired state and you are ready to speak.
	Speaker ON	You can toggle the Speaker from the <b>ON</b> default to <b>OFF</b> by tapping this button. When the speaker is off, PTT calls are heard through the earpiece of the phone. For more information, see <a href="#">Turning the Speaker On/Off and Setting the PTT Call Volume on page 75</a> .
	Speaker OFF	You can toggle from <b>OFF</b> to <b>ON</b> by tapping this button. When the speaker is off, PTT calls are heard through the earpiece of the phone. For more information, see <a href="#">Turning the Speaker On/Off and Setting the PTT Call Volume on page 75</a> .
	Call Volume	You can tap the button to access the <b>Volume Control</b> pop-up. For more information, see <a href="#">Turning the Speaker On/Off and Setting the PTT Call Volume on page 75</a> .

## 3.16.4

## Contacts Icons

Table 7: Contacts Icons





Icon	Title	Description
	Cellular Call	Located in the contact details. You can make a cellular call by tapping this button.
	iDEN Radio	iDEN radio user indicator.
	Interop	Interop user indicator.

For additional contacts icons, see [Presence Icons on page 56](#).

## 3.16.5

## Emergency Icons




Table 8: Emergency Icons

Icon	Title	Description
	<b>Emergency</b>	You can initiate an emergency by touching and holding this button, which is located at the bottom of most screens. Requires the Emergency Services to be enabled by your administrator. For more information, see <a href="#">Emergency Calling and Alert (Optional) on page 79</a> .
	<b>Cancel Emergency State</b>	Displays when you cancel an emergency. You can cancel the emergency by swiping the slider to the right. Requires the Emergency Services to be enabled by your administrator.
	<b>Declare Emergency State</b>	Displays when you declare an emergency. You can declare an emergency by swiping the slider to the right. Requires the Emergency Services to be enabled by your administrator.
	<b>Emergency Talker</b>	Indicates when a talker is in an emergency.

## 3.16.6

## History Icons













Table 9: History Icons

Icon	Title	Description
	<b>History Details</b>	You can access history details for contact, quick group call, or group by tapping this button.
	<b>Unread</b>	Indicates that there is an unread message. You can read the message by tapping this button. The unread message indicator disappears when you tap the <b>History Details</b> button to reply to the message. Requires the Integrated Secure Messaging feature to be enabled by your administrator.
	<b>Voice Message</b>	Indicates the attachment is a voice message. You can play the message by tapping this button. Requires the Integrated Secure Messaging feature to be enabled by your administrator.

## 3.16.7

## Integrated Secure Messaging Icons










Table 10: Integrated Secure Messaging Icons

Icon	Title	Description
	<b>Camera</b>	You can tap to choose from taking a photo, shooting a video, or selecting from the gallery.
	<b>File Message</b>	You can tap to choose a file from your device to send to a contact. For more information on file messaging, see <a href="#">File Messaging on page 151</a> .
	<b>Instant Personal Alert</b>	You can tap to send an IPA to the contact.
	<b>Message</b>	You can tap to send a text message to the contact or group.
	<b>Play</b>	You can tap to start playback of a voice message.
	<b>Quick text access</b>	You can tap to access a quick text list.
	<b>Voice Message</b>	You can tap to record a voice message.
	<b>Record</b>	You can press and hold to start recording a voice message.
	<b>Send text message</b>	You can tap to send a text message.
	<b>Share Location</b>	You can tap to share a location to the contact or group.
	<b>Stop</b>	You can tap to stop playback of the voice message.
	<b>Recording Voice</b>	You can release to stop recording a voice message.

3.16.8

## Talkgroup Icons


Table 11: Talkgroup Icons















Icon	Title	Description
	<b>Broadcast Talkgroup</b>	Broadcast Talkgroup indicator.
	<b>Boundary Active</b>	Indicates that location sharing for talkgroup members is enabled, and the boundary is active. Requires Supervisor Location Capabilities to be enabled by your administrator.
	<b>Location Sharing Group</b>	Indicates that group member locations can be viewed and no boundary is active for the group. Requires Supervisor Location Capabilities to be enabled by your administrator.
	<b>Interop Talkgroup</b>	Interop talkgroup indicator.
	<b>Scan List No Priority</b>	Scan List No Priority indicator.
	<b>Scan List Priority 1</b>	Scan List Priority 1 indicator.
	<b>Scan List Priority 2</b>	Scan List Priority 2 indicator.
	<b>Scan List Priority 3</b>	Scan List Priority 3 indicator.
	<b>Group Supervisor</b>	Supervisor group indicator.

3.16.9

## Map Icons

Table 12: Map Icons









Icon	Title	Description
	<b>Call</b>	You can tap to initiate a PTT call with the talkgroup member.

Icon	Title	Description
	<b>Talkgroup Member Location</b>	Indicates the location of a talkgroup member whose presence is unknown.
	<b>Map Recenter</b>	You can tap to recenter the map to where you are. Also, you can tap on the <b>Set Boundary Settings</b> to recenter the map to the active boundary.
	<b>Map Boundary Enable</b>	You can tap to enable the boundary and open.
	<b>Offline Talkgroup Location</b>	A map pin that indicates the location of a talkgroup member whose presence is offline.
	<b>Available Talkgroup Location</b>	A map pin that indicates the location of a talkgroup member whose presence is available.
	<b>Center Location</b>	A map pin that indicates an arbitrary location or the intended center location of a boundary.
	<b>DND Talkgroup Location</b>	A map pin that indicates the location of a talkgroup member whose presence is DND.
	<b>Quick Group Location</b>	A map pin that indicates the location of selected members of a quick group.
	<b>My Location Mark</b>	The <b>My Location Mark</b> pin that indicates your location on the map.
	<b>Share</b>	You can tap to share the location.
	<b>Boundary Settings</b>	You can tap to access the boundary settings. For more information, see <a href="#">Boundary Settings on page 131</a> .
	<b>Tracked Group Selector</b>	You can tap to choose a talkgroup to view the location or enable or disable the boundary alerts.
	<b>Map Boundary Enable</b>	You can tap to enable the boundary and open.
	<b>Quick Group Selector</b>	You can tap to create a quick group.

## 3.16.10

## Miscellaneous Icons



Table 13: Miscellaneous Icons






Icon	Description
	Checkbox <b>Off</b> .
	Checkbox <b>ON</b> .
	<b>Favorite</b> button (unselected) You can tap to toggle favorite <b>ON</b> . Indicates the contact or group is not a favorite.
	<b>Favorite</b> button (selected) You can tap to toggle favorite <b>OFF</b> . Indicates the contact or group is a favorite.
	<b>Radio</b> button off icon You can tap to toggle to the enabled state.
	<b>Radio</b> button on icon You can tap to toggle to the disabled state.
	<b>Clear Search text</b> button You can tap to cancel the current inputted text and search action.
	<b>Search</b> icon For more information, see <a href="#">Searching on page 45</a> .

## 3.16.11

## Presence Icons

Table 14: Presence Icons

Icon	Title	Description
	<b>Available</b>	A PTT contact's presence status is <code>Available</code> or my presence status.
	<b>Do Not Disturb</b>	A PTT contact's presence status is <code>Do Not Disturb</code> or my presence status.







Icon	Title	Description
	<b>Offline</b>	A PTT contact's presence status is <code>Offline</code> or my presence status when the phone is not connected to the server.
	<b>Available (Notification Bar)</b>	Your presence status is <code>Available</code> (notification bar).
	<b>Do Not Disturb (Notification Bar)</b>	Your presence is <code>Do Not Disturb</code> (notification bar).
	<b>Offline (Notification Bar)</b>	Your presence status if <code>Offline</code> (notification bar).
	<b>Alerts (Notification Bar)</b>	You have alerts waiting to be displayed within the application (notification bar).

## 3.16.12

## Tab Icons

The following table lists the tab icons and their descriptions.







Table 15: Tab Icons

Icon	Description
	<b>Contact</b> tab.
	<b>Favorite</b> tab.
	<b>Group</b> tab with Talkgroup Scan on.
	<b>Group</b> tab with Talkgroup Scan off.
	<b>History</b> tab.
	<b>Map</b> tab. Requires Geolocation to be enabled by your administrator.

## 3.16.13

## Title Bar Icons





Table 16: Title Bar Icons




Icon	Title	Description
	Back	You can tap to go back to the previous screen.
	Cancel	You can tap to cancel the operation and return to the previous screen.
	Details	You can tap to view the details.
	Edit	You can tap to edit.
	Drop-down	You can tap to change self-presence.
	Save	You can tap to save the current operation.

## 3.16.14

## Video Streaming Icons

Table 17: Video Streaming Icons

Icon	Title	Description
	Microphone ON	You can tap to toggle microphone from the <b>ON</b> to <b>OFF</b> state.
	Microphone OFF	You can tap to toggle microphone from the <b>OFF</b> to <b>ON</b> state.
	Speaker ON	You can tap to toggle speaker from the <b>ON</b> to <b>OFF</b> state.
	Speaker OFF	You can tap to toggle speaker from <b>OFF</b> to <b>ON</b> state.

Icon	Title	Description
	<b>Stop Video Streaming</b>	You can tap to stop video streaming transmission.
	<b>Start Video Streaming</b>	You can tap to start broadcasting video streaming, if previously stopped.
	<b>Switch Camera</b>	You can tap to toggle camera from rear (default) to front.

## 3.17

## Tones

The PTT application plays tones to indicate various conditions. The following table lists the tones and their descriptions.

**Table 18: Tones**

Name	Description
Activation Tone	Played upon successful activation.
Alert (IPA/MCA) Tone	Played by the handset when an incoming Instant Personal Alert is received or a missed call has occurred. Four tones are required as this tone is user-selectable.
Area Warning Tone - Blast Tone	Played to indicate when a user is notified to evacuate the mining site. The tone is played to escalate the priority of evacuation.
Area Warning Tone - Emergency Tone	Played to indicate when a user is notified to immediately evacuate the mining site for an impending blast.
Area Warning Tone - Evacuation Tone	Played to indicate when a user is notified to immediately evacuate the mining site for an impending blast.
Attention Tone	Played to indicate a pop-up dialog message.
Emergency Alert Tone	Played when an emergency alert is received.
Emergency Alert - Originator Tone	Played when an emergency alert is initiated.
Emergency Call Tone	Played upon receiving an emergency call.
Emergency Cancel Tone	Played when an emergency is canceled.
Emergency Fail Tone	Played if an emergency cannot be declared or if an emergency call cannot originate.
Error (Floor Busy) Tone	Played to indicate the user cannot take the floor.
Floor Acquired (Grant) Tone	Played after the user presses the PTT button to indicate it is ready for talking.
Floor Free Tone	Played to listeners on a PTT call to indicate the talker has released the floor.

Name	Description
Floor Released Tone	Played to the user after releasing the PTT button to indicate the floor is released. (Default is OFF)
Floor Revoke Tone	Played five seconds before the floor is revoked. The same tone is also played when the actual floor is revoked.
Floor Unavailable (Bong) Tone	Played when a user tries to get a floor that is already acquired or the called party is unavailable. An appropriate visual indication is displayed for both scenarios.
Incoming Call (Talk Hint) Tone	Played to listeners to announce the start of a PTT call (first volley only).
Incoming Phone Call Tone	Played when there is an incoming 2-way phone call. Tone is repeated every 3 seconds.
Incoming Private PTT Call (Manual Answer) Tone	Played when there is an incoming PTT private call. Tone is repeated every 3 seconds.
Incoming Video Tone	Played when there is an incoming video alert waiting for a user to accept. The alert is repeated every 5 seconds while it is waiting for user action.
Network Loss Tone Repeat	The Network Loss Tone Repeat setting determines whether the phone plays the network loss tone continuously at a periodic interval or once the user's PTT application detects network loss. When selected, a tone plays when the application transitions from one network to another.
Network Up/Network Down Tone	The Network Up tone is played when server connection is restored. The Network Down tone is played when server connection is lost (optional tone repeat). Previously known as the Call Suspend tone.
One-Touch Action Selection Change Tone	Played when switching One Touch Action from an accessory with a multifunction key button and multiple actions are supported.
Phone Call Progress Tone	Played to the caller while waiting for telephony call to answer. Tone is repeated every 3 seconds.
Success Tone	Played upon successful activation: valid key press.
Voice Message Recording Tone	Played when recording a voice message (voice message fall-back).

## Chapter 4

# Network Connectivity

This section describes the network connectivity associated with the Push-to-Talk (PTT) service.

## 4.1

### PTT over 4G LTE Networks

Using PTT over 4G LTE networks ensures the fastest speed, least delay, best voice quality, and best performance during PTT calls and when using PTT services.

Using PTT over cellular data networks less than 4G may be restricted based on a system-wide configuration. While the application is restricted, the behavior is the same as having no network connection and a `No Connection` message displays. You may be provided an audible and visual indication of loss of connection to the network based on the application settings. Upon detection of 4G, the application will reconnect to the PTT server and may give an audible indication based on the application settings. The tones are user-configurable in the application settings.



**NOTE:** Using PTT over cellular data networks less than 3G is not recommended because the slower data rates cause a considerable amount of delay, which can cause a degradation in voice quality or dropped calls.

## 4.2

### PTT over Wi-Fi

Using PTT over Wi-Fi can provide effective in-building coverage and leverage Wi-Fi access points within organizations and hotspots.



**NOTE:** By default, the PTT application will use Wi-Fi when it is available. To use Wi-Fi for PTT, you can enable the **Use Wi-Fi** setting in the application. For more information, see [Menu Options](#).

## 4.2.1

### Switching between Cellular Data Networks and Wi-Fi Networks during a Call

Your phone may automatically switch between the cellular data network and a Wi-Fi network depending on the availability of a Wi-Fi connection. The switching is known as a handover between networks.

If you are on a PTT call when your phone switches between the cellular data network and a Wi-Fi connection (or vice versa), your PTT call automatically reconnects after the handover. During a handover, the PTT application temporarily loses connection with the servers. When this occurs, you experience a slight loss of call audio. You are notified of this condition by two short tones. The tones are dependent on the Network Up/Down Tones setting and the Network Loss Tone Repeat setting. Once the handover is complete, and the PTT application reconnects to the data network, your call automatically continues. The handover may take more than a few seconds. In this case, a call in progress may not automatically reconnect. If this happens, you can call back from PTT history.

### 4.2.2

## Authenticated Wi-Fi Connections

The PTT application can be used at any Wi-Fi location provided your phone has access to the Internet through that Wi-Fi network.

In hotels or other places that provide Wi-Fi access only to patrons, some authentication, such as a password, may be required to access the Internet, even though the phone is connected to the Wi-Fi network. In this case, PTT service is unavailable and you cannot place or receive PTT calls until you disable Wi-Fi or launch your mobile browser and enter the password provided by the Wi-Fi service provider.

## Chapter 5

# User Information Display

User Information Display provides an avatar, display name, availability status, Push-to-Talk (PTT) number, and a profile name if enabled.

## 5.1

### Viewing User Information

**Procedure:**

1. At the upper left corner of the display, select the **Main** menu located. The **Menu** options display.
2. Opposite the available status, select the **Information** icon. The **User Information** displays.

## Chapter 6

# Making and Receiving PTT Calls

This chapter describes how to make and receive Push-to-Talk (PTT) calls.

## 6.1

### Making Calls

This section describes the steps to make PTT calls.


#### 6.1.1

### Making One-to-One (1:1) Calls with Automatic Call Answer



**NOTE:** If One Touch Calling is preconfigured to call the most recent history event, a user-selected PTT contact, or a user-selected PTT talkgroup (corporate or public), you must select (not highlight) the history event, contact, or talkgroup to make the call. See [One Touch Calling Behavior on page 70](#) for more information.

#### Procedure:

1. From the **Contacts**, tap the contact to select the one you want to start a PTT call with.  
The **Call** screen is displayed including the name of the contact that you are calling in the **Call Status**.
2. Press and hold the PTT button.  
A private one-to-one PTT call starts, a chirp tone is heard, and the **PTT** button changes color indicating you have taken the floor.
3. Begin speaking.  
 **NOTE:** Some corporations may automatically assign a talkgroup called `all_subscribers_group`. This talkgroup has all the PTT subscribers from your corporation.
4. To allow the other person on the call to take the floor and speak, release the PTT button.
5. To end the call, tap the **End Call** button.

#### 6.1.2

### Making One-to-One (1:1) Calls with Manual Call Answer



**NOTE:** If One Touch Calling is preconfigured to call the most recent history event, a user-selected PTT contact, or a user-selected PTT talkgroup (corporate or public), you must select (not highlight) the history event, contact, or talkgroup to make the call. See [One Touch Calling Behavior on page 70](#) for more information.

#### Procedure:

1. From the **Contacts**, tap the contact to select the one you want to start a PTT call with.  
The **Call Screen** displays including the name of the contact that you are calling in the **Call Status**.

2. Press and hold the PTT button.

The **Call Screen** changes to a ringing state. A progress tone is heard, and the **PTT** button changes color indicating the other user is being alerted. Once the call is accepted, the other user will talk or you can press and hold the PTT button to talk.

3. Talk when you hear the chirp tone and see the **PTT** button change color indicating you have taken the floor.

If the call is rejected, the floor returns to the idle state.



**NOTE:** Some corporations may automatically assign a talkgroup called `all_subscribers_group`. This talkgroup has all the PTT subscribers from your corporation.

4. To end the call, tap the **End Call** button.

### 6.1.3

## Calling a Contact That Is Offline or Has a Do Not Disturb (DND) Status

If the person you are trying to call has a presence status of `Offline`, you see the following error message: The contact you are trying to call is unavailable. Please try again later.

Similarly, if the person you are trying to call has a presence status of `Do Not Disturb`, you see the following message: The Contact you are trying to call is in “Do Not Disturb” status. Please try again later.

### 6.1.4

## Making Talkgroup Calls



**NOTE:** Some corporations may automatically assign a talkgroup called `all_subscribers_group`. This talkgroup has all the PTT subscribers from your corporation.




**NOTE:** If One Touch Calling is preconfigured to call the most recent history event, a user-selected PTT contact, or a user-selected PTT talkgroup (corporate or public), you must select (not highlight) the history event, contact, or talkgroup to make the call. For more information, see [One Touch Calling Behavior on page 70](#).

### Procedure:

1. From the **Talkgroups**, tap the talkgroup to select the one you want to start a PTT call with. The **Call** screen displays the name of the talkgroup that you are calling in the **Call Status**.

**Figure 8: Placing a PTT Talkgroup Call**

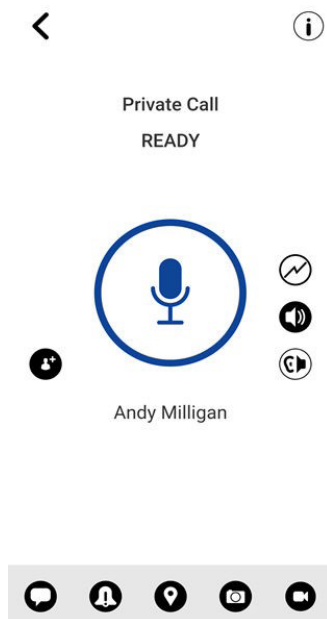

2. Press and hold the **PTT** button displayed on the screen.  
A talkgroup PTT call starts, a chirp tone is heard, and the **PTT** button changes color indicating you have taken the floor.
3. Begin speaking.
4. To take the floor and speak, release the **PTT** button to allow other members of the call.
5. To end the call, tap the **End Call** button.

### 6.1.5

## Making Quick Group Calls

You can make a quick group call after selecting your first contact to call by selecting the **Add Participants** button from the **Call** screen and selecting additional contacts to add to your quick group.

### Procedure:

1. From the **Contacts**, select your first contact to call.  
The **Call** screen displays.


**Figure 9: Call Screen**

2. Tap the **Add Participants** button.
3. Select up to nine contacts to add to the quick group call.
4. When completed, at the upper right, tap the **Save** button.
5. Press and hold the **PTT** button.  
A quick group call starts, a chirp tone is heard, and the **PTT** button changes color indicating you have taken the floor.
6. Begin speaking.
7. To take the floor and speak, release the **PTT** button to allow other members of the call.
8. To end the call, tap the **End Call** button.

### 6.1.6

## Making Broadcast Calls


Broadcast calls make it possible to deliver important information quickly to a large talkgroup. Only designated talkgroup members, called broadcasters, may initiate a one-way high-priority call to a talkgroup with up to 500 members (based on configuration). A broadcast talkgroup call pre-empts any ongoing PTT call and receiving talkgroup members cannot call back or reject the call. Once a broadcaster takes the floor, the broadcaster is not pre-empted by another broadcaster. You only see a broadcast talkgroup if you are a designated broadcaster by your administrator.

 **NOTE:** Broadcast talkgroup calls interrupt ongoing PTT calls for the talkgroup members and they hear the call even if they have Do Not Disturb (DND) enabled. These calls also override the DND status if your administrator has set the talkgroup to do so.

#### Procedure:

1. Tap the broadcast talkgroup you want to call.


The broadcast talkgroup is identified in the talkgroup list by the broadcast talkgroup icon.

 **NOTE:** If the Broadcast Call Confirmation setting is on, you receive the following confirmation dialog. For more information, see [Broadcast Call Confirmation on page 175](#).

A confirmation dialog is displayed with the following message: You are about to start a broadcast call to x. Continue?

2. Perform one of the following actions:
  - To initiate the call, tap **Call**.  
The **PTT Broadcast Call** screen is displayed.

**Figure 10: PTT Broadcast Call Screen**

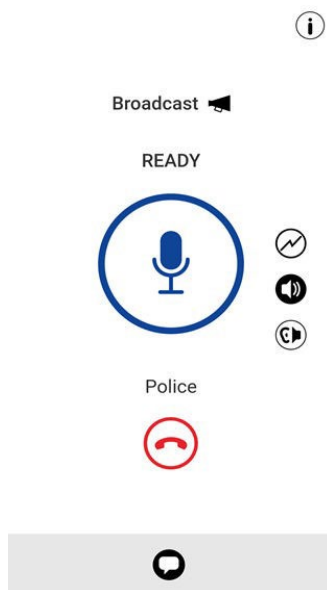

- To cancel, tap **Not now**.
3. Press and hold the **PTT** button.  
A broadcast call starts, a chirp tone is heard, and the **PTT** button changes color indicating you have taken the floor.
  4. Release the **PTT** button when you have finished speaking.
  5. Begin speaking.
  6. To end the call, tap the **End Call** button.

## 6.1.7

## Calling from Device Contacts

You can make a call from your device contacts.

## 6.1.7.1

### Placing a Call from Device Contacts



**NOTE:** You cannot place PTT calls when the PTT application is offline or logged out.

#### Procedure:

Navigate to the device contacts and perform one of the following actions:

- Select the PTT contact to call, and press the **PTT key**.
- Navigate to PTT and press the **PTT key** to call the contact.



**NOTE:** Pressing the PTT key may display multiple numbers. Select the PTT number and press the PTT key to call. To avoid multiple numbers, ensure to assign one phone number to a contact.

## 6.1.8


## Calling from History

You can make a call from **History**.

#### Procedure:

1. Tap on **History** to view the history of calls and IPAs.

**Figure 11: History**

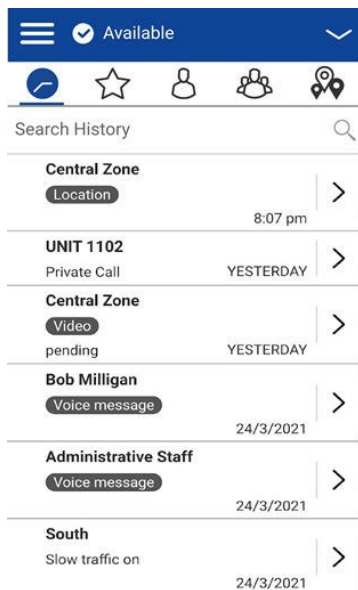

2. Touch on the conversation you want to call.



**NOTE:**

If One Touch Calling is preconfigured to call the most recent history event, a user-selected PTT contact, or a user-selected PTT talkgroup (corporate or public), you must select (not highlight) the history event, contact, or talkgroup to make the call. For more information, see [One Touch Calling Behavior on page 70](#).

The **Call** screen displays.

3. Press and hold the **PTT** button displayed on the screen.  
A PTT call starts, a chirp tone is heard, and the **PTT** button changes color indicating you have taken the floor.
4. Begin speaking.
5. To take the floor and speak, release the **PTT** button to allow other members of the call.
6. To end the call, tap the **End Call** button.

### 6.1.9

## Calling from Missed Call Alert

Missed Call Alert (MCA) messages initiate an alert tone followed by a pop-up message.

For more information, see [Missed Call Alert on page 182](#).

**Procedure:**

When receiving an MCA, perform one of the following actions:

- To place the call, tap the **Reply** button.
- To dismiss the message, tap the **Not now** button.

### 6.1.10

## Calling from Instant Personal Alert

You can make a call from an Instant Personal Alert (IPA). Upon receiving an IPA, you receive an alert tone and a pop-up message displays.

For more information, see [Instant Personal Alert on page 180](#).

**Procedure:**

Perform one of these actions:

- To place the call, tap the **Reply** button.
- To dismiss the message, tap the **Not now** button.


### 6.1.11

## One Touch Calling Behavior

You can originate a PTT call to one of the following:

- The most recent history event
- A user-selected PTT contact

- A user-selected PTT talkgroup (corporate or public)

 **NOTE:** One Touch Calling is available on supported devices. The

One Touch Calling behavior must be preconfigured for these actions.

For more information on how to set up One Touch Calling, see [One Touch Action on page 184](#).


### 6.1.12

## Call Behavior while the Screen Is Locked

You can originate a PTT call to the selected contact or talkgroup based on the One Touch Action setting when the device is locked by pressing a PTT button, wired accessory, or Bluetooth RSM.

You must enable the **Call From Lock Screen** setting. For more information on the **Call From Lock Screen** setting, see [Call From Lock Screen on page 175](#).

For more information on how to set up One Touch Action, see [One Touch Action on page 184](#).


 **NOTE:** The **Call From Lock Screen** setting is available on supported devices.

For devices without a PTT hard button using a wired accessory, see [One Touch Calling and Landing Page on page 44](#).

### 6.1.13

## Call Behavior when Contact or Talkgroup Is Unavailable


When calling a contact or talkgroup that is unavailable, the application automatically records and sends a voice message while pressing the PTT button. The message is sent as soon as you release the PTT button. There is no review, discard, or re-record.

 **NOTE:** Requires the Integrated Secure Messaging feature to be enabled by your administrator.

### One-to-One (1:1) Calls

A contact is unavailable when their presence status is *Offline* or *Do Not Disturb*, or if they are temporarily unreachable due to loss of signal.


A voice message must be three seconds or longer; otherwise, the message is not sent, and you receive an information message.

 **NOTE:** When calling a contact that is temporarily unreachable due to loss of signal, the voice message recording chirp can take up to seven seconds.

### Talkgroup Calls

When the talkgroup you are trying to call has all members unavailable, you can record and send a voice message to the entire talkgroup.

A voice message must be three seconds or longer; otherwise, the message is not sent and you receive an information message.

 **NOTE:** When all members are not available, the voice message recording chirp can take up to seven seconds if one or more members are temporarily unreachable due to loss of signal.

### 6.1.14

## Dialing a Manual Call to a PTT User

The **Manual Dial** screen allows you to call a PTT contact manually.

#### Procedure:

1. From the **Menu**, tap the **Manual Dial** option.

The **Manual Dialing Screen** displays.

**Figure 12: Manual Dialing Screen**



2. By using the on-screen keyboard, enter the contact number including special characters (0-9, \*, #, a-d).



**NOTE:** If the number matches contacts, they display. If you want to call one of those contacts, touch the contact, and the number fills the numeric text field else continue initiating the call with the manually dialed PTT number.

3. At the right of the phone number, tap the on-screen **PTT** button. The **Call** screen displays.

## 6.2

## Receiving Calls

#### Procedure:

1. When you receive an incoming PTT call, the application is brought to the foreground, and the PTT button changes color.

Whenever the talker releases the floor, the **PTT** button changes and the PTT button changes color and the floor is available for another talker.

2. On the screen, to continue the conversation, touch and hold the PTT button.
3. To end the call, tap the **End Call** button.

### 6.2.1

## Receiving One-to-One (1:1) Calls

When you receive an incoming PTT call, the application is brought to the foreground, and the PTT button changes color.



**NOTE:** Incoming PTT calls respond differently based on the combination of phone settings and PTT application settings. For more information, see the [Interacting with Silent or Sound Mode on page 76](#) section.



**NOTE:** This behavior assumes that Background Calling is disabled. For more details on Background Calling, see the [Call Behavior in the Background on page 77](#) section.

Whenever the talker releases the floor, the PTT button changes and the PTT button changes color and the floor is available for another talker.

You can continue the conversation by touching and holding the **PTT** button on the screen.

You can end the call by tapping the **End Call** button.

### 6.2.2

## Receiving Broadcast Talkgroup Calls

An incoming broadcast talkgroup call looks like any other talkgroup call but pre-empts other PTT calls in progress except emergency calls.

You can recognize a broadcast talkgroup call because there is a distinct tone played followed by an announcement. During the call, only the broadcaster can speak, and you cannot take the floor. These calls also override your `Do Not Disturb` status if your administrator has set up the talkgroup to do so.

Only designated talkgroup members may make broadcast talkgroup calls. If you are not allowed to make calls to a talkgroup, you do not see it listed in the **Talkgroups** tab. If you try to call a broadcast talkgroup from history, you see a message indicating that the call cannot be completed.

### 6.2.3

## Broadcast Call History

Outgoing broadcast calls are shown in call history like other calls but with a different icon and call type indicated.

**Figure 13: Nonbroadcaster Call History**



A summary of call delivery status for the broadcaster is shown in the **Talkgroup** tab history detail for the selected talkgroup. The number of talkgroup members who received the call is shown along with the total number of talkgroup members.

**Figure 14: Broadcaster Call History**



Calls might not be delivered to everyone because a talkgroup member may be offline, engaged in a cellular call, have a `Do Not Disturb` status, or listening to another broadcast call. Calls are delivered in a way such that talkgroup members may receive the call at slightly different times. Once the call delivery process is complete, the delivery status shows.

## 6.3

## Turning the Speaker On/Off and Setting the PTT Call Volume

On the **Call** screen, there is a toggle that indicates whether the speaker is on or off for PTT calls. When the speaker is off, you can hear the PTT call audio in the earpiece of the phone. When it is on, the audio is heard through the speaker.

**Figure 15: Earpiece Is On**



**Figure 16: Speaker Is On**



During a PTT call, the speakerphone or earpiece volume can be increased or decreased using the volume up and down keys. The volume adjusted during a PTT call is used for subsequent calls, including cellular calls. The volume adjusted while not on a PTT call is used for the phone ringer volume.

**TIP:** The PTT call volume can be adjusted using the device volume keys or the external accessory volume keys if connected. The device-native volume bar does not display while the PTT app is in the foreground and if the user changes the call volume using the device volume up or down keys. If call volume is changed using the externally connected Bluetooth device, the device-native volume bar displays. The device volume keys can be set to use as a PTT key, when the PTT key setting is set to **Volume Up/Down**.

For more information on how to set the PTT key setting, see [PTT Key on page 185](#).


On the **Call** screen, you can press the Call Volume ON/OFF toggle switch, in which a **Volume Control** pop-up is displayed.

**Figure 17: Volume Control**



You can adjust the **Volume Control** slider to the desired position and tap **OK** when you are finished changing the volume.

**Figure 18: Call Screen - Speaker ON/OFF Button**

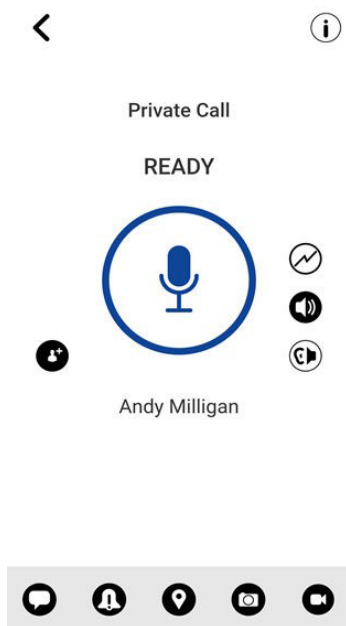

You can disable the speaker from the application settings. For more information, see [Call Screen Icons on page 50](#).

#### 6.4

## Interacting with Silent or Sound Mode

When the ringer of your phone is set to silent or vibrate-only, PTT calls are played over the earpiece of the phone. To hear a PTT call, you should hold the phone to your ear as during a cellular phone call.

You can temporarily switch to the loudspeaker using the on-screen speaker **ON/OFF** button for the current call. The next PTT call again uses the earpiece of the phone while the phone is in silent mode.

Privacy Mode allows you control how incoming PTT calls are handled whenever your phone ringer setting is set to `silent` or `vibrate-only`. With Privacy Mode, you can control whether an incoming PTT call is heard normally or if the PTT call uses the phone earpiece. For more information on how to set Privacy Mode, see [Settings on page 168](#).

You can set the phone to vibrate for incoming PTT calls if the incoming Call Vibrate setting is **ON**. For more information on how to set incoming Call Vibrate, see [Vibrate Call on page 187](#).

#### 6.5

## Interacting between PTT and Cellular Calls

### Answering a Regular Phone Call while on a PTT Call

If you receive an incoming regular phone call while you are in a PTT call, an incoming phone call is rejected if device restrictions apply, and the PTT call continues.

If you receive an incoming regular phone call while you are in a PTT group call, the user is presented with a dialog to accept or reject the call depending the device behavior (not controlled by the PTT application). If the user answers the cellular call, the PTT group call is put in the background. PTT voice is lost during ringing, which is normal device behavior for a cellular call while on a data session.

When the regular call ends, if the PTT group call is rejoined, it comes to the foreground. The PTT group call can also end silently in the background.

If the Call Priority setting is set to **Phone**, an ongoing PTT call ends if a cellular call is answered. For more information on Call Priority, see the [Settings on page 168](#) section.

### Receiving a PTT Call When on a Regular Phone Call

If you receive a PTT call while you are on a regular call, the ongoing cellular call continues, and an incoming PTT call is rejected with a User Busy indication. You receive an MCA along with an alert tone, and a pop-up message is displayed as an indication that a PTT call occurred during the cellular call.

If the Call Priority setting is set to **Phone**, an incoming PTT call is rejected. For more information on Call Priority, see [Settings on page 168](#).

After the current regular call ends, you can make a PTT callback to the caller from the MCA displayed in the PTT application.

## 6.6

# Call Behavior in the Background

### Incoming PTT Calls with Background Mode Disabled

While you are using other applications on the phone, an incoming PTT call brings the PTT application to the foreground, and you hear the voice of the caller. At the end of the PTT call, the application automatically returns to the background after the call. The PTT application goes to the background at the end of the call and displays the previously viewed application in the foreground.

### Incoming PTT Calls with Background Mode Enabled

When Background Mode is enabled, and you receive an incoming PTT call, the PTT application remains in the background; the display does not turn on if it is off, and you hear the voice of the caller. You can bring the PTT application to the foreground to use the on-screen PTT button. For more information on Background Mode, see [Settings on page 168](#).



**NOTE:** If your phone has a **PTT** button or supported Bluetooth PTT accessory, you can press the button to take the floor while the application is in the background.



**NOTE:** If the screen is locked, PTT calls are restricted by default. To enable PTT calls while the screen is locked, see the [Background Mode on page 174](#) section.

If the backlight is off, it remains off during an incoming PTT call. IPAs are not visible until you access the PTT application; however, you receive audible alerts, if enabled.

### Ongoing PTT Calls

During a PTT call, if you navigate away to another application, you can continue to hear the PTT call, but you cannot take the floor and speak until you return to the PTT application.



**TIP:** If your phone has a **PTT** button or supported Bluetooth PTT accessory, you can press the button to take the floor while the application is in the background.

## 6.7

# Call Behavior while the Screen Is Locked

You can originate a PTT call to the selected contact or talkgroup based on the One Touch Action setting when the device is locked by pressing a PTT button, wired accessory, or Bluetooth RSM.

You must enable the **Call From Lock Screen** setting. For more information on the **Call From Lock Screen** setting, see [Call From Lock Screen on page 175](#).

For more information on how to set up One Touch Action, see [One Touch Action on page 184](#).



**NOTE:** The **Call From Lock Screen** setting is available on supported devices.

For devices without a PTT hard button using a wired accessory, see [One Touch Calling and Landing Page on page 44](#).

## 6.8

# Rejoining a PTT Talkgroup Call

## Rejoining a Talkgroup Call

If you leave during a PTT talkgroup call, you can rejoin it by initiating a call to that talkgroup again from the call history or from the talkgroup list. If the call ended before you tried to rejoin, you can start a new call to that talkgroup. Any late join to a PTT talkgroup by selecting a talkgroup automatically rejoins if there is an active call on the talkgroup.

## Joining a Missed Talkgroup Call

If you miss a talkgroup call, you have the option on the MCA to call the talkgroup directly. If the talkgroup call is still in progress, you are automatically joined to the ongoing call. Otherwise, you can start a new call.

## Chapter 7

# Emergency Calling and Alert (Optional)

Optional features may not be included in your Push-to-Talk (PTT) service plan.

For more information on Emergency icons, see [Emergency Icons on page 52](#).

Emergency calling and alert allows you to declare an emergency to contact or talkgroup as configured by your System Administrator.

You can press and hold the **Emergency** button on the PTT application and swipe the slider to declare an emergency. The PTT application automatically queries the device OS for the last known location of the user and goes to the **Call** screen. You can press the PTT button to begin an emergency call. When you declare an emergency, an emergency alert is sent out to the other users in the emergency talkgroup or the contact configured by your administrator.

On the selected device or supported accessories, you can also declare an emergency by using the **Emergency** button.

To cancel an emergency, you can press and hold the **Emergency** button again and swipe the slider to confirm the cancellation. Your administrator may disallow your ability to cancel an emergency. In that case, an authorized user needs to cancel the emergency on your behalf.

An Authorized User can remotely declare and cancel an emergency call on behalf of the remote user.

Your administrator can configure call initiation to automatic or manual. When set to automatic, after emergency initiation, an emergency alert is sent, and the emergency call is started automatically. There is no need to press and hold the **PTT** button. The floor is taken for 10 seconds. During the 10-second automatic floor hold time, pressing and releasing the **PTT** button result in the following behavior: when you release the **PTT** button, the floor releases; if you press and continue to hold the **PTT** button after the 10 seconds expires, the floor will continue to be held. Your network operator may have configured this service to ignore the **PTT** button press and release during the automatic floor hold time. When set to manual, an emergency alert is sent. However, to initiate the emergency call, you must press and hold the **PTT** button.

Multiple users can declare an emergency in the same talkgroup. When a user declares an emergency in the same talkgroup, they pre-empt the PTT floor from another user in an emergency. Participating users in an emergency talkgroup call receive an alert from all users in an emergency and can view all members at any time except for late joiners.

Depending on how your network operator has configured the service, you may be able to use the emergency button for initiating and canceling the emergency toggle or send a repeated emergency alert after you have declared an emergency to get an automatic PTT floor. A repeated emergency alert by the same user is only sent to dispatchers. If your administrator has configured automatic call initiation, each time you declare an emergency, your microphone will unmute for 10 seconds without having to press and hold the PTT button.

For more information on who are your configured primary and secondary emergency contacts, see [Settings on page 168](#).

## 7.1

### Declaring an Emergency

An emergency can be declared from any screen where there is an **Emergency** button or by using an external emergency button on the device or accessory when supported. Any PTT key pressed during automatic configuration (default 10 seconds) is ignored. You must press and hold the PTT key to continue to talk after the automatic timer is expired.

Your administrator configures the emergency destination. The destination can be a preassigned talkgroup or an individual.

You can perform an emergency initiation while in a two-way call. When an emergency is declared, the two-way call ends immediately.

### 7.1.1

## Declaring an Emergency

Incoming alert tones, such as IPAs, OSMs, MCAs, and PTX are not played while you have declared an emergency.

### Procedure:

1. Touch and hold the **Emergency** button.



**NOTE:**

You can also declare an emergency by pressing and holding the **Emergency** key up to three seconds on certain purpose-built phones and accessories.

The **Declare emergency** slider displays.

2. To declare an emergency, swipe the slider to the right.

A message is shown and a special emergency alert tone is played to indicate that an emergency has been initiated. The **PTT Call** screen is displayed.



**NOTE:** If the emergency cannot be declared, the emergency fail tone is played, and a toast message is displayed.

3. After declaring an emergency, an emergency alert is sent.

You are now locked in to the emergency call until the emergency is canceled.

4. Press and hold the PTT button.

A chirp tone is heard, and the **PTT** button changes color indicating you have taken the floor.

5. Begin speaking.

6. To cancel an emergency, see [Emergency Cancellation on page 82](#).

### 7.2

## Authorized User Remotely Declaring an Emergency on Your Behalf

An authorized user, if configured by your administrator, can remotely declare an emergency on your behalf.

You see that an authorized user has declared an emergency, an emergency alert is received similar to the following: *Remote emergency declared by x.*

You are now locked in to the emergency call until the emergency is canceled.

For more information on authorized users, see the [Authorized User on page 82](#) section.

## 7.3

## Receiving an Emergency

When a user declares an emergency, other users receive an alert indicating that an emergency is declared. The alert is sent to all users who are part of the talkgroup where the emergency call occurs.

Your administrator configures the talkgroup or single PTT contact that receives emergency calls. An emergency alert notifies you that another user has declared an emergency state. Generally, an emergency call follows an emergency alert on the talkgroup indicated, unless the emergency is canceled. When the application is in the background, use the notification bar to access emergency alert and emergency cancellation alert.

An emergency alert, similar to the following, indicates which user is in emergency and the talkgroup they are using: `Emergency Declared by x from x talkgroup`.

If the emergency call goes only to a single user, no talkgroup is shown in the alert.

## 7.3.1

### Receiving an Emergency Call

You receive an emergency call unless scanning is enabled and the emergency occurs on a non-scan list talkgroup.

Your administrator may also configure your application to receive the call when an emergency call starts on another talkgroup.

The recipient can leave an emergency call, make a private call, or call on another talkgroup. Incoming emergency calls pre-empt other ongoing calls except an emergency call.

**Procedure:**

1. To remove the alert from appearing on the **Emergency Alert** screen, tap or touch **Dismiss**.

You can continue to use the application normally.

When the emergency originator starts a call or takes the floor during an ongoing call after declaring an emergency, you see an emergency call in progress screen: `There is a special emergency call tone played`.

2. During an emergency call, take the floor by pressing the PTT button.

You can leave the call by pressing the **End Call** button.



**NOTE:** If you leave the emergency call, you receive an emergency call from the same emergency if another call starts.

An incoming emergency call interrupts an ongoing PTT call except another ongoing emergency call.

## 7.3.2

### Receiving an Emergency Cancel Notification

If the application is in the background, select the notification to access the emergency cancel notification. Follow this procedure when you receive an emergency cancel notification.

**Procedure:**

To remove the alert from the screen, tap the **Dismiss** button. You can continue to use the application normally.

## 7.4

# Emergency Cancellation

To end the emergency, you as the emergency originator must cancel the emergency state. An authorized user, typically a supervisor or dispatcher, may cancel the emergency on your behalf. Your administrator may disable permission for you to cancel the emergency. In this case, an authorized user must cancel the emergency.

### 7.4.1

## Canceling Emergencies

### Procedure:

1. While in an emergency, touch and hold the **Emergency** button.  
The **Cancel Emergency** window displays.
2. To cancel the emergency, swipe the **Cancel** slider to the right.  
Before canceling the emergency, you are asked if the emergency was a real emergency or a false alarm.  
A dialog, similar to the following, displays: Please select reason for Emergency Cancellation.
3. Touch or tap the desired option for canceling the emergency as follows:
  - If the emergency was a real emergency, tap **Valid**.
  - If the emergency was a false, tap **False**.
4. Touch or tap **Send**.

**Result:** The emergency is canceled, a message indicating that the emergency is canceled is displayed, and an **Emergency Cancel** tone is played.

## 7.5

# Authorized User

An authorized user is typically a dispatcher or supervisor who may have permissions to perform the following:

- Allow or disallow remote supervision for assigned contacts.
- Remotely declare and cancel an emergency call on behalf of a remote user.
- Access user check for the remote user.
- Enable or disable the PTT service.
- Activate ambient listening for the remote user.
- Activate discreet listening for the remote user.

### 7.5.1

## Declaring an Emergency on Behalf of Another User

Your administrator may give you the ability to declare an emergency for another user remotely. The authorized user touches the Emergency start.




**NOTE:** If you can remotely start an emergency for one or more users, you are called an authorized user.

While a user is in an emergency, you can view information about the user such as location, battery level, and signal strength that is sent at the beginning of the emergency call.

**Procedure:**


1. From the **Main** screen, tap or touch the **Contacts** tab.  
The **Contacts** display.
2. Touch and hold the contact name from the **Contacts** list.  
You can declare an emergency for users your administrator has given permission.  
A **Context Menu** displays.

**Figure 19: Contact Context Menu**

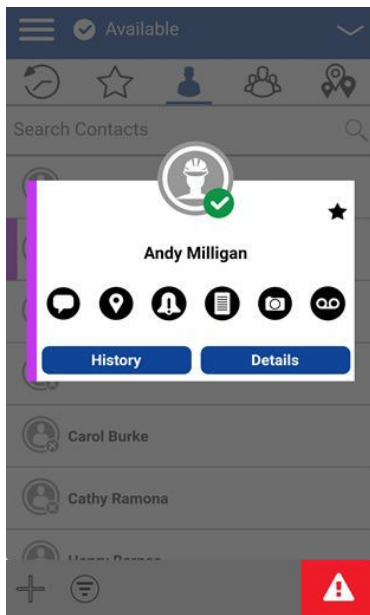

3. Tap the **Declare Emergency** option.  
The **Declare Emergency** window displays.
4. To declare an emergency, swipe the **Declare** slider to the right.  
An emergency is declared and an emergency alert displays similar to the following: `Emergency Declared by you from authorized user X.`
5. Dismiss the emergency alert pop-up.
6. When another user takes the floor, an **Emergency User Check** icon displays on the **Call** screen.
7. On the **Call** screen, tap or touch the **User Check** icon.  
The **Emergency User Check** screen displays.

**Figure 20: Emergency User Check**

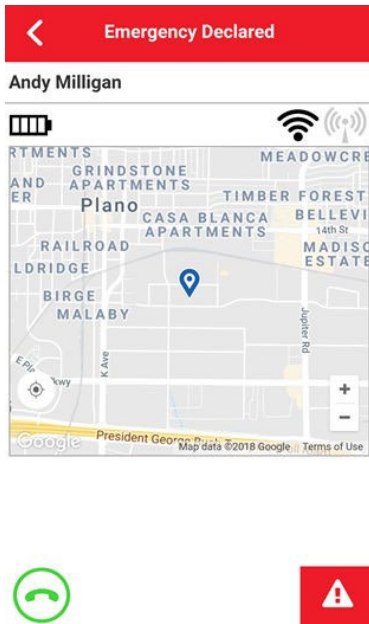

8. To cancel an emergency, see the [Emergency Cancellation on page 82](#) section.  
You can cancel the emergency locally or an authorized user can cancel on your behalf remotely.

### 7.5.2

## Canceling an Emergency on Behalf of Another User

You can cancel an emergency on behalf of another user from a **Contact Context Menu**.

To end the emergency, you as the emergency originator must cancel the emergency state. An authorized user, typically a supervisor or dispatcher, may cancel the emergency on your behalf. Your administrator may disable permission for you to cancel the emergency. In this case, an authorized user must cancel the emergency.

### 7.5.2.1

## Canceling an Emergency from the Context Menu

#### Procedure:

1. Touch and hold a contact from the **Contacts**.  
A **Context Menu** displays.
2. Tap the **Emergency** button.  
The emergency **Context Menu** displays.
3. Tap the **Cancel Emergency** option.  
The **Cancel Emergency** window displays.
4. To cancel the emergency, swipe the **Cancel** slider to the right.  
Before canceling the emergency, you are asked if the emergency was a real emergency or a false alarm.

5. Touch or tap the desired option for canceling the emergency.
6. Touch or tap **Send**.

The emergency is canceled, and a message is displayed that indicates that the emergency is canceled.

### 7.5.2.2

## Canceling an Emergency from the Call Screen

**Prerequisites:** Perform [Enabling Emergency User Check on page 85](#)

### Procedure:

1. Tap the **Emergency** Button.  
The **Cancel Emergency** window displays.
2. Swipe the **Cancel** slider to the right to cancel an emergency.  
Before canceling the emergency, you are asked if the emergency was a real emergency or a false alarm.
3. Perform the following actions:
  - Tap **Valid** when the emergency is valid.
  - Tap **False** when the emergency is false.
4. Touch or tap **Send**.  
The emergency is canceled, and a message indicating that the emergency is canceled is displayed.

## 7.6

## Enabling Emergency User Check

On your device, Emergency User Check is enabled only during an emergency call and you tap the **Emergency User Check** icon on the **Call** screen. User Check is only available during each emergency call. If you disconnect and rejoin the call, the **User Check** icon is no longer available.

### 7.6.1

## Enabling Emergency User Check from the Call Screen

### Procedure:

1. When an emergency has been declared and is in progress, the **Call** screen displays.
2. Tap or touch the **Emergency User Check** icon located to the left of the PTT button.  
The **Emergency User Check** screen displays.

### 7.6.2

## Monitoring Device Location

The **Emergency User Check** screen displays the user's location on a map if the location is available. The information does not update in real time. The time is shown next to the battery level indicator when the user sent the location.

### 7.6.3

## Monitoring Device Cellular Network Signal Strength

The **Emergency User Check** screen displays the current cellular network signal strength of the remote user device, if available.



**NOTE:** Signal strengths are available only for Android devices. For iOS devices, signal strength for Cellular and Wi-Fi are not available.

### 7.6.4

## Monitoring Device Wi-Fi Signal Strength

The **Emergency User Check** screen displays the current Wi-Fi signal strength of the remote user device, if available.



**NOTE:** Signal strengths are available only for Android devices. For iOS devices, signal strength for Cellular and Wi-Fi are not available.

### 7.6.5

## Monitoring Device Battery Level

The **Emergency User Check** screen displays the current battery level of the remote user device, if available.

## Chapter 8

# Area-based Warning Tones

The Area-based Warning Tones feature allows a dispatcher to configure a continuously playing warning tone on your device when you are within a particular area, also known as geofence. For example, a mining company needs to inform workers of a situation where a blast is happening, an emergency exists, or evacuation is necessary.

The Area-based Warning Tones are listed in the following table:

**Table 19: Area-based Warning Tones**

Name	Description
Area Warning Tone - Blast Tone	Played to indicate when you are within a blast area.
Area Warning Tone - Emergency Tone	Played to indicate when the user should follow emergency procedures. This tone is played to escalate the priority from the blast notification to a mining emergency notification.
Area Warning Tone - Evacuation Tone	Played to indicate when you are notified to immediately evacuate the mining site for an impending blast.

The dispatcher manages area-based tones. The dispatcher can change the tone type while the tone is active, in which case you will hear the tone change. The highest-priority tone will play if you are in an area in which more than one area-based tone is active.



**NOTE:** The area-based tone will pause during Emergency or Broadcast calls and will resume once the call ends.

You are able to initiate and receive PTT or video calls and perform any PTT operation.

## 8.1

### Entering a Geofence

When you enter a geofence area based on the location of your device, you can receive a tone and you see a banner that displays the type of tone that is active and the name of the geofence that the dispatcher gave it, for example, `Blast Tone Active - Blast Site 1`.

## 8.2

### Exiting a Geofence

When you exit a geofence area based on your location, the area-based tone stops playing and you can see a message displayed on the **Call** screen, for example, `You have exited the "Blast Site 1"`.

## 8.3

### Viewing Active Geofences

**Prerequisites:** Ensure to enable location services. If not, you may receive the `Unknown Location` message.

**Procedure:**

From the **Menu**, tap **Active Fences**.

You can see the currently active geofences, the type (fixed as `Geofence` in this release), the dispatcher maintaining the geofence, the geofence owner, and the talkgroup for which the geofence is active. You also see all the created geofences.

You can see whether the user is inside or outside the geofence. If you are not part of any active geofences, a `No record found` toast message is displayed. You can see an indication that the geofence tone (Bell icon) is active.



**NOTE:**

- 
- Geofences created by a user (dispatcher or mobile user) with an app version before R12.3 are not displayed.
- Area-based talkgroups are not included in the list of active geofences.
- “Follow me” dynamic geofences created by a mobile supervisor are not listed in the active geofences list.

**Chapter 9**

# Entering a Geofence

When you enter a geofence area based on the location of your device, you can receive a tone and you see a banner that displays the type of tone that is active and the name of the geofence that the dispatcher gave it, for example, `Blast Tone Active - Blast Site 1`.

## Chapter 10

# Supervisory Override

A supervisory override allows a talkgroup member to be designated by an administrator as a supervisor and be able to take the floor and speak at any time during a call, even if someone else has the floor.

One or more members of a talkgroup can be designated as a supervisor. If there are two or more supervisors in the same talkgroup, each supervisor can interrupt the other(s).

## 10.1

### Supervisor Talkgroup

A talkgroup supervisor sees a supervisor icon displayed next to the name of the talkgroup and next to the word `YOU` in the status bar when they take the floor.

## 10.2

### Non-supervisor Talkgroup Members

A non-supervisor talkgroup member can identify supervisors by an icon next to the name of the supervisor.

## Chapter 11

# Alerts

This section describes the alerts used in the Push-to-Talk (PTT) application.

## 11.1

### Instant Personal Alert (IPA)

An Instant Personal Alert (IPA) is a notification that you can send to another PTT contact to request a callback or receive from a PTT contact. You can only send or receive IPAs by individual contacts.

#### 11.1.1

### Sending an Alert

#### Procedure:

1. From the **Contacts** list, select the contact.



**NOTE:** You can send alerts from **History** and **Call** screens by using the **Alert** button.

2. Touch and hold the contact name.

The **Context Menu** displays.

3. To send the alert to the selected person, tap the **Alert** button.



**NOTE:** The `Alert Sent` message indicates that the application successfully delivered an alert request to the server. This message does not mean the person received the alert.

#### 11.1.2

### Receiving an Alert

Whenever someone else sends you an alert, the PTT application notifies you with a persistent alert dialog displayed, and an audible tone is played (subject to Silent Mode behavior).



**TIP:** Whenever you receive an alert, it shows in the call history.

#### Procedure:

Perform one of the following actions when you receive an alert:

- To call the person back, tap the **Reply** button.  
If your phone has a **PTT** button, you can also press it to call the person back while the alert is displayed.
- To dismiss the alert without calling back, tap the **Not Now** button.

**Result:** The IPA behavior is one of the following based on the setting:

- A persistent alert dialog is displayed, and an audible tone is played (default).
- A persistent alert tone is played, but no alert dialog is displayed.
- A persistent alert dialog is displayed, but no alert tone is played.

- No alert dialog is displayed, and no alert tone is played.

For more information on the Instant Personal Alert, see [Settings on page 168](#).



**NOTE:** When you are on a cellular call or PTT call, the IPA is deferred until after the call ends and displays when PTT is idle (not in a call). Only the last IPA is displayed (no queuing).

## 11.2

# Missed Call Alert (MCA)

Your phone alerts you whenever you miss a PTT call for the following reasons:

- You are on a regular cellular call when a one-to-one or talkgroup PTT call is made that includes you.
- You are already on a PTT call, and another one-to-one or talkgroup PTT call is made that includes you.
- Your phone receives a one-to-one PTT call, and you do not reply by taking the floor and speaking back. You cannot receive an MCA if you do not reply to a talkgroup call.
- Your self-presence is DND. In this case, the history updates silently. You will not receive a pop-up notification.

For more information on configuring the MCA, see [Settings on page 168](#).



**NOTE:** You cannot receive an MCA for a one-to-one PTT call if you end the PTT call before speaking back.

### 11.2.1

## Replying to a Missed Call Alert

### Procedure:

When an MCA is displayed, perform one of the following actions:

- To make a PTT call, tap **Reply**.
- To dismiss the message, tap **Not now**.

## 11.3

# Multiple Missed Call Alerts or Instant Personal Alerts per Caller

When you receive multiple IPAs, only the latest alert shows on the display after the call ends. All the previously received IPAs are available in the PTT call history.

Similarly, when you receive multiple MCAs from a single caller or talkgroup, only the latest alert shows on the display. All the previously received MCAs are available in the PTT call history.

## 11.4

# Setting the PTT Alert Volume

The phone-wide notification volume controls the volume of PTT alert tones. You can adjust the volume to the desired level for notifications.

For more information on your phone volume controls, refer to the manual of your phone.

## Chapter 12

# Real-time Presence

This section describes real-time presence using the Push-to-Talk (PTT) application.

With real-time presence, you can tell at a glance if the person you want to call is *Available*, *Do Not Disturb* (DND), or *Offline*. DND and offline contacts do not receive PTT calls. However, they can send and receive Integrated Secure Messages. The presence indicator is displayed next to the name of the contact. Likewise, you can tell others of your availability by selecting *Available* or *Do Not Disturb* within the PTT application. When you turn off your phone, you are automatically marked as *Offline* to others.

## 12.1

### My Presence

You can see the My Presence or self-presence status just above the top-level tabs and in the notification bar.

For more information on the icons, see [Presence Icons on page 56](#).

#### 12.1.1

### Setting Self-presence

You can set self-presence.

#### Procedure:

1. Tap on the self-presence tile. A pop-up menu displays showing you your current self-presence status.
2. Choose the presence state you want to set.
  - To set your self-presence state, tap **Available or Do Not Disturb**.

The Self-presence icon and text updates on the Self-presence Bar and the icon on the screen status bar.

#### Meaning of Presence

**Available** You are logged in to the PTT application, ready to receive PTT calls, Instant Personal Alerts (IPAs), and Integrated Secure Messages.

**Offline** You are logged out from the PTT application and cannot receive PTT calls, alerts, or Integrated Secure Messages.

**No Connection** When the PTT application cannot communicate with the PTT server, it displays **Offline** in the status bar or system notification, and your availability shows **No Connection**. For more information, refer to the [Loss of Data Network Connection on page 192](#) section.

#### Calling Restrictions

When you are in the DND state, you cannot receive PTT calls, but you can make PTT calls to other available users.

#### IPA Origination Restrictions

When you are in the DND state, you cannot send an IPA to other contacts since you cannot receive calls from others. If you try to send an alert, you see the following message: *You cannot send*


an alert while your availability is “Do Not Disturb”. Please change your status.

## 12.2

# PTT Contact Presence

You can see the contact presence in the **Contact** list indicated by an icon next to the name of the contact. The following image shows an example:

**Figure 21: Contacts**

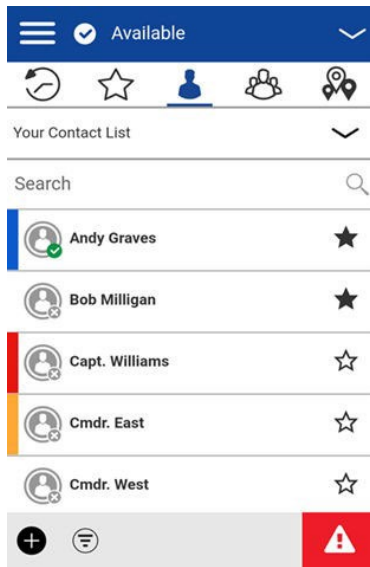

### Available

The PTT contact is logged in to the PTT application, ready to receive PTT calls, IPAs, and Integrated Secure Messages.

### Do Not Disturb (DND)

The PTT contact is logged in to the PTT application, not willing to receive PTT calls but receives IPAs and Integrated Secure Messages.

### Offline

The PTT contact is logged out from the PTT application and cannot receive PTT calls, alerts, and Integrated Secure Messages.

For a description and list of all icons, see [Icons on page 46](#).

### Calling Restrictions

When a contact is in the DND state, you cannot place a PTT call to that contact. If you try to make a call to a contact with the DND status, you see the following message: The Contact you are trying to call is in “Do Not Disturb” status. Please try again later.



**NOTE:** Depending on how your service provider has configured the service, you may see all or most of your contacts as Online even though some may be in a Do Not Disturb or Offline state. In this case, you may try to call any contact. If the called subscriber is unavailable, you may receive an error message. For more information, see [Call a Contact That Is Offline or Has a Do Not Disturb \(DND\) Status on page 65](#).

### Using Instant Personal Alerts for DND contacts

To contact a person with a DND status, you can send an IPA to request a callback.

## Chapter 13


# History

The **History** screen displays all your conversation history of calls, contacts, talkgroups, alerts, and messages, such as text, image, video, and voice.

You can view and search your history, return a call, view messages, add contacts, delete history and messages, and forward any message to a contact or talkgroup. The **History** screen contains two-level screens: the **Main** screen and **Details** screen. The main screen contains a high-level view, while the second-level screen contains the conversation details including a time stamp. Messages from the previous day are shown with the date stamp **YESTERDAY**. The Date/Time (12-/24-hour display) format follows the device setting for internationalization.

Each top-level history entry displays the conversation type, such as **Broadcast Call**, **Emergency Alert**, **Group Call**, **Quick Group Call**, or **Private Call**; contact name; talkgroup name or participant names for quick groups; <message text preview> (if a text message); and **Voice Message**, **File**, **Image**, **Location**, and **Video**.

**Figure 22: History**

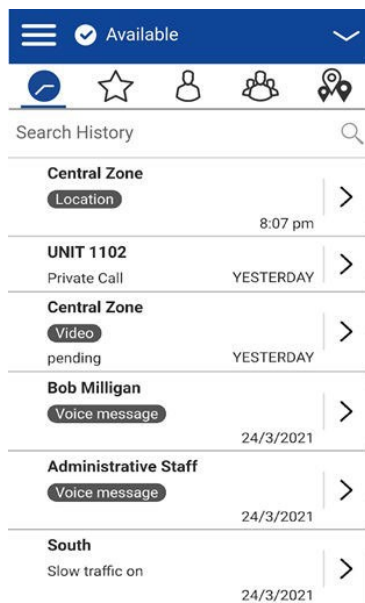

### 13.1

## Access History

You can access the **History** screen by tapping the **History** tab located at the upper left of the screen.

### 13.2

## Search History

You can use the search box to search for history.

For more information on searching on the **History** screen, see [Searching on page 45](#).

### 13.3

## History Icons

Understanding the history icons can help you access the information you need. For more information on the history icons, see [History Icons on page 52](#).

### 13.4

## Access Conversation Details

To access the conversation details, tap the **History Details** button located to the right of the entry.

From the **Conversation Details** screen, you can view history, send alerts, and read and send messages. For more information, see [Integrated Secure Messaging on page 137](#).

For additional information on sending and receiving multimedia content, see [Integrated Secure Messaging on page 137](#).

### 13.5

## Making a PTT Call

### Procedure:

To make a PTT call, tap the **History Entry** and perform one of the following actions:

- To talk, press and hold the PTT button.
- To talk, press and hold the on-screen PTT button.

### Result:

The **Call** screen displays.

For more information, see [Calling from History on page 69](#).

### 13.6

## Adding a PTT Contact (Optional)

If enabled by your administrator, you can add a contact from your **History** list if the contact is not already in your **Contact** list.

For more information, see [Contact Additions on page 105](#).

### Procedure:

1. From the top-level screen, tap and hold the **History Entry**. A **Context Menu** displays.
2. Tap the **Add Contact** option.  
The **New Contact** screen displays.

## 13.7

## Adding a Phone Contact (Optional)

If enabled by your administrator, you can add an outgoing VoIP contact from your **History** list if the contact is not already in your **Contact** list.

**Procedure:**

1. From the top-level screen, tap and hold the **History Entry**. A **Context Menu** displays.
2. Tap the **Add as Phone Contact** option.  
The **New Contact** screen displays.

## 13.8

## Deleting History

You can delete any history entry.

**Procedure:**

1. From the top-level screen, tap and hold the **History Entry**.  
A **Context Menu** displays.
2. Tap the **Delete History** option.  
The following confirmation message displays: The History for this contact or group will be removed. Continue?
3. Perform one of the following actions:
  - To delete, tap **Yes**.
  - To cancel, tap **No**.

## 13.9

## Clearing All History

You can clear all history entries.

**Procedure:**

1. From the top-level screen, tap and hold the **History Entry**. A **Context Menu** displays.
2. Tap the **Clear All** option.

The following confirmation message displays:

You are about to clear all the history. All your prior history with all groups and contacts will be deleted. Are you sure?

3. Perform one of the following actions:
  - To delete, tap **Yes**.

- To cancel, tap **No**.

### 13.10

## Deleting a Message

You can delete a message to a contact on the **History Details** screen.

### Procedure:

1. Tap the **History Details** button.
2. Tap and hold the history entry.  
A **Context Menu** displays.
3. Tap the **Delete Message** option.  
A delete confirmation message displays.
4. Perform one of the following actions:
  - To delete, tap **Yes**.
  - To cancel, tap **No**.

### 13.11

## Forwarding a Message

You can forward messages. For more information, see [Integrated Secure Messaging on page 137](#).

### 13.12

## Photo and Video Sending

You can send photos and videos. For more information, see [Integrated Secure Messaging on page 137](#).

## Chapter 14


# Favorites

The Push-to-Talk (PTT) favorite contacts and favorite groups are separate from the group list on the phone.

The maximum number of favorite contacts allowed on your device is **300**.

The maximum number of favorite groups allowed on your device is **50**.

**Figure 23: Favorite Contacts**

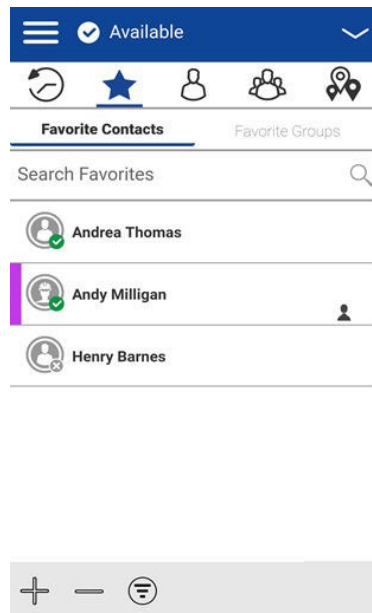

## 14.1

# Favorite Icons

The favorite icons can help you locate the information you need. For more information on the Favorites icons, see [Icons on page 46](#).

## 14.2

# Search Favorites

You can use the search box to search for favorites.

For more information on searching favorites, see [Searching on page 45](#).

## 14.3

# Viewing or Editing Favorite Contacts

The **Favorite Contacts** screen shows a list of all your favorite PTT contacts, as well as their current presence status. You can view or edit favorite contacts by using the **Contact Details** screen.



**NOTE:** You can also access your favorites from any **Call** screen. The Favorites icon is located at the right-hand corner of the **Call** screen.

## 14.4

# Adding Favorite Contacts

### Procedure:

1. To open the **Add Favorites Contacts** screen, from the **Favorite Contacts** screen, tap **Add** on the action bar.



**NOTE:** You can add contacts to **Favorites** from the **Contacts** list.

2. Scroll and select one or more contacts to add as a favorite.
3. To save your favorite and open the **Favorite Contacts** screen, on the action bar, tap **Save**.

## 14.5

# Removing Favorite Contacts

### Procedure:

1. From the **Favorites Contacts** screen, on the action bar, tap **Remove**.  
The **Remove Favorites** screen displays.
2. Select the contacts to remove.
3. On the action bar, tap **Save**.

A confirmation message displays the following:

You are about to remove n contact from favorites. Are you sure?

4. Perform one of these actions:

- To remove the contact from favorites, tap **Yes**.
- To cancel to the action, tap **No**.

## 14.6

## Viewing or Editing Favorite Groups

The **Favorite Groups** screen shows a list of all your favorite PTT groups. You can view or edit favorite groups by using the **Group Details** screen.

## 14.7

## Adding Favorite Groups

### Procedure:

1. From the **Favorite Groups** screen, on the action bar, tap **Add** and select one or more groups. The **Add Favorites** screen displays.



**NOTE:** You can also add talkgroups from the **Talkgroups List**.

2. To save the group, on the action bar, tap **Save**. The group is shown in the **Favorites** tab under **Groups**.

## 14.8

## Removing Favorite Groups

The list of personal favorite groups is shown on the **Favorite Groups** screen.

### Procedure:

1. From the **Favorite Groups** screen, on the action bar, tap **Remove**. The **Remove Favorite** option displays.
2. Select one or more favorites to remove.
3. To remove the group as a favorite, on the action bar, tap **Save**.

A confirmation message displays the following: You are about to remove n group from favorites. Are you sure?

4. Perform one of the following actions:
  - To continue, tap **Yes**. The group is removed from the **Favorite Groups** screen.
  - To cancel, tap **No**. The action is canceled.

## Chapter 15

# Contacts

This section describes Push-to-Talk (PTT) contacts using the PTT application.

The PTT contacts are separate from the **Contacts** on the phone. There are two types of contacts: those that are managed by an administrator and those that are managed on the phone by the user.

## Administrator-managed Contacts

Your administrator manages PTT contacts. Administrator-managed contacts cannot be deleted or changed from within the PTT application.

## Personal Contacts

Personal contacts are imported from the Contacts in the phone or entered manually. You manage personal contacts within the PTT application. You do not have the ability to create contacts if your administrator has restricted this feature.

## Maximum Number of Allowed Contacts

The maximum number of Administrator-managed contacts allowed on your phone is **1,000**. The maximum number of personal contacts allowed on your phone is **300**.

### 15.1

## Contacts Icons

The contacts icons can help you locate the information you need.

For more information on the contacts icons, see [Contacts Icons on page 51](#).

### 15.2

## Searching Contacts

You can use the search box to search for your contacts or contacts within your corporate global directory.

#### 15.2.1

## Your Contact List

Your contact list contains corporate contacts and personal contacts. Your administrator manages corporate contacts and you manage personal contacts. These contacts display the usernames and their presence status. To search for your contacts, you can touch within the search bar to bring up the on-screen keyboard. As you type, contact names containing the letters or numbers entered automatically display.

## 15.2.2

## Searching Corporate Global Directory Contacts

Corporate global directory contacts contain all contacts within your corporation. These contacts display the username and number. No presence status is shown. You can use the search for contacts in the global directory as follows:

**Procedure:**

1. Within the **Contacts** list, touch the **Your Contact List** drop-down menu.
2. From the pop-up, select the **Global Directory** option.
3. Touch within the search bar to bring up the on-screen keyboard. Type a minimum of three characters of the contact you are searching for on the search field.
4. Tap the **Search** icon.



**NOTE:** If enabled by your administrator, you can also add a contact by touching and holding the contact.


The contact names containing the letters or numbers entered display.

## 15.3

## Viewing Contacts

The **Contacts** tab shows your personal PTT contacts and contacts added by your administrator. You can view and sort the contacts based on alphabetical order or based on the availability of the contacts from the application settings. You can toggle the favorite state of each contact.

**Figure 24: Contacts**

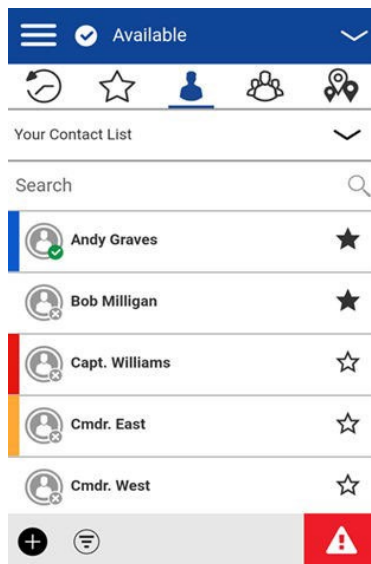

## 15.3.1

### Sorting the Contact List

Normally you can see all your PTT contacts listed in alphabetical order when you view the contact list. When the **Contact Sorting** setting option is changed to *By Availability, Available, and Do Not Disturb*,

they are sorted alphabetically first followed by *Offline*. The **Contacts** list updates each time a contact changes from online to offline or vice versa.

**Procedure:**

1. From within the **Menu**, tap the **Settings** option.
2. Scroll down and tap the **Contacts Sorting** setting.  
The **Contact Sorting Settings Options** display.
3. Perform one of the following actions:
  - Select **By Alphabetical**.  
Contacts are sorted alphabetically.
  - Select **By Availability**.  
Contacts are sorted by availability.
4. At the top of the screen, tap **Back**.  
The **Contacts** list is sorted according to your selection.

### 15.3.2

## Showing or Hiding Offline Contacts

Normally you can see all your PTT contacts when you view the contact list. You have the option to hide offline contacts and show only contacts whose presence status is *Available* or *Do Not Disturb*. While showing only online contacts, the **Contacts** list updates each time a contact changes from online to offline or vice versa.



**TIP:** If all your contacts are currently offline, you see the following message:  
*No Online Contacts*. If you wish to see all your contacts, follow the steps later in this section that describe how to show all contacts.

### 15.3.2.1

## Showing Only Online Contacts

If you want, you can show only online contacts.

**Procedure:**

- While showing the Contacts list, tap the **Hide Offline** button located at the bottom of the screen.  
The contact list shows only contacts that are *Available* or *Do Not Disturb*.

### 15.3.2.2

## Showing All Contacts

If you want, you can show all contacts.

**Procedure:**

- While showing only the online contacts in the Contacts list, tap the **Show Offline** button at the bottom of the screen.  
The Contacts list shows all the contacts, including those that are *Available* or *Do Not Disturb*, *Offline*.

## 15.4

## Viewing Contact Details

### Procedure:

1. Select a contact from the **Contacts**, touch and hold.



**TIP:** You can also access the **Contact Details** from the **Call** screen by tapping the **Details** button located at the top of the screen.

A **Context Menu** displays.

2. Tap the **Details** option on the **Context Menu**.

The **Contact Details** screen displays.



**NOTE:** To edit the contact details, see [Editing Contact Details on page 107](#).

## 15.5

## Contact Additions

You can add PTT contacts and add phone contacts in the following ways:

- Adding a personal PTT contact manually.  
For more information, see [Adding a New PTT Contact Manually on page 105](#).
- Adding a personal PTT contact by importing.  
For more information, see [Importing a PTT Contact from the Device's Contact List on page 106](#).
- Adding an Administrator-managed contact from the corporate global directory.  
For more information, see [Searching Corporate Global Directory Contacts on page 103](#).
- Adding a PTT contact from history.  
For more information, see [Adding a PTT Contact \(Optional\) on page 96](#).
- Adding a phone contact from history.  
For more information, see [Adding a Phone Contact \(Optional\) on page 97](#).
- Adding a new phone contact manually.  
For more information, see [Adding a New Phone Contact Manually \(Optional\) on page 106](#).
- Adding an outgoing phone contact by importing.  
For more information, see [Importing a New Phone Contact from the Device's Contact List \(Optional\) on page 107](#).

## 15.5.1

### Adding a New PTT Contact Manually

If enabled by your administrator, you can add personal PTT contacts by manually entering the contact information.

To view contacts, see [Viewing Contacts on page 103](#).

### Procedure:

1. At the bottom of the screen, tap **Add**. A **Context Menu** displays.

2. To add the contact details manually, select the **New PTT Contact** option.

The **New Contact** screen displays.

3. Type a PTT number and tap **Save**.

You can also assign the contact with an avatar and a unique color and mark it as a favorite.



**TIP:** You can also add a contact as a favorite from the **Favorites** tab. For more information on favorites, see [Favorites on page 99](#).

After saving, the contact appears in the contact list.

### 15.5.2

## Importing a PTT Contact from the Device's Contact List

If enabled by your administrator, you can add a personal PTT contact by importing from your device contact list.

To view contacts, see [Viewing Contacts on page 103](#).

#### Procedure:

1. At the bottom of the screen, tap **Add**.

A **Context Menu** displays.

2. To add a PTT contact from your phone contact list, select the **Import PTT Contact** option.



**NOTE:** The first time you try to import a contact, you may be asked to allow the application permission to access the contact list.

The **Select Contact** screen displays.

3. Select a contact from **Contacts**.

You can also assign the contact with an avatar and a unique color and mark it as a favorite.

The **New Contact** screen displays.

4. To save the new contact, tap **Save**.

The contact appears in the **PTT Contacts** list.

### 15.5.3

## Adding a New Phone Contact Manually (Optional)

If enabled by your administrator, you can add personal contacts by manually entering the contact information.

#### Procedure:

1. At the bottom of the screen, tap **Add**.

A **Context Menu** displays.

2. Tap the **New Phone Contact** option.


3. Type the new contact name.

4. Navigate down to the **Phone Number**.

5. Type a phone number.

6. To save the contact, tap the **Save** option.

You can also assign the contact with an avatar and a unique color and mark it as a favorite.

 **TIP:** You can also add a contact as a favorite from the **Favorites** tab. For more information on favorites, see [Favorites on page 99](#).

#### 15.5.4


## Importing a New Phone Contact from the Device's Contact List (Optional)

If enabled by your administrator, you can add an outgoing VoIP contact from your device contact list that you can use to make an outgoing VoIP call from within the application. This feature is optional and may not be available from your service provider.

### Procedure:


1. At the bottom of the screen, tap **Add**. A **Context Menu** displays.

2. To add a contact from your phone contact list, select the **Import Phone Contact** option.

 **NOTE:** The first time you try to import a contact, you may be asked to allow the application permission to access the contact list.

3. Select a contact from **Contacts**.

The **New Contact** screen displays.

 **NOTE:** You can also assign the contact with an avatar and a unique color and mark it as a favorite.

4. To save the new contact, tap **Save**.  
The contact appears in the **PTT Contacts** list.

#### 15.6

## Editing Contact Details

You can only edit contacts that you create yourself. An Administrator-managed contact name cannot be edited. However, you can add or change an avatar, add or change a color, and add a contact to your favorites.

To view the **Contact Details**, see [Viewing Contacts on page 103](#).


From the **Contact Details** screen, you can perform any of the following tasks listed within this section:

- [Editing a Contact Name on page 108](#)
- [Adding or Changing a Contact Avatar on page 108](#)
- [Changing Contact Color on page 108](#)
- [Making Contact a Favorite or Removing as a Favorite on page 108](#)

### 15.6.1

## Editing a Contact Name


### Procedure:

1. Tap the contact name field.  
 **TIP:** A contact name with an underline indicates that you can edit the field. Administrator-managed contacts cannot be edited.
2. Type the contact name by using the on-screen keyboard.
3. When finished, tap **Save** or continue to change other contact details.

### 15.6.2

## Adding or Changing a Contact Avatar

### Procedure:

1. Tap the **Avatar** option.  
For a list of all avatars available and their definitions, see [Avatar Icons on page 47](#).  
The **Select Avatar** screen displays.
2. Select an avatar from the list.  
You can also take a photo or select an image from your phone's gallery using the buttons at the bottom of the screen.  
 **NOTE:** The first time you try to take a photo, you may be asked to allow the application permission to access the gallery.
3. On the **Contact Details** screen, tap **Save**.  
The selected avatar is assigned to the contact and displayed next to the contact name.

### 15.6.3

## Changing Contact Color

### Procedure:

1. Select a color from the list.
2. In the **Contact Details** screen, tap **Save**.

**Result:** The selected color is assigned to the contact.

### 15.6.4

## Making Contact a Favorite or Removing as a Favorite

You can add contacts to the favorites list for the contacts that you created and contacts that are Administrator-managed. You can add contacts by using the **Contact Details** screen. Additionally, you can make the contact a favorite or remove it from the **Favorites**.

Favorites can also be added using the **Favorites** tab. For information, see [Favorites on page 99](#).

## 15.7

## Deleting a Contact

You can only delete contacts that you create yourself. An Administrator-managed contact cannot be deleted.

**Procedure:**

1. From the Contact Details, tap the **Delete** option located at the bottom of the screen.
2. Perform one of the following actions:
  - To delete, tap **Yes**. The contact is removed from the Contacts list.
  - To cancel without deleting the contact, tap **No**.



**NOTE:** If you are removing a contact that is also a favorite, you see the following confirmation message: The contact x is a favorite. Deleting it will result in deleting the Favorite also. Continue?

## Chapter 16

# Talkgroups

This section describes the Push-to-Talk (PTT) talkgroups by using the PTT application.

The PTT talkgroups are separate from the **Contacts** on the phone. There are two types of talkgroups: those that are managed by an administrator and those that are managed by the user on the phone.

## Administrator-managed Talkgroups

Your administrator manages PTT talkgroups. Administrator-managed talkgroups cannot be deleted or changed from within the PTT application.

## Personal Talkgroups

Personal talkgroups are created from the PTT Contacts list. You manage personal talkgroups within the PTT application. You may not have the ability to create personal talkgroups if your administrator has restricted this feature.

## Maximum Number of Allowed Talkgroups

The maximum number of Administrator-managed talkgroups allowed on your phone is **100**.

The maximum number of members per talkgroup is **250** or more depending on the group type configuration by the administrator. The maximum number of personal talkgroups allowed on your phone is **30**.

The maximum number of members per personal talkgroup allowed on your phone is **30**.

### 16.1

## Talkgroup Icons

Talkgroup icons can help you locate the information you need.

For more information on Talkgroup icons, see [Talkgroup Icons on page 54](#).

### 16.2

## Searching Talkgroups

You can use the search box to search for talkgroups.

For more information on searching for talkgroups, see [Searching on page 45](#).


### 16.3

## Viewing Talkgroups

The **Talkgroups** tab shows a list of all your personal talkgroups and talkgroups added by an administrator. Icons are shown next to the talkgroups, which are a broadcaster, supervisor, an Interop talkgroup, location

tracking, and talkgroup scan priority. You can toggle the favorite state of the talkgroup from the **Talkgroup List**.

**Figure 25: Talkgroups**

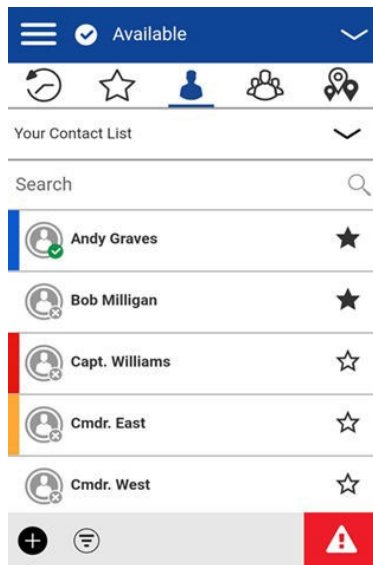

## 16.4

# Call Permissions

Three types of call permissions can be assigned by an administrator to a talkgroup member:

**Table 20: Call Permissions**

Function	Permission	Description
<b>In Call</b>	Listen and Talk	The PTT user is allowed to listen to the PTT call, as well as to transmit or talk to the active PTT call. Listen and Talk is the default permission for all the talkgroup members.
	Listen Only	The PTT user is only allowed to listen to the PTT call but not allowed to transmit or talk in the active PTT call.
<b>Call Initiation</b>	Allow	The PTT user is allowed to initiate a new PTT call to the predefined talkgroup. The PTT user is also allowed to rejoin the call that is missed due to network issues, busy in another call, and other reasons. Allow is the default permission for all talkgroup members.
	Do not Allow	The PTT user is not allowed to initiate a new PTT call or rejoin an active PTT call.
<b>Call Receiving</b>	Allow	The PTT user is configured to receive all the calls on the predefined talkgroup in which the user is a member. The PTT user is paged for all the calls that are

Function	Permission	Description
		initiated on the talkgroup by other members. There is no retry for paging if the user missed the call for any reason. <code>Allow</code> is the default permission for all the talkgroup members.
	<code>Do not Allow</code>	The PTT user is not allowed to receive any incoming PTT calls. The PTT user is not paged for any calls that are initiated on that talkgroup by other members.

## 16.5

# Dynamic Area-based Talkgroups (Optional)

Optional features may not be included in your PTT service plan.

Dynamic area-based talkgroups are set up and managed by a Dispatch user. It is available to members dynamically while the user is in a geographical area, as defined by a Dispatch user. As talkgroup members enter a geographical area, the talkgroup is shared and shown at the top of the channel list. The member list cannot be viewed by talkgroup members. Members are allowed PTT call origination and messaging within the talkgroup. Members receive notifications upon entering and exiting the talkgroup. Area-based talkgroups are in addition to the maximum number of configured talkgroups for the device.

You receive calls for area-based talkgroups when talkgroup scanning is disabled or enabled. Dynamic area-based talkgroup calls are received while they are active and your selected talkgroup is not in an active call.



**NOTE:** PTT users leaving the area while on a call do not automatically drop. Similarly, when entering the area, if there is an existing call, PTT users are not added to the call but start receiving new calls after entering the area.

## 16.6

# Viewing Talkgroup Details

You can view talkgroup details from the **Talkgroups** screen.

### Procedure:

1. Select a talkgroup from the **Talkgroups**, touch and hold.  
A **Context Menu** displays.
2. Tap the **Details** option in the menu.  
The **Talkgroup Details** screen appears.

## 16.6.1

## Broadcast Talkgroup Details (Broadcasters Only)

Broadcast talkgroups are managed by your administrator and can have a large number of members. Talkgroup members cannot be viewed, but a count of talkgroup members is provided while viewing talkgroup details.

## 16.7

## Adding a Talkgroup

You can create your personal talkgroups unless restricted by an administrator.

### Procedure:

1. From the **Groups** tab, tap the **Add** button located at the bottom of the screen to add the talkgroup details manually.

The **New Group** screen displays.



**NOTE:** A talkgroup can also be created from the history entry for a quick group call by going to the history list, finding the quick group, and tapping and holding the quick group history entry and selecting the **Add Group** option.

2. Tap the **Name** text box to enter a talkgroup name using the on-screen keyboard.
3. Tap on **Add Members**.

The **Select Group Members** list displays.

4. Select members from the **Select Group Members** screen and tap the **Save** button located at the top of the screen.



**TIP:** You can only add contacts already in your Contacts list as talkgroup members. If you do not find the name of the talkgroup member you want to add, you may need to create a contact first. See the [Contact Additions on page 105](#) section for more information on adding contacts.

5. The talkgroup can also be assigned with an avatar and a unique color and added as a favorite.



**TIP:** You can also add a talkgroup as a favorite from the Favorites tab. For more information on favorites, see the [Favorites on page 99](#) section.

6. Tap the **Save** button when finished to save the new talkgroup.

The talkgroup appears in the talkgroup list.

## 16.8

## Editing Talkgroup Details

You can only edit groups that you create yourself. An Administrator-managed talkgroup name cannot be edited. However, you can add or change an avatar, add or change a color, and add a talkgroup to your favorites.

To view the **Group Details**, see [Viewing Talkgroup Details on page 112](#).

### Procedure:

From the **Group Details** screen, you can perform any of the following tasks listed within this section:

- [Editing a Talkgroup Name on page 114](#)


- [Adding One or More Members to a Talkgroup on page 114](#)
- [Removing a Member from a Talkgroup on page 114](#)
- [Renaming a Talkgroup Member on page 115](#)
- [Adding or Changing a Talkgroup Avatar on page 116](#)
- [Changing Talkgroup Color on page 116](#)
- [Making Talkgroup a Favorite or Removing as a Favorite on page 116](#)

### 16.8.1

## Editing a Talkgroup Name

You can edit your personal talkgroups but not Administrator-managed talkgroups.

### Procedure:

1. Tap on the **Group name** field.  
 **TIP:** A talkgroup name with an underline indicates that the field can be edited. Administrator-managed talkgroups cannot be edited.
2. Type the talkgroup name using the on-screen keyboard.
3. Tap the **Save** button; otherwise, continue.

### 16.8.2

## Adding One or More Members to a Talkgroup

You can add one or more members to your talkgroups but not to Administrator-managed talkgroups.

### Procedure:


1. Tap the **Add Members** button to add contacts to the talkgroup. The **Select Group Members** screen displays.
2. Select one or more contacts to add to the talkgroup.
3. Tap the **Save** button located at the top of the screen.
4. If finished, tap the **Save** button on the **Group Details** screen and the following message displays: *Group updated.* Otherwise, continue.

### 16.8.3

## Removing a Member from a Talkgroup

You can only remove a member from a talkgroup that you created. Talkgroups that are Administrator-assigned cannot be edited.

### Procedure:

1. Touch and hold the member to remove.  
A **Context Menu** displays.  
 **TIP:** A talkgroup name with an underline indicates a personal talkgroup and therefore can be edited. Administrator-managed talkgroups cannot be edited.

2. Tap the **Remove Member** option.

A confirmation dialog displays:

This group member will be removed from the group. Continue?

3. Perform one of the following actions:

- Select **Yes** if you want to remove the member.
- Select **No** if you want to cancel.

4. Repeat [step 1](#) through [step 3](#) for other talkgroup members you want to remove.



**NOTE:** When you remove the last member of a talkgroup, the talkgroup is deleted upon saving the changes. A confirmation dialog shows when you remove the last member to let you know this happens.

5. After removing the talkgroup member(s), tap the **Back** button located at the top of the screen or the phone's **Back** button to return to the **Group Details** screen.
6. If finished, tap the **Save** button located at the top of the screen and the following message displays: `Group updated`. Otherwise, continue.

#### 16.8.4

## Renaming a Talkgroup Member

Talkgroup member names are set when the talkgroup is created. Changing a contact name in the PTT Contacts list will not change the name of a talkgroup member. Follow the instructions in this section to rename a talkgroup member.

### Procedure:

1. Touch and hold the member to rename.

A **Context Menu** displays.



**TIP:** A talkgroup name with an underline indicates a personal talkgroup and therefore can be edited. Administrator-managed talkgroups cannot be edited.

2. Tap the **Rename Member** option.

A confirmation dialog is displayed.

3. Edit the name.

4. Perform one of the following actions:

- Tap **Save** to save the edits.
- Tap **Cancel** to start over.

5. Tap the **Back** button located at the top of the screen to return to the **Group Details** screen.

6. If finished, tap the **Save** button at the top of the screen to save, and the following message displays: `Group updated`. Otherwise, continue.

### 16.8.5

## Adding or Changing a Talkgroup Avatar

You can edit the talkgroup avatar for the talkgroups that you created yourself and talkgroups that are Administrator-managed.

#### Procedure:

1. Tap the **Avatar** option. For a list of all avatars available and their definitions, see the [Avatar Icons on page 47](#) section.

The **Select Avatar** screen displays.

2. Select an avatar from the list.

You can also take a photo or select an image from your phone's gallery using the buttons at the bottom of the screen.



**NOTE:** The first time you try to take a photo, you may be asked to allow the application permission to access the gallery.

3. If finished, tap the **Save** button on the **Group Details** screen, and the selected avatar is assigned to the talkgroup; otherwise, continue.

### 16.8.6

## Changing Talkgroup Color

You can edit the talkgroup colors for the talkgroups that you created yourself and talkgroups that are Administrator-managed.

#### Procedure:

1. Select a color from the list.
2. On the **Group Details** screen, tap **Save**; otherwise, continue.

The selected color is assigned to the talkgroup.

### 16.8.7

## Making Talkgroup a Favorite or Removing as a Favorite

You can add talkgroups to the favorites list for the talkgroups that you created yourself and talkgroups that are Administrator-managed. Talkgroups can be added using the **Group Details** screen.

Favorites can also be added using the **Favorites** tab. For more information, see [Favorites on page 99](#).

### 16.9

## Deleting a Talkgroup

You can only delete personal talkgroups you have created. Administrator-managed talkgroups cannot be removed.

#### Procedure:

1. From the **Group Details** at the bottom of the screen, tap **Delete**.
2. Perform one of the following actions:
  - To delete the talkgroup, tap **Yes**.

The talkgroup is removed from the **Talkgroups** list.



**NOTE:**

If you are removing a talkgroup that is also a favorite, you can see the following confirmation message:

The group x is a favorite, deleting it will result in deleting the favorite also, are you sure?

- To cancel without deleting the talkgroup, tap **No**.
3. To delete the talkgroup, tap **Yes**.

The talkgroup is deleted from the **Talkgroups** list.

## Chapter 17

# Talkgroup Scanning

This section describes Talkgroup Scanning using the Push-to-Talk (PTT) application and is organized as follows:

- [Enabling/Disabling Scanning on page 118](#)
- [Adding Talkgroups to Scan Lists on page 119](#)
- [Removing Talkgroups from Scan Lists or Changing the Scanning Priority on page 120](#)

Talkgroup Scanning allows the phone of a subscriber to scan through the scan list of corporate talkgroups for calls and up to three talkgroups that can be assigned as priority (1–3) talkgroups. The higher-priority talkgroup calls take precedence over lower-priority talkgroup calls. Talkgroups that are not on the scan lists do not override an ongoing call when Scanning is enabled.

While you have Talkgroup Scanning enabled, you can see the following behaviors:

- Calls from the scanned talkgroup are received normally. When the current scanned talkgroup call ends, you automatically hear the next active scanned talkgroup call in progress. You do not get Missed Call Alerts (MCAs) for talkgroup calls while scanning is enabled.
- Quick group calls are received normally. An MCA is provided if you are busy on another PTT call or a cellular call.
- One-to-one calls are received normally. An MCA is provided if you are busy on another PTT call or a cellular call.
- All call types can be originated: one-to-one, quick group, and talkgroup calls.
- Normal call rejoin occurs for originated talkgroup calls.



**NOTE:** You cannot receive MCAs for talkgroup calls while scanning, so calling a talkgroup may result in a call rejoin.

## 17.1

### Enabling/Disabling Scanning


To enable Talkgroup Scan, you can tap the **Talkgroup Scan** toggle on the menu from the **OFF** state to the **ON** state.


#### Procedure:

- To enable Talkgroup Scan, tap the **Talkgroup Scan** toggle on the menu from the **OFF** state to the **ON** state.

When Talkgroup Scan is enabled, a scan list icon shows on the **Talkgroup** tab row, and during a call, the title bar shows the priority of the talkgroup. Also, if any talkgroups have priorities that you have assigned, the priority (1-3) is displayed on the talkgroup button. When Talkgroup Scan is disabled, the Scan List icon disappears from the **Call Status** on the **Main** screen, and all assigned priorities disappear.

The talkgroup list shows in priority order at the top followed by the rest of the talkgroups in alphabetical order.

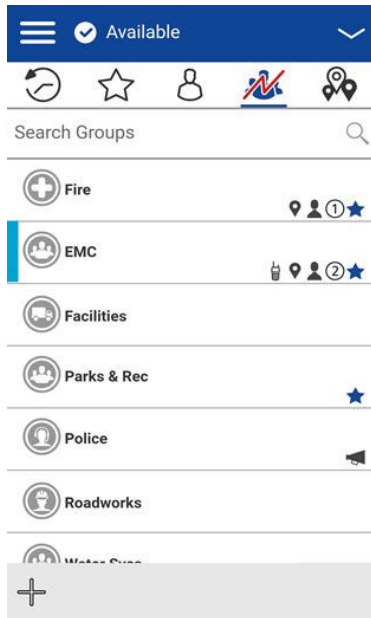**Figure 26: Talkgroup Scanning**

 **NOTE:** When Talkgroup Scan is enabled, pressing a PTT hard key or PTT key accessory ends the current call if active and allows you to originate a call with the selected talkgroup.

- To disable Talkgroup Scan, tap the **Talkgroup Scan** toggle on the menu from the **ON** state to the **OFF** state.

## 17.2


# Adding Talkgroups to Scan Lists

You can add talkgroups to scan lists.

### Procedure:

1. Touch and hold the talkgroup that you want to add to the scan list. A **Context Menu** is shown.

2. Tap the **Scan List** option.  
The scan list priority options display.

 **NOTE:** Only corporate groups given by your administrator can be scanned.

3. Tap the priority option you want to assign to the talkgroup or select **Normal Priority** if you want the talkgroup to be of normal priority (in other words, not a priority scan talkgroup).

If you choose a priority that is already being used by another talkgroup, the following message displays: A group with priority 1 already exists. Make the group priority 1?

4. Perform one of the following actions:
  - Select **Yes** to assign the existing priority to the current talkgroup.

- Select **No** to assign the talkgroup a new priority.

Once you assign a priority to a talkgroup, a priority icon appears next to the scanned talkgroup.



**NOTE:** Choosing a priority used by another talkgroup makes the previous priority talkgroup stay on the scan list with normal priority.

### 17.3

## Removing Talkgroups from Scan Lists or Changing the Scanning Priority

You can remove talkgroups from scan lists or change the scanning priority.

#### Procedure:

1. From the **Groups** tab, touch and hold the talkgroup that you want to remove or change the scanning priority.
2. Tap the **Scan List** option.  
A pop-up menu appears.
3. You can reassign the priority by touching a priority option.
  - To make the talkgroup normal priority, tap **Normal Priority**.
  - To remove the talkgroup from the scan list, tap **Remove**.

If you choose a priority that is already being used by another talkgroup, a message similar to the following displays:

A group with priority 1 already exists. Make the group priority 1?



**NOTE:** Choosing a priority used by another talkgroup makes the previous priority talkgroup stay on the scan list with normal priority.

4. Perform one of the following actions:
  - Select **Yes** to assign the existing priority to the current talkgroup.
  - Select **No** to assign the talkgroup a new priority. The previous Priority 1 assigned talkgroup is moved to No priority.

## Chapter 18


# Map

This section describes the Push-to-Talk (PTT) Map, which is used to share one's location or send an arbitrary location. The map is available to all individuals. The map is accessible when you select a contact or talkgroup. However, a talkgroup supervisor that has Location Capability enabled by your administrator can view talkgroup members' locations on the map.

This section is organized as follows:

- [Map Icons on page 121](#)
- [Searching the Map on page 122](#)
- [Recentering the Map on page 122](#)
- [Individuals on page 122](#)
  - [Sending My Location or an Arbitrary Location to a Contact on page 122](#)
  - [Sending My Location or an Arbitrary Location to a Quick Group on page 123](#)
  - [Sending My Location or an Arbitrary Location to a Talkgroup on page 123](#)
- [Supervisor with Location Capability on page 124](#)
  - [Talkgroup Member Location on page 124](#)
  - [Boundary on page 128](#)
  - [Creating a Quick Group from the Map on page 133](#)

**Figure 27: Map**

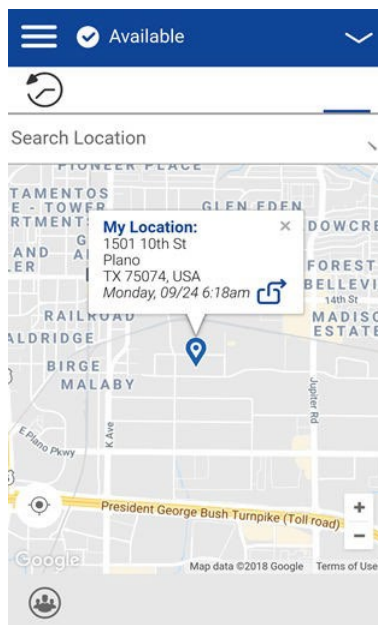

## 18.1

### Map Icons

Map icons can help you locate the information you need.

For more information on the map icons, see [Map Icons on page 54](#).

## 18.2

# Searching the Map

You can use the search box to search for addresses or places.

For more information on searching on the map, see [Map Icons on page 54](#).

## 18.3

# Recentering the Map

You can recenter the map to your current location. The **My Location** button shows whenever the map is not centered on your current location at the default zoom. When recentering the map, the zoom level is set to the default zoom.

You can tap the **My Location** button located on the map. The map returns to the center.

## 18.4

# Individuals

The map display allows an individual to check their current location on the map and share their location or send an arbitrary location. You can share your location with a contact, quick group, or talkgroup. You can only share your location or some other location.



**TIP:** You can also share your location from the **Call** screen by tapping the **Map Pin** located at the bottom of the screen. The **My Location** screen displays. You can share your location by tapping **Share Location**.

### 18.4.1


# Sending My Location or an Arbitrary Location to a Contact

## Procedure:

1. Tap the **My Location Pin** (Blue).

**My Location** displays.

**Figure 28: My Location**

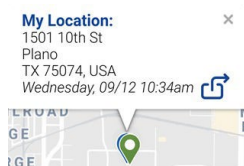

2. Perform one of the following actions:
  - Move the map.
  - Use a location search to find an arbitrary location.

3. Tap the **Share** button to share your location. The **Share My Location** menu displays.
4. Choose the **Send to Contact** option. **Send to Contact** displays.
5. Tap the contact to select the one you want to share your location with. The following message displays: `Location Sent`.


## 18.4.2

## Sending My Location or an Arbitrary Location to a Quick Group

### Procedure:

1. Tap the **My Location Pin** (Blue). **My Location** displays.

**Figure 29: My Location**

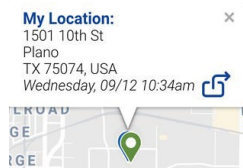

2. Perform one of the following actions:
  - Move the map.
  - Use a location search to find an arbitrary location.
3. Tap the **Share** button to share your location. The **Share My Location** menu displays.
4. Choose the **Send to Quick Group** option. **Send to Quick Group** displays
5. Tap two or more contacts to select those you want to share your location with. The following message displays: `Location Sent`.


## 18.4.3

## Sending My Location or an Arbitrary Location to a Talkgroup

### Procedure:

1. Tap the **My Location Pin** (Blue). **My Location** displays.

**Figure 30: My Location**

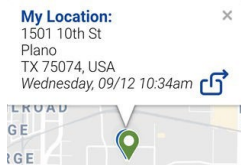

2. To share your location, tap the **Share** button. The **Share My Location** menu displays.
3. Choose the **Send to Group** option. **Send Location to Group** displays.
4. Tap the talkgroup to select the one you want to share your location with. The following message displays: `Location Sent`.

## 18.5

# Supervisor with Location Capability

The supervisor can share their location, not share the location of talkgroup members, or send an arbitrary location.

A supervisor can also create a boundary for a talkgroup, receive notifications when members enter or leave the boundary, view the talkgroup presence of members, and call a talkgroup member. Multiple supervisors in a talkgroup can have Location Capability.



**TIP:** As a supervisor, you can also access the map from the **Groups** tab by tapping the talkgroup, which has a map pin. The **Call** screen displays. To access the map, you can tap **Talkgroup Location**.

### 18.5.1

## Talkgroup Member Location


A supervisor can view the current talkgroup member location on the map with an automatic refresh of the location. Location Capability must be enabled by your administrator at the talkgroup level. Multiple supervisors per talkgroup are allowed to have Location Capability.

#### 18.5.1.1


## Viewing Talkgroup Member Locations

### Procedure:

1. From within the **Map** tab, tap **Tracked Group Selector**.  
The **Tracked Group Selector** button is disabled for anyone who is not a supervisor with Location Capability privilege.  
A pop-up menu listing all groups you have permission to locate is displayed.

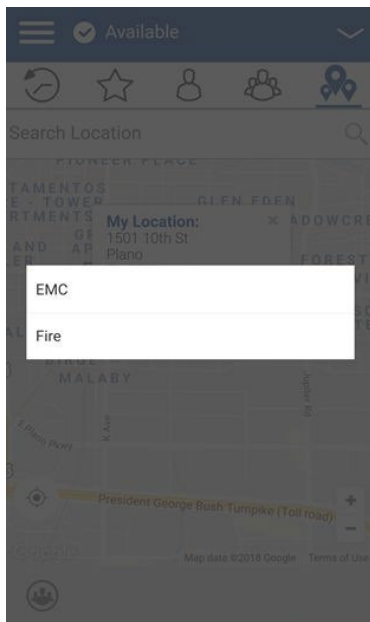**Figure 31: Groups with Location Capability**

2. Tap the talkgroup to locate the talkgroup member location.  
The map displays with all members of the selected talkgroup and their locations.

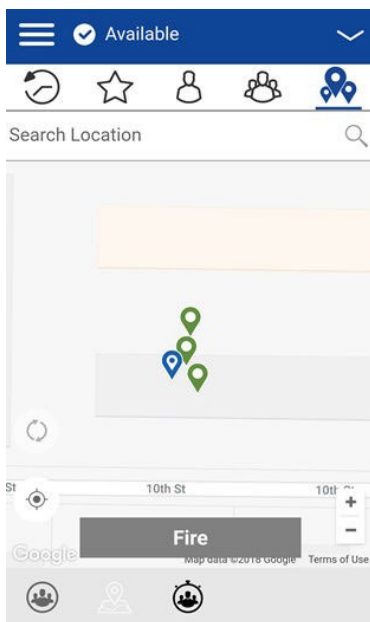**Figure 32: Talkgroup Member Location**

### 18.5.1.2

## Viewing a Talkgroup Member's Location Details


**Prerequisites:** You must complete the procedure in [Viewing Talkgroup Member Locations](#) on page 124.


**Procedure:**

Tap any **Pin**.

The name of the member and location display.

**Figure 33: Viewing a Talkgroup Member's Location Details**

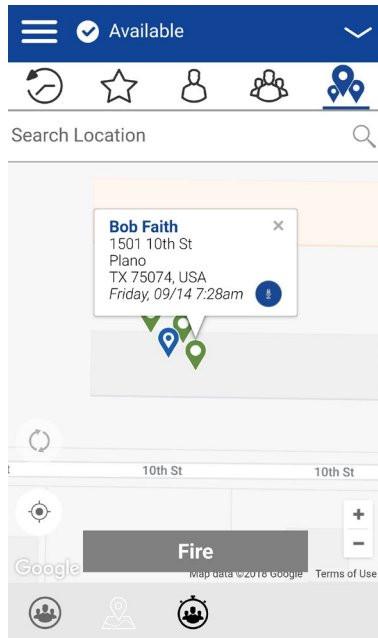

 **TIP:** Tap the pin again or **x** or anywhere on the map to dismiss.


18.5.1.3

## Calling a Talkgroup Member

 **TIP:** You can also access the map from the **Groups** tab by tapping the talkgroup, which has a map pin. The **Call** screen displays.

**Procedure:**

1. To access the map, tap the **Talkgroup Location**.
2. Follow the procedure in [Viewing a Talkgroup Member's Location Details on page 125](#).
3. Tap any **Pin**.  
The talkgroup member's **Location Details** screen displays with the name of the member and location.

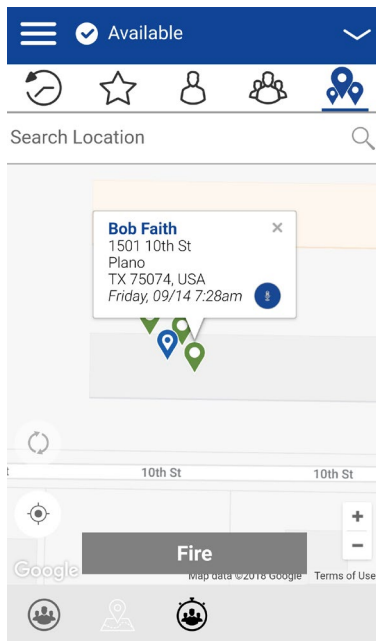**Figure 34: Viewing a Talkgroup Member's Location Details**

#### 4. Tap **Call**.

The **Call** screen displays.

#### 18.5.1.4

### Sharing Your Location or an Arbitrary Location to a Talkgroup with Location Capability


Move the map or search the map for a location. The pin turns orange and details show **Pin Location**. You can tap **Share**.

#### Procedure:

##### 1. Tap **Tracked Group Selector**.

The list of talkgroups with **Location Capability** pop-up displays.

**Figure 35: Groups with Location Capability**

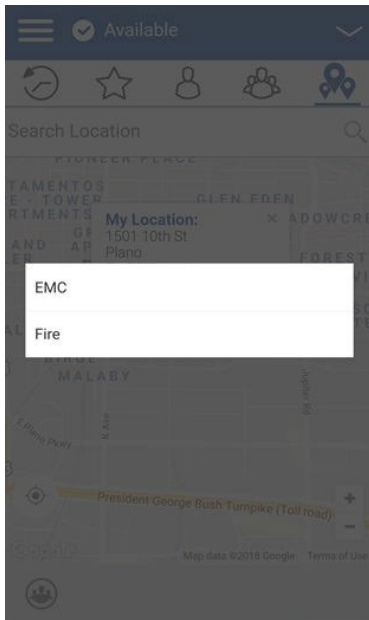


2. Choose a talkgroup to view talkgroup member locations from the list.

3. Tap the **My Location Pin** (Blue).

To send an arbitrary location, move the map or search for a location.

**My Location** displays.

**Figure 36: My Location**

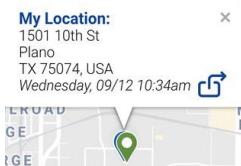

4. To share your location, tap **Share**.

The pin location is sent to the talkgroup.

## 18.5.2

# Boundary

A PTT supervisor can create a boundary for a talkgroup and receive notifications when members enter or leave the boundary. Members can optionally receive notifications when they enter or leave. You can also refresh the location and modify an existing boundary set for a talkgroup. The **Active Boundary Time** setting controls how long a boundary is active.

This section is organized as follows:

- [Creating a Boundary on page 129](#)
- [Recentering a Boundary on the Map on page 130](#)
- [Recentering the Map to Your Location on page 131](#)

- [Boundary Settings on page 131](#)
  - [Changing the Boundary Settings on page 131](#)
  - [Changing the Update Interval on page 132](#)
  - [Changing the Active Boundary Time on page 132](#)
  - [Changing the Notify Me Setting on page 132](#)
  - [Changing the Notify Member Setting on page 133](#)
  - [Changing the Initial Member Notification Setting on page 133](#)


### 18.5.2.1

## Creating a Boundary

### Procedure:


1. From within the **Map** tab, tap **Tracked Group Selector**.  
The list of talkgroups displays.
2. Choose a talkgroup to view talkgroup member locations from the list.  
The **Set Boundary** popover displays.

 **Figure 37: Setting the Boundary Popover**



3. Tap **Set Boundary**.  
The **Set Boundary** popover displays along with a boundary preview (blue circle).

**Figure 38: Boundary Preview**

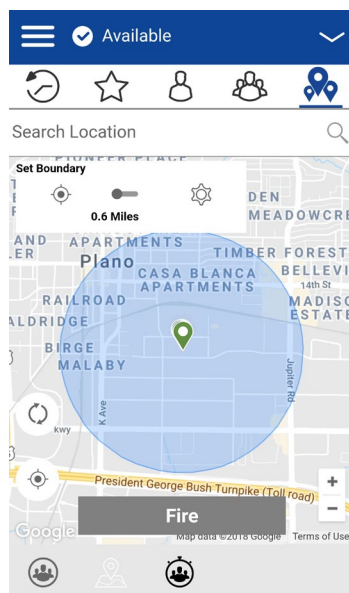

4. Set the boundary size by zooming in or out.  
You can see the boundary radius in the popover.
5. Set the boundary center by moving the map or searching.
6. Tap the **Set Boundary** toggle to enable the boundary.


If you are setting a boundary at your current location as shown by the My Location Pin (Blue), you can set the boundary type. If you set a boundary at some other location, the boundary stays at that location.

The following confirmation message displays: A boundary will be created around your current location. Do you want the boundary center to move with you or stay here?

7. Select one of the following boundary types:
  - **Stay here:** The **Stay here** boundary type is created at an arbitrary location, and a static boundary with the center is selected.
  - **Follow me:** The **Follow me** boundary type is created at your current location, and the boundary moves as you move.

The following status message displays: Fence boundary on. The map is then updated with the boundary **ON**.

**Figure 39: Boundary ON**

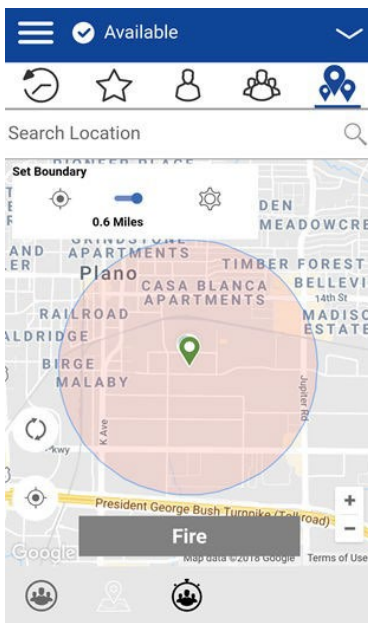

### 18.5.2.2

## Recentering a Boundary on the Map

When the boundary is **ON** (active), you can recenter the map with the boundary visible.

### Procedure:

In the **Set Boundary** popover, to recenter the boundary on the map, tap **My Location**.

## 18.5.2.3

## Recentering the Map to Your Location

When the boundary is **ON** (active), you can recenter the map to your location.

**Procedure:**

At the lower left side of the map, tap the **My Location** button.

**Result:** The map recenters to your location while the boundary is off and the map recenters to the boundary center while the boundary is on.

## 18.5.2.4

## Boundary Settings

All **Boundary** settings are shown in the default state. You can change the **Boundary** settings while the boundary is inactive.



**NOTE:** Changing the **Boundary** settings requires you to disable the boundary. You can change the **Boundary** settings while the boundary is inactive. To disable the boundary, you can tap the **Set Boundary** toggle to the **OFF** state.

This section contains the following boundary settings:

- [Changing the Boundary Settings on page 131](#)
- [Changing the Update Interval on page 132](#)
- [Changing the Active Boundary Time on page 132](#)
- [Changing the Notify Me Setting on page 132](#)
- [Changing the Notify Member Setting on page 133](#)
- [Changing the Initial Member Notification Setting on page 133](#)

## 18.5.2.4.1

### Changing the Boundary Settings

All **Boundary** settings can be changed in the map's **Set Boundary** settings.

**Procedure:**

1. From within the **Map**, tap **Map Boundary Enable**.

The **Set Boundary** popover displays.

**Figure 40: Setting the Boundary Popover**



2. Tap the **Settings** button.  
**Boundary Settings** display.
3. Find the settings you want to change and follow the instructions.

#### 18.5.2.4.2

### Changing the Update Interval

This setting allows you to set how often each talkgroup member location reports their location. Range: 1 to 60 minutes.



**NOTE:** Smaller intervals shorten the battery life for talkgroup members.

#### Procedure:

1. From the **Boundary Settings** screen, scroll to and tap the **Update Interval** settings.  
The **Update Interval Settings Options** display.
2. Tap the **minutes** text box.
3. To set how often the talkgroup member location is updated, type a number in the range from 1 to 60 minutes using the on-screen keyboard.
4. At the upper left of the screen, to return to the map, tap **Back**.

#### 18.5.2.4.3

### Changing the Active Boundary Time

This setting allows you to set how long the boundary is active. The boundary automatically turns off after the boundary time has expired. Range: 1 hour to 7 days.

#### Procedure:

1. From the **Boundary Settings** screen, scroll to and tap the **Active Boundary Time** settings.  
The **Active Boundary Time Settings Options** display.
2. To set how long the boundary is active, tap the **Days** text box.  
The time must be up to seven days.
3. To set how long the boundary is active, tap the **Hours** text box.  
The time must be up to 168 hours.



**NOTE:** You cannot exceed a maximum total of 7 days or 168 hours combined.

4. To return to the map, located at the upper left of the screen, tap **Back**.

#### 18.5.2.4.4

### Changing the Notify Me Setting

This setting allows you to set if you, as the boundary owner, are notified when a talkgroup member crosses the boundary when the boundary is on.



**NOTE:** Boundary alerts are simple notifications and are included in the history.

#### Procedure:

1. From the **Boundary Settings** screen, scroll to the **Notify Me** settings.
2. To toggle the state of the setting, tap **On/Off**.

#### 18.5.2.4.5

### Changing the Notify Member Setting

This setting allows you to set if a talkgroup member is automatically sent a notification when entering and leaving the defined boundary when the boundary is active.

**Procedure:**

1. From the **Boundary Settings** screen, scroll to the **Notify Member** settings.
2. To toggle the state of the setting, tap **On/Off**.
3. Continue with [Changing the Initial Member Notification Setting on page 133](#).

#### 18.5.2.4.6

### Changing the Initial Member Notification Setting

This setting allows you to set if talkgroup members automatically receive an initial notification when a boundary is created for those inside or outside the boundary.

**Prerequisites:** The **Notify Member** setting must be enabled to use this setting. For more information, see [Changing the Notify Member Setting on page 133](#)

**Procedure:**

1. Scroll to and tap the **Initial Member Notification** settings.  
The **Initial Member Notification Setting Options** display.
2. Perform one of the following actions:
  - To send the first notification to members outside the boundary, tap **Outside Boundary**.
  - To send the first notification to members inside the boundary, tap **Inside Boundary**.
3. Tap **OK**.

#### 18.5.3


### Creating a Quick Group from the Map

You can create a quick group by selecting members from the map. This action allows you to choose members based on their location. You can also add other members from your contacts.

**Procedure:**

1. From the map, tap the **Tracked Group Selector** button on the action bar.

**Figure 41: Map**

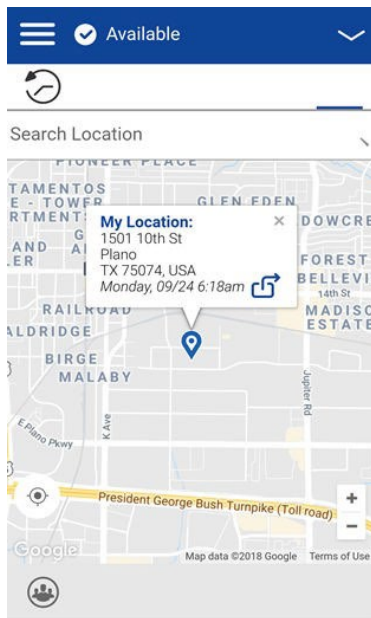

2. On the action bar, tap **Quick Group**.
3. Zoom in until you view all the contacts that you want to select.




**TIP:** You can also tap any group member to select them and add them to the member list.




**NOTE:** A quick group can have up to 10 members. If you have more than 10 members in view, you cannot select all at once. You can zoom in so that there are fewer than 10 members in view, select all, or select the members individually.

**Figure 42: Creating a Quick Group from the Map**

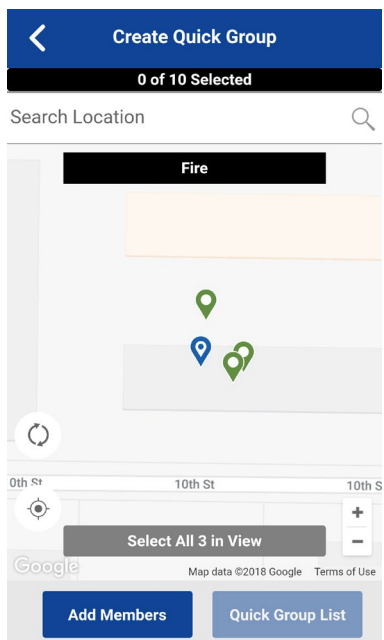

4. Tap the **Select All in View** for a Mobile Quick Group.  
All selected contact pins turn purple.

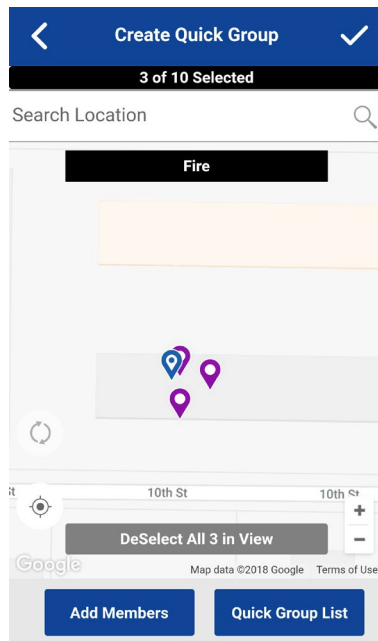**Figure 43: Creating a Quick Group from the Map**

5. After selecting the group members, in the title bar, tap **Save**.  
The **Call** screen displays.
6. Press and hold the **PTT** button.  
A quick group call is started, a chirp tone is heard, and the **PTT** button changes color, indicating you have taken the floor.
7. To allow the other members of the group to take the floor and speak, release the **PTT** button.
8. To end the call, tap **End Call**.

### 18.5.3.1

## Adding Members to a Quick Group

**Prerequisites:** You must follow the procedure in [Creating a Quick Group from the Map on page 133](#).

**Procedure:**

1. Tap or touch **Add Members**.  
The **Add Members** screen displays.
2. Select the additional members to add from **Group Members** or **Contacts**.
3. Tap or touch **Save**.

### 18.5.3.2

## Removing Quick Group Members

### Procedure:

1. Tap or touch the **Quick Group List** button.  
The **Quick Group List** displays.
2. Tap or touch the members to remove.
3. Tap or touch **Save**.  
The **Quick Group Call** screen displays.

## Chapter 19

# Integrated Secure Messaging

This section describes Push-to-Talk (PTT) Integrated Secure Messaging.

This section is organized as follows:

- [Integrated Secure Messaging Icons on page 138](#)
- [Multimedia Content on page 138](#)
  - [Text Messaging on page 138](#)
  - [Image Messaging on page 148](#)
  - [Video Messaging on page 149](#)
  - [Voice Messaging on page 149](#)
  - [File Messaging on page 151](#)
  - [Receiving a Location Message on page 152](#)
- [Message Actions on page 153](#)

3GPP MCDATA compliant Integrated Secure Messaging allows you to send and receive secure text messages, multimedia content, and location information to and from other PTT users.

Messages are delivered to recipients while they are online. If a recipient is offline, messages wait to be delivered for up to a week until the recipient logs in and becomes online. After a message notification is received for multimedia messages, you have up to 30 days to download the image, video, voice message, or file.

For MCPTT users, messages are only delivered to recipients who are affiliated with the group. Delivery of messages while offline does not apply.



**NOTE:** Release 12.3 introduces the 3GPP MCDATA compliant messaging solution. Users upgrading from previous release versions go under migration—one-time, one-way migration—when logged in for the first time to version 12.3 of the application. All existing messages that are downloaded to the device up to 20,000 within two years and all messages stored in the cloud for shared device users are migrated. Previously unread messages are marked read during the migration.



**NOTE:** The notification time for messages to be delivered may vary depending on the service provider. The time a multimedia message is available for download is set by the service provider.

Multimedia content can include text, images, videos, voice, and files. Location messages allow you to send and receive location information.



**NOTE:** You can send messages to other users if you have the feature enabled. However, your administrator may disable your ability to send and receive text, text and multimedia, or location messages.

Your network operator may not allow a user to save any incoming message attachments to the local device memory; therefore, the SAVE button would not be visible.

While drafting a message, if the PTT application is interrupted by another application or by an incoming PTT call, the user can continue composing the message after the user returns to the PTT application or when the PTT call ends.

When you send messages, you see the status of the message. The message status shows one of the following:

### **Pending**

Indicates that the message is waiting to be sent. Any messages that are created while the network connection is not available are preserved until the network connection is restored and sent.

### **Sent**

Indicates that the message was sent from your device.

### **Delivered**

For 1:1 messages only, indicates that the message was delivered to the recipient. This status does not mean that the user downloaded any multimedia, but 3GPP MCDATA messaging marks messages as delivered when a multimedia attachment is downloaded.

### **Failed**

Indicates that the message could not be sent. This failure can happen if the recipient is not allowed to receive messages or if there was a problem sending the message from your device.



**NOTE:** There is no delivery status for talkgroup messages.

## 19.1

# Integrated Secure Messaging Icons

You can use the Integrated Secure Messaging icons to locate the information you need.

For more information on the Integrated Secure Messaging icons, see [Integrated Secure Messaging Icons on page 53](#).

## 19.2

# Multimedia Content

Multimedia content includes files as a message attachment. All multimedia content is automatically compressed before sending. Multimedia messages are also shown in threaded history along with the call history.



**NOTE:** The multimedia attachment size configuration includes the messaging overhead. For example, with 20 MB of size configuration, actual multimedia that can be sent are approximately 17-18 MB in size.

The maximum multimedia attachment size that can be transferred (originated or received) is set by your service provider. If file size is exceeded, you receive an error message.



**NOTE:** The multimedia attachment size configuration includes the messaging overhead. For example, with 20 MB of size configuration, actual multimedia that can be sent will be approximately 17-18 MB in size.

### 19.2.1

## Text Messaging

Text messages let you send a text to other PTT users, even if they are offline. You can reply to the sender and reply all for talkgroup messages. Messages can be forwarded to other PTT users, and delivery receipts allow the sender to see that a message was delivered.

Broadcasters can send a one-way text message to other broadcast talkgroup members. Broadcast talkgroup members cannot reply or send text messages to the talkgroup.

Text messages also show in threaded history along with the call history and are sent by selecting a contact or a talkgroup.

You can also perform any of the following text message actions:

- [Sending a Text Message on page 139](#)

- [Selecting Quick Text on page 141](#)
- [Adding Quick Text on page 142](#)
- [Deleting Quick Text on page 145](#)
- [Deleting a Message on page 98](#)
- [Receiving a Text Message on page 146](#)

### 19.2.1.1

## Sending a Text Message

You can send text messages by using the **Call** screen for a selected contact, a selected talkgroup, or a contact or talkgroup context menu.




**TIP:** Alternatively, you can send messages from the **History**.

### Procedure:


1. Perform one of the following actions:
  - Select a contact from the **Contacts List** and touch and hold.
  - Select a talkgroup from the **Talkgroup List** and tap and hold.

A **Context Menu** displays.

**Figure 44: Contact Context Menu**

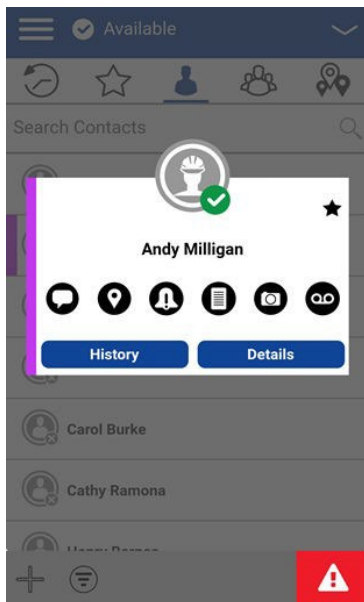

**Figure 45: Talkgroup Context Menu**

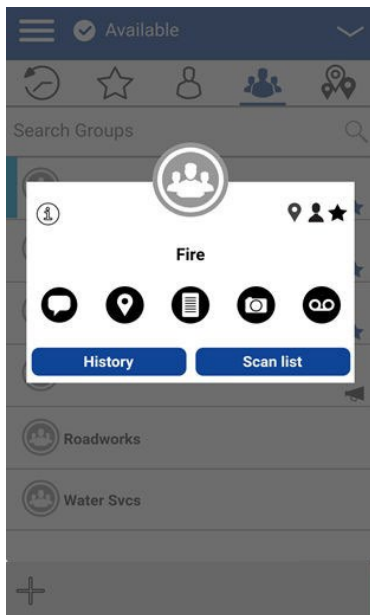


2. To initiate a text message, on the **Context Menu**, select the **Message** button.
3. Type your message using the on-screen keyboard.
4. To the right of the message box, tap **Send**.

You can also add **Quick Text**. For more information, see [Adding Quick Text on page 142](#).

**Figure 46: Text Message Box**



 **NOTE:** While drafting a text message and tapping the **Back** button, the following confirmation message displays: `Message has not been sent`. You can tap **Yes** to discard or **No** to cancel.

5. Your text message displays in the history details.

## 19.2.1.2

## Selecting Quick Text

Quick text is a feature that lets you save the text you can use to respond to messages quickly. You can add up to 20 messages.

### Procedure:

1. Tap the **Message** button.



**TIP:** To create a quick text, see [Adding Quick Text on page 142](#).

The text box displays.


2. In the text box, tap the **Quick Text Access** button.

**Figure 47: Text Box**



The **Select Quick Text** displays.


**Figure 48: Editing Quick Text**

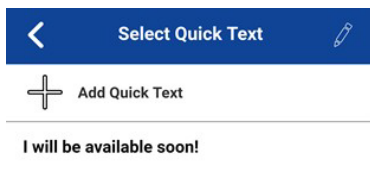

3. Tap the desired quick text.

The selected quick text is added to your message, and the message entry box displays again.

**Figure 49: Sending Quick Text**

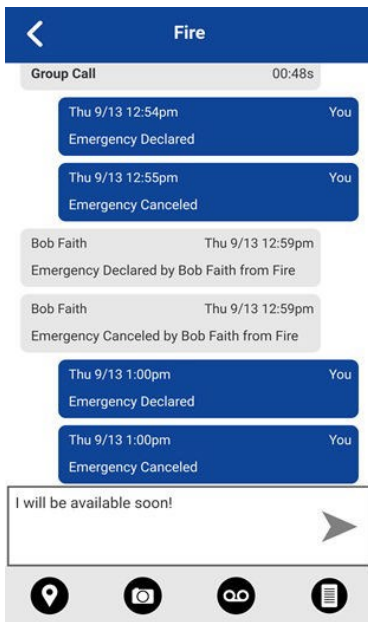

4. To send the text, tap the **Send Text Message** button.

### 19.2.1.3

## Adding Quick Text

Quick text is a feature that lets you save the text you can use to respond to messages quickly. You can add up to 20 messages.


### Procedure:

1. Tap the **Message** button.  
The text box displays.


**Figure 50: Text Box**



2. In the text box, tap the **Quick Text Access** button. The **Select Quick Text** screen displays.

 
**Figure 51: Selecting Quick Text**

3. Tap the **Add Quick Text** button.  
The **Enter Quick Text** screen displays.

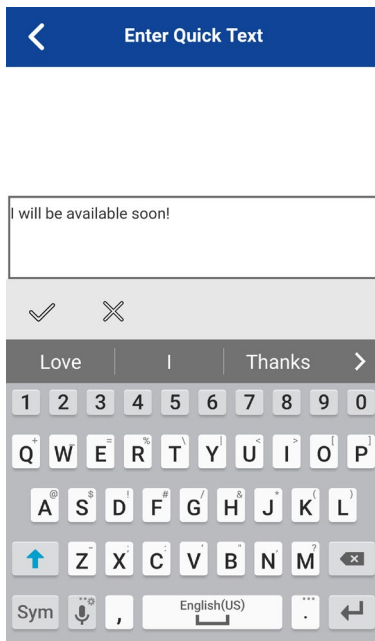**Figure 52: Entering Quick Text**

4. Type the quick text to use.
5. Perform one of the following actions:
  - To save the quick text, tap the **Save** button.

**Figure 53: Creating Quick Text**

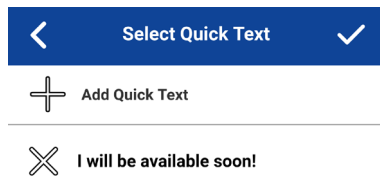


- To cancel the operation, tap the **Cancel** button.  
The following message displays: Your entered quick text will be cleared. Do you wish to continue?

6. If finished, tap **Save**.

7. Tap the newly created quick text.

The selected quick text is added to your message, and the message entry box displays again.

**Figure 54: Sending Quick Text**

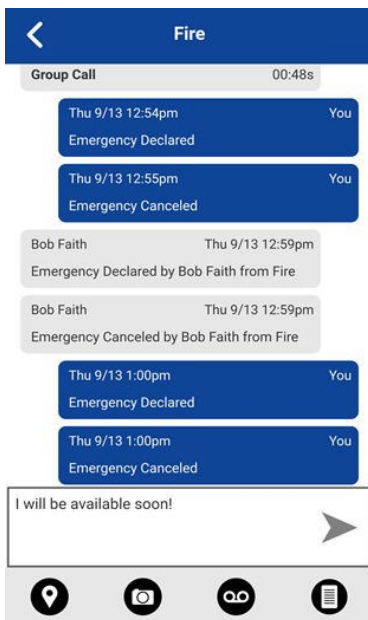

8. To send the text, tap the **Send Text Message** button.

## 19.2.1.4

## Deleting Quick Text


**Procedure:**

1. Tap the **Message** button.

The text box displays.


**Figure 55: Text Box**

2. In the text box, tap the **Quick Text Access** button. The **Select Quick Text** screen displays.

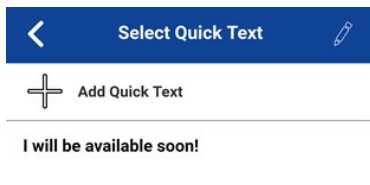**Figure 56: Editing Quick Text**

3. At the upper right of the screen, tap the **Edit** button. The **Select Quick Text** screen displays.

**Figure 57: Deleting Quick Text**

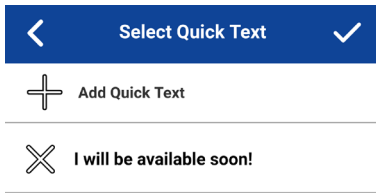

4. To delete, next to the quick text, tap the **X**.  
A confirmation dialog displays.

**Figure 58: Deleting Quick Text Confirmation**



5. Perform one of the following actions:
  - To delete the quick text, tap **Yes**.
  - To cancel action, tap **No**.
6. Tap **Save**.

### 19.2.1.5


## Receiving a Text Message

When you receive a text message, you receive a system notification showing the name of the sender and a preview of the text message. You can tap the notification, and the PTT application opens the history for that sender or talkgroup. You can reply to the sender and reply to all for talkgroup messages or forward them to other PTT users. Text messages are shown in threaded history along with the call history.

### Procedure:

1. Perform one of the following actions:
  - Tap the system notification for the message.
  - From the **History** screen, scroll down and locate any unread messages to read. Unread messages are indicated by an unread message indicator (dot). The unread message indicator disappears when you tap the **History Details** button to reply to the message.


**Figure 59: History**

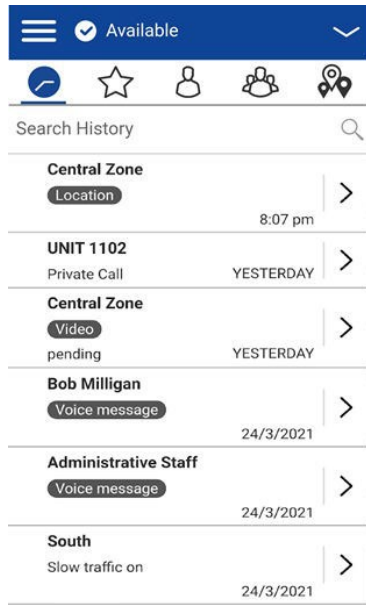

2. Tap the **History Details** button to read the message content.

**Result:** The **History Details** display.

**Figure 60: History Details**

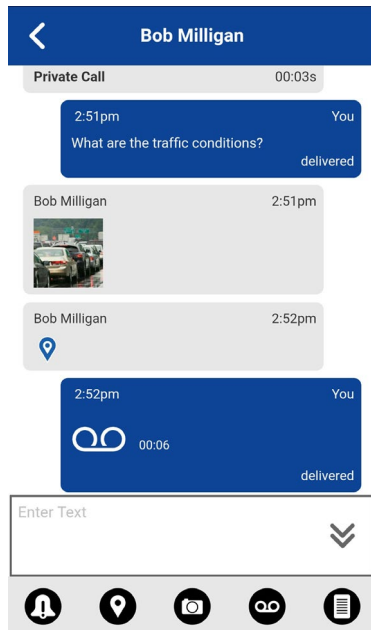

**TIP:** You can also reply to the sender and reply all (for talkgroup messages) and forward the message to other PTT users.

You can also perform any of the following message actions:

- [Forwarding a Message to a Contact or Talkgroup on page 153](#)
- [Forwarding a Message to a Quick Group on page 154](#)
- [Replying to a Sender on page 154](#)

- [Replying to Talkgroup \(Talkgroup Messages\) on page 155](#)
- [Sharing My Location from History on page 158](#)
- [Sending a Photo or a Video from History on page 156](#)
- [Sending a Voice Message from History on page 157](#)
- [Sending a Text Message from History on page 155](#)
- [Sending a File from History on page 157](#)
- [Deleting a Message on page 98](#)
- [Copying a Text Message from History on page 156](#)

### 19.2.2

## Image Messaging

When you receive an image message, a notification displays. Thumbnails are shown for photos, and the automatic download of attachments is based on the application settings. The recipient can reply to the sender and reply to all for talkgroup messages. You can forward messages to other PTT users, and delivery receipts allow you to see if the message was delivered.

You can also perform any of the following message actions:

- [Saving an Image Message on page 148](#)
- [Forwarding a Message to a Contact or Talkgroup on page 153](#)
- [Forwarding a Message to a Quick Group on page 154](#)
- [Replying to a Sender on page 154](#)
- [Replying to Talkgroup \(Talkgroup Messages\) on page 155](#)
- [Deleting a Message on page 98](#)

### 19.2.2.1

## Saving an Image Message

You can save a received image from any history entry on the **Details** screen from the **History** tab.

### Procedure:

1. From the **History** tab, find the conversation that contains the image you want to save and tap the **History Details** button.
2. Tap the **Image**.  
The **Photo Preview** screen displays.
3. To save to the device's PTT application album in the **Gallery**, tap the **Gallery** button.
4. Perform any of the following actions:
  - To forward the image to a contact, quick group, or talkgroup, tap the **Forward** button.
  - To view the name, sender, date, size, and resolution, tap the **Details** button.
  - To delete the image, tap the **Delete** button.

## 19.2.3

## Video Messaging

When you receive a video message, a notification displays. Thumbnails are shown for videos, and the automatic download of attachments is based on the application settings. The recipient can reply to the sender and reply to all for talkgroup messages. You can forward messages to other PTT users, and delivery receipts allow you to see if the message was delivered.

You can also perform any of the following message actions:

- [Saving a Video Message on page 149](#)
- [Forwarding a Message to a Contact or Talkgroup on page 153](#)
- [Forwarding a Message to a Quick Group on page 154](#)
- [Replying to a Sender on page 154](#)
- [Replying to Talkgroup \(Talkgroup Messages\) on page 155](#)
- [Deleting a Message on page 98](#)

## 19.2.3.1

### Saving a Video Message

You can save a received video message from any history entry on the **Details** screen from the **History** tab.

**Procedure:**

1. From the **History** tab, find the conversation that contains the video you want to save and tap the **History Details** button.
2. Tap the **Video**.  
The **Video Preview** screen displays.
3. To save to the device's **Gallery**, tap the **Gallery** button.
4. Perform any of the following actions:
  - To play the video, tap the **Play** button.
  - To forward the video to a contact, quick group, or talkgroup, tap the **Forward** button.
  - To view the name, sender, date, size, and duration, tap the **Details** button.
  - To delete the video, tap the **Delete** button.

## 19.2.4

## Voice Messaging

A notification displays when a user receives a voice message. You can reply to the sender and reply to all for talkgroup messages. You can forward messages to other PTT users, and delivery receipts allow you to see if the message was delivered. Automatic download of attachments is based on the user settings.

### 19.2.4.1

## Saving a Voice Message

You can save a received voice message from any history entry on the **Details** screen from the **History** tab.



**NOTE:** To send a voice message, see [Sending a Voice Message from History on page 157](#).

#### Procedure:

1. From the **History** tab, find the conversation that contains the voice message you want to save and tap the **History Details** button.
2. Tap the **Voice Message**.  
The **Audio Preview** screen displays.

3. To save to the device's PTT application album to the Gallery, tap the **Gallery** button.



**NOTE:** The voice message is in the same location as the photos.



**TIP:** To access the saved files, use the **File Manager** application.

4. Perform any of the following actions:
  - To play the voice message, tap the **Play** button.
  - To forward the voice message to a contact, quick group, or talkgroup, tap the **Forward** button.
  - To view the name, sender, date, size, and duration, tap the **Details** button.
  - To delete the voice message, tap the **Delete** button.

### 19.2.4.2

## Receiving a Voice Message

You can play a received voice message by tapping the message. The **Audio preview** screen displays. Tap the **Play** option to play the voice message.

#### Procedure:

1. Tap the **Play** button to play the voice message.



**NOTE:** If the message is not downloaded, tap the message and wait for the download, and tap again to display the **Audio Preview** screen.

The **Audio Preview** screen displays.

2. Optional: Perform any of the following message actions:
  - [Forwarding a Message to a Contact or Talkgroup on page 153](#)
  - [Forwarding a Message to a Quick Group on page 154](#)
  - [Replying to a Sender on page 154](#)
  - [Replying to Talkgroup \(Talkgroup Messages\) on page 155](#)
  - [Deleting a Message on page 98](#)

## 19.2.4.3

## Sending a Voice Message from History

You can send a voice message by recording and sending from within the PTT application. When you decide to send a voice message, you can record, preview, re-record, erase, and send the voice message. Also, you can record a voice message from any history entry on the **History Details** screen from the **History** tab.

**Procedure:**

1. From the **History** tab, find the conversation that contains the message you want to forward and tap the **History Details** button.
2. In the actions, tap the **Voice Message** button. A **Ready Record** screen displays.
3. Press and hold the **Record** button and begin speaking your voice message.
4. When complete, release the **Record** button.
5. To review your message, tap the **Playback** button.
6. Perform one of the following actions:
  - At the upper right, tap the **Save** button.
  - To open a **Discard Confirmation** message, at the upper left, tap the **Cancel** button.
7. Perform one of the following actions:
  - To discard the voice message, tap **Yes**.
  - To return to the recorded message and the message is sent, tap **No**.

## 19.2.5

## File Messaging

A notification displays when a user receives a file message. The recipient can reply to the sender and reply to all for talkgroup messages. You can forward messages to other PTT users, and delivery receipts allow you to see if the message was delivered. The automatic download of attachments is based on the application settings.

## 19.2.5.1

### Sending a File Message

You can send a file message from within the PTT application. File messages support Microsoft Office files and PDF.

To send a file message, see [Sending a File from History on page 157](#).

### 19.2.5.2

## Receiving a File Message

You can view a received file message by tapping the message. The **File Preview** screen displays. You can tap the **File** icon, located at the center of the screen to view, and the built-in file viewer opens.



**TIP:** If the message is not downloaded, tap the message and wait for the download and tap again to display to the **File Preview** screen.

You can also perform any of the following message actions:

- [Forwarding a Message to a Contact or Talkgroup on page 153](#)
- [Forwarding a Message to a Quick Group on page 154](#)
- [Replying to a Sender on page 154](#)
- [Replying to Talkgroup \(Talkgroup Messages\) on page 155](#)
- [Deleting a Message on page 98](#)

### 19.2.5.3

## Saving a File Message

You can save a received file from any history entry on the **Details** screen from the **History** tab.

### Procedure:

1. From the **History** tab, find the conversation that contains the file you want to save and tap the **History Details** button.
2. Tap the **File**.  
The **File Preview** screen displays.
3. To save to the device's PTT application album to the **Gallery**, tap the **Gallery** button. The file is in the same location as the photos.



**TIP:** Use the **File Manager** application to access the saved files. For more information, see the device user manual.

4. Perform any of the following actions:
  - At the center of the screen to view, tap the **File** icon. The built-in file viewer opens.
  - To forward the voice message to a contact, quick group, or talkgroup, tap the **Forward** button.
  - To view the name, sender, date, and size, tap the **Details** button.
  - To delete the voice message, tap the **Delete** button.

### 19.2.6

## Receiving a Location Message

When a user receives a location message, a notification displays. The recipient can reply to the sender and reply to all for talkgroup messages. You can forward messages to other PTT users, and delivery receipts allow you to see if the message was delivered. Location messages can also show in threaded history, along with the call history.

If you want to share your location on the map within the PTT application, you can select the location **Pin** icon. Your device provides the location.



**NOTE:** Location services must be enabled in the device and the application must be granted permission to use location services.

## Location Message Delivery

If you want to share your location, see [Sharing My Location from History on page 158](#).

## Receiving a Location Message

You can view a received location message by tapping the message. The **Map** screen displays. You can also perform any of the following message actions:

- [Forwarding a Message to a Contact or Talkgroup on page 153](#)
- [Forwarding a Message to a Quick Group on page 154](#)
- [Deleting a Message on page 98](#)

### 19.3

## Message Actions

You can send messages to offline users, who receive the messages the next time they become online. You can also send messages to any history entry.

Additionally, you can perform any of the following message actions:

- [Forwarding a Message to a Contact or Talkgroup on page 153](#)
- [Forwarding a Message to a Quick Group on page 154](#)
- [Replying to a Sender on page 154](#)
- [Replying to Talkgroup \(Talkgroup Messages\) on page 155](#)
- [Sharing My Location from History on page 158](#)
- [Sending a Photo or a Video from History on page 156](#)
- [Sending a Voice Message from History on page 157](#)
- [Sending a Text Message from History on page 155](#)
- [Sending a File from History on page 157](#)
- [Deleting a Message on page 98](#)
- [Copying a Text Message from History on page 156](#)

### 19.3.1

## Forwarding a Message to a Contact or Talkgroup

You can forward a message to a contact on the **History Details** from the **History** tab.

### Procedure:

1. From the **History**, find the conversation that contains the message you want to forward and tap the **History Details** button.
2. Tap and hold the message entry you want to forward.  
A **Context Menu** displays.
3. Perform one of the following actions:
  - To open the **Select Contact to Message** screen, tap the **Forward to Contact** option.
  - To open the **Select Group to Message** screen, tap the **Forward to Group** option.

4. Tap the contact or talkgroup to select.  
The message is copied to the text field.
5. Tap the **Send Message** button.  
The message is sent to the contact or talkgroup.

### 19.3.2

## Forwarding a Message to a Quick Group

You can forward a message to a quick group on the **History Details** from the **History** tab.

#### Procedure:

1. From the **History** tab, find the conversation that contains the message you want to forward and tap the **History Details** button.
2. Tap and hold the history entry.  
A **Context Menu** displays.
3. To open the **Select Contacts to Message** screen, tap the **Forward to Quick Group** option.
4. Tap one or more contacts.
5. At the upper right, tap the **Save** button. The message is copied to the text field.
6. Tap the **Send Message** button.  
The message is sent to the quick group.
7. Perform one of the following actions:
  - To continue, select **OK**.  
The message is sent to the contact or talkgroup.
  - To cancel, select **No**.

### 19.3.3

## Replying to a Sender

You can reply to sender for a talkgroup on the **Details** screen from the **History**.

#### Procedure:

1. From the **History**, find the conversation that contains the message you want to reply and tap the **History Details** button.
2. Tap and hold the history entry to open a **Context Menu**.
3. To open the **Group** screen, tap the **Reply to Group** option.
4. Enter the text using the on-screen keyboard.
5. Tap the **Send Message** button.  
The message is sent to the talkgroup.

### 19.3.4

## Replying to a Talkgroup (Talkgroup Messages)

You can reply to a talkgroup on the **Details** screen from the **History** tab.

### Procedure:

1. From the **History** tab, find the conversation that contains the message you want to reply and tap the **History Details** button.
2. Tap and hold the history entry to open a **Context Menu**.
3. To open the **Group** screen, tap the **Reply to Group** option.
4. Enter the text using the on-screen keyboard.
5. Tap the **Send Message** button.

The message is sent to the talkgroup.

### 19.3.5

## Deleting a Message

You can delete a message on the **History Details** screen.

### Procedure:

1. Navigate to the history details, and tap the message.  
The following confirmation message displays: Delete message?
2. Perform one of the following actions:
  - To delete, select **Yes**.
  - To cancel, select **No**.

### 19.3.6

## History Message Actions

You can send messages to any history entry.

You can also perform any of the following message actions:

- [Sending a Text Message from History on page 155](#)
- [Copying a Text Message from History on page 156](#)
- [Sending a Photo or a Video from History on page 156](#)
- [Sending a Voice Message from History on page 157](#)
- [Sending a File from History on page 157](#)
- [Sharing My Location from History on page 158](#)

#### 19.3.6.1

### Sending a Text Message from History

You can send a text message from the **History Details** screen.

### Procedure:

1. From the **History** tab, find the conversation and tap the **History Details** button.

2. Tap the **Enter Text** field.  
An on-screen keyboard displays.
3. Enter the message using the on-screen keyboard.
4. Tap the **Send Message** button.  
The message is sent to the talkgroup.

#### 19.3.6.2

### Copying a Text Message from History

You can copy a text message and send to a contact on the **History Details** screen from the **History** tab.

#### Procedure:

1. From the **History** tab, find the conversation that contains the message you want to forward and tap the **History Details** button.
2. Tap and hold the history entry.  
A **Context Menu** displays.
3. Tap the **Copy Message** option. The message is copied to the clipboard.
4. Paste the message to any message and send.

#### 19.3.6.3

### Sending a Photo or a Video from History

You can send a photo or a video from any history entry on the **Details** screen from the **History** tab.

#### Procedure:

1. From the **History** tab, find the conversation that contains the message you want to forward and tap the **History Details** button.
2. Tap the **Camera** button located in the actions to open the **Context Menu**.
3. Select any of the following options:
  - Tap **Take a photo**.  
The camera displays and allows you to take a photo.
  - Tap **Gallery**.  
The gallery displays and allows you to select any photo in the gallery.
  - Tap **Record a Video**.  
The video displays and allows you to record a video.
4. Tap **OK**.  
A send confirmation message displays.
5. Perform one of the following actions:
  - To send, tap **Yes**.
  - To cancel, tap **No**.

## 19.3.6.4

## Sending a Voice Message from History

You can send a voice message by recording and sending from within the PTT application. When you decide to send a voice message, you can record, preview, re-record, erase, and send the voice message. Also, you can record a voice message from any history entry on the **History Details** screen from the **History** tab.

**Procedure:**

1. From the **History** tab, find the conversation that contains the message you want to forward and tap the **History Details** button.
2. In the actions, tap the **Voice Message** button. A **Ready Record** screen displays.
3. Press and hold the **Record** button and begin speaking your voice message.
4. When complete, release the **Record** button.
5. To review your message, tap the **Playback** button.
6. Perform one of the following actions:
  - At the upper right, tap the **Save** button.
  - To open a **Discard Confirmation** message, at the upper left, tap the **Cancel** button.
7. Perform one of the following actions:
  - To discard the voice message, tap **Yes**.
  - To return to the recorded message and the message is sent, tap **No**.


## 19.3.6.5


## Sending a File from History

You can send a file from any history entry on the **History Details** screen from the **History** tab.

**Procedure:**

1. From the **History** tab, find the conversation for a contact or talkgroup to which you want to send a file and tap the **History Details** button.
2. Tap the **Attach File** button located in the **Action Bar**.
 

 **TIP:** You can also send a file from the **Call** screen by tapping the **Send Text** button. On the text **Message History** screen, you will find the **Attach File** button.

 **NOTE:** You can access files from your device storage or other installed applications such as Dropbox, and Google Drive, etc.
3. Navigate to the location of the file to attach and tap.
 

A send confirmation message displays.
4. Perform one of the following actions:
  - To send, tap **OK**.
  - To cancel, tap **Cancel**.

### 19.3.6.6

## Sharing My Location from History

You can share your location from any history entry on the **Details** screen from the **History** tab.

### Procedure:

1. From the **History** tab, find the conversation that contains the message you want to forward and tap the **History Details** button.
2. To open the **My Location** screen, tap the **Location** button located in the actions.
3. Tap the **Share** button on the **My Location** screen. The location is sent.

## Chapter 20

# Video Streaming (Optional)

Optional features may not be included in your Push-to-Talk (PTT) service plan.

The video streaming feature allows you to send a one-way, live streaming video with audio to another PTT user, dispatcher, or a corporate talkgroup.

Recipients can be any PTT contact or corporate talkgroup assigned to you capable of receiving video calls. To receive a group video, your administrator must enable the feature. Only a limited number of participants can receive a group video stream. Anyone with the video feature can originate a live video stream.

You can stream video from the device integrated camera(s) and choose which camera to broadcast. Each video session allows you to stream, and each participant can have a single active video call at a time.

When streaming video to a talkgroup, the video stream is available to any talkgroup member that has group video receive permission and begins streaming as soon as the first recipient accepts the invitation.

Talkgroup members may leave and rejoin a video call at any time.

During a private 1:1 video call, if the recipient of the call leaves the video session, it ends.



**NOTE:** Incoming video calls are not delivered to users in `Do Not Disturb`.

You cannot send a live stream to a broadcast talkgroup.

You must bring the application to the foreground to send a video and see the preview.



**TIP:** Keep the **Video Call** screen in the foreground; otherwise, the camera video transmission becomes blank even though you can hear audio.

For more information on video call settings, see [Settings on page 168](#).

This section is organized as follows:

- [Video Streaming Icons on page 159](#)
- [Minimizing a Video Call on page 160](#)
- [Making a Video Call to a Contact on page 160](#)
- [Making a Video Call to a Quick Group on page 161](#)
- [Making a Video Call to a Talkgroup on page 162](#)
- [Receiving an Incoming Video Call on page 163](#)

## 20.1

### Video Streaming Icons

For more information on video streaming icons, see [Video Streaming Icons on page 58](#).

## 20.2

# Minimizing a Video Call

A user can minimize ongoing streaming video calls to participate in other activities, such as PTT, messaging, location, and more. The minimized video thumbnail on the PTT application can be dragged to any corner of the PTT application to allow users to perform other actions within the PTT application.


### Procedure:

1. To drag the thumbnail, touch and hold the thumbnail before dragging.  
The **Video Call** screen is minimized.
2. Tap the **Video Call screen** again to return to full size.

## 20.3

# Making a Video Call to a Contact

### Procedure:

1. Tap **Contacts** to display the PTT Contacts list.  
 **NOTE:** Your administrator assigns PTT contacts.  
You can mix PTT call audio and video audio, or PTT call audio can have priority. For information on PTT audio, see [Changing the Audio Interaction Setting on page 173](#).
2. Tap on the contact to select the one you want to start a video call with.  
The **Call** screen displays the name of the contact that you are calling in the Call Status, and the **Contacts** button is selected, and active.
3. At the bottom of the screen, tap the **Video** icon.

**Figure 61: Transmitting a Live Video Stream to a Contact**



A private one-to-one video call is started, dialing and ringing the contact. When the contact accepts the incoming video call, the video call begins.


4. Optional: To mute or unmute the microphone audio sent with the live video stream, tap the **Microphone** icon.
5. Optional: To switch from the rear camera (default) to the front camera, at the top of the screen, tap **Change Camera**.
6. When it cannot be displayed completely, a video with a long contact name and streamer ID displays with “...” and is underlined. To see the full name, tap the **Contact** name or **Streamer ID**.  
A pop-up message on the screen disappears after three seconds.
7. To end the video call transmission, tap **End Call**.

## 20.4

## Making a Video Call to a Quick Group

### Procedure:


1. From the **Contacts**, select your first contact to call.

 **NOTE:** You can mix PTT call audio and video audio, or PTT call audio can have priority. For information on PTT audio, see [Changing the Audio Interaction Setting on page 173](#).

The **Call** screen displays.

2. Tap the **Add Participants** button.  
The **Select Contacts** screen displays.
3. Select up to nine contacts to add to the quick group call.
4. When completed, at the upper right, tap **Save**.
5. At the bottom of the screen, tap the **Video** icon.

**Figure 62: Transmitting a Live Video Stream to a Quick Group**

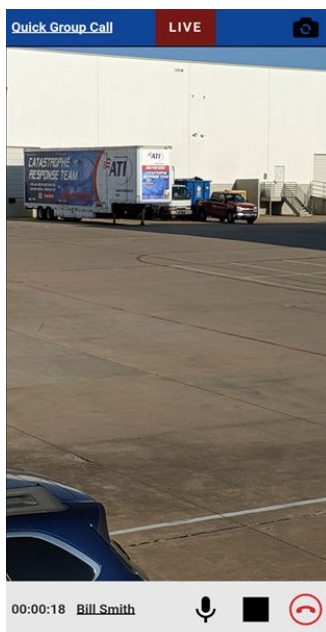

A quick group video call is started, dialing and ringing the group. When the first contact accepts the incoming video call, the video call begins.

6. To mute or unmute the microphone audio sent with the live video stream, tap the **Microphone** icon.
7. To switch from the rear camera (default) to the front camera, at the top of the screen, tap **Change Camera**.
8. When it cannot be displayed completely, a video with a long quick group call and streamer ID displays with “...” and is underlined. To see the full name, tap the **Contact** name or **Streamer ID**.  
A pop-up message on the screen disappears after three seconds.
9. To end the video call transmission, tap **End Call**.

## 20.5

# Making a Video Call to a Talkgroup

### Procedure:

1. Ensure that the talkgroup you want to communicate with is selected.

The talkgroup that you select is the talkgroup you call.



**NOTE:** Corporate talkgroup size is limited to talkgroup members receiving the call. You can mix PTT call audio and video audio, or PTT call audio can have priority. For information on PTT audio, see [Changing the Audio Interaction Setting on page 173](#).




**TIP:** If you try to select another talkgroup, your selection changes to the newly selected talkgroup. You can only select one talkgroup at a time.

2. At the bottom of the screen, tap the **Video** icon.



**NOTE:** Some corporations may automatically assign a talkgroup called `all_subscribers_group`; this talkgroup has all the PTT subscribers from your corporation.

**Figure 63: Transmitting a Live Video Stream to a Talkgroup**

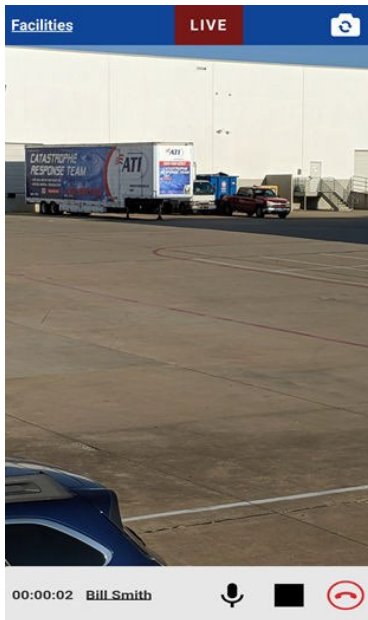

A talkgroup video call is started, dialing and ringing the talkgroup. When the first member accepts the incoming video call, the video call begins.

3. To mute or unmute the microphone audio sent with the live video stream, tap the **Microphone** icon.

4. To switch from the rear camera (default) to the front camera, tap the **Change Camera** button at the top of the screen.
5. When it cannot be displayed completely, a video with a long talkgroup name and streamer ID displays with “...” and is underlined. To see the full name, tap the **Contact** name or **Streamer ID**.  
A pop-up message on the screen disappears after three seconds.
6. To end the video call transmission, tap **End Call**.

## 20.6

# Receiving an Incoming Video Call

You can receive incoming video calls from a private 1:1 or talkgroup. To receive a talkgroup video call, your administrator must enable you to receive group video calls. You can originate a talkgroup video even if you cannot receive talkgroup video calls. As long as you have the video streaming feature enabled, you can receive private 1:1 and quick group video calls. You can manually accept or decline calls that you receive based on the **Auto Answer Video Call** setting.

For more information on the **Auto Answer Video Call** settings, see [Settings on page 168](#).

You can receive an incoming video call from any talkgroup you are assigned. Unlike talkgroup PTT voice calls, video calls are received regardless of your selected talkgroup or talkgroup scanning mode.




**NOTE:** You can mix PTT call audio and video audio, or PTT call audio can have priority. For information on PTT audio, see [Changing the Audio Interaction Setting on page 173](#).

## 20.6.1

# Receiving an Incoming Video Call

When you receive a video call, your device begins to alert.

### Procedure:

1. Perform one of the following actions:
    - To accept the call, from the Incoming Video Call Request, select **Accept**.
    - To reject the call, from the Incoming Video Call Request, select **Decline**.  
When declined, a missed video call entry is added to your conversation history.
-  **NOTE:** Incoming video calls respond differently based on the combination of the phone settings and the PTT application settings. For more information, see [Interacting with Silent or Sound Mode on page 76](#).  
If you receive a video call while transmitting on a PTT call (holding the floor), you will receive a system notification to indicate the incoming video call.
2. To mute or unmute the microphone audio sent with the live video stream, tap the **Microphone** icon.
  3. To switch from the rear camera (default) to the front camera, tap the **Change Camera** button at the top right-hand of the screen.
  4. When it cannot be displayed completely, a video with a long contact name and streamer ID displays with “...” and is underlined. To see the full name, tap the **Contact** name or **Streamer ID**.  
A pop-up message on the screen disappears after three seconds.
  5. To end the video call transmission, tap **End Call**.

## 20.6.2

# Receiving a Video Stream Request

A dispatcher may request that you live stream video. If you accept the request, the video is sent as a private 1:1 video call to the dispatcher. When you receive an incoming video stream request, you can manually accept or decline based on the **Auto Answer Video Call** setting.

For more information on the **Auto Answer Video Call** settings, see [Changing the Audio Interaction Setting on page 173](#).

### Procedure:

1. When you receive a video stream request, perform one of these actions:
  - To answer the call, select **Accept**.  
Accepting the request immediately starts a video session to the dispatcher.
  - To reject the call, select **Decline**.
2. To mute or unmute the microphone audio sent with the live video stream, tap the **Microphone** icon.
3. To switch from the rear camera (default) to the front camera, at the top right-hand of the screen, tap **Change Camera**.
4. When it cannot be displayed completely, a video with a long contact name and streamer ID displays with “...” and is underlined. To see the full name, tap the **Contact** name or **Streamer ID**.  
A pop-up message on the screen disappears after three seconds.
5. To end the video call transmission, tap **End Call**.

## 20.6.3

# Receiving an Unconfirmed Video Stream Request

There may be a situation where a dispatcher wants to initiate a video automatically. Before this function can be used, your administrator must enable it for the dispatcher.

When you receive an unconfirmed video stream request, the call is automatically accepted. For more information on the **Allow Unconfirmed Video Transmission** settings, see [Settings on page 168](#).



**NOTE:** Unconfirmed video pull is not supported with Android 10 and later.

**Chapter 21**

# Airplane Mode

Your phone provides a special mode called Airplane Mode, which disables the ability of the phone to communicate over cellular, Wi-Fi, and Bluetooth connections. When you enable Airplane Mode, you disconnect from the Push-to-Talk (PTT) service.

When you have Airplane Mode enabled on your phone:

- You cannot receive PTT calls or messages.
- You cannot receive alerts from others.
- Other users can see you as offline in their PTT contact list and cannot call or send you an alert.

## Chapter 22

# Accessories and Bluetooth Use

This section describes using accessories and Bluetooth associated with the Push-to-Talk (PTT) application and is organized as follows:

- [Using a Wired Audio Headset on page 166](#)
- [Using Bluetooth on page 166](#)
- [Using a Remote Speaker Microphone on page 167](#)

## 22.1

### Using a Wired Audio Headset

You can use a headset plugged in to your phone for PTT calls.

Whenever you connect the headset, PTT calls are heard automatically over the headset instead of the loudspeaker. You must still use the **PTT** button on the phone to take the floor to speak, even if your headset has a multimedia control button on it. When you disconnect the headset, the loudspeaker again is used for PTT calls.

## 22.2

### Using Bluetooth

By default, whenever your phone connects to a compatible Bluetooth device, the PTT application uses that Bluetooth device for calls. If you disable or unpair your Bluetooth device, the PTT call automatically switches to the loudspeaker.

The PTT application supports the following Bluetooth profiles:

- Hands-Free (HFP)
- Headset (HSP)
- Advanced Audio Distribution Profile (A2DP)

When using PTT over Bluetooth, you must use the **PTT** button on the phone to take the floor and speak.

## 22.2.1

### Car Kit

Many cars allow you to connect your phone to the car audio system using Bluetooth.

You should check the owner's manual for your car to see if your phone is compatible. Once you connect your phone to the audio system of your car, PTT calls also use Bluetooth audio.

You must use the **PTT** button on the phone to take the floor.

## 22.2.2

## External PTT Button

You can use a compatible **Bluetooth Smart (Low-energy Bluetooth) PTT** button with your PTT service. This button can be used in addition to the on-screen PTT button.

## 22.2.3

## Bluetooth for PTT

If your phone can connect to your car audio system and you receive regular cellular calls, PTT calls also work. In the rare circumstance that there is a compatibility problem using PTT with your car audio, but you still want to use Bluetooth for regular cellular calls, you can disable PTT over Bluetooth from within PTT application settings.

For more information on how to disable Bluetooth, see [Using Bluetooth on page 186](#).

## 22.3

## Using a Remote Speaker Microphone

A Remote Speaker Microphone (RSM) is an accessory made especially for handling PTT calls. The RSM has a loudspeaker and **PTT** button built-in which lets you remotely control the PTT application on your phone.

There are two types of RSMs:

- Those that connect by wire to the headset connector of the phone.
- Those that use Bluetooth.

## 22.3.1

### Wired

A wired RSM connects to the USB-C connector of the phone. The RSM has a loudspeaker and microphone, along with a **PTT** button.

The **PTT** button allows you to take the floor during a PTT call and speak. The **PTT** button on the RSM works just like the **PTT** button on the phone. Depending on the RSM, there may also be a connection for you to use a headset with the RSM.

You should check the RSM owner's manual for information specific to the accessory. With a wired RSM, you control the loudspeaker volume using the volume keys on the phone and the volume buttons on the RSM.



**NOTE:** The PTT application must be in the foreground to take the floor using the wired accessory.

## 22.3.2

### Bluetooth

A Bluetooth-connected RSM gives you all the features of a wired RSM without being tethered by a cord. In addition to having a loudspeaker and **PTT** button, a Bluetooth RSM also has a volume control. You do not use the volume buttons on your phone to control the volume but rather the volume control on the RSM itself.

A Bluetooth RSM must be paired to your phone before it can be used. For instructions on how to pair the RSM with your phone, see the documentation that comes with the RSM.

## Chapter 23

# Settings

This section describes the settings within the Push-to-Talk (PTT) application and is organized as follows:

- [Accessing the PTT Application Settings on page 169](#)
- [Important Message on page 169](#)
- [Advanced on page 170](#)
- [Alert Repeat on page 171](#)
- [Alert Tone on page 172](#)
- [Allow Unconfirmed Video Transmission on page 172](#)
- [Audio Interaction on page 173](#)
- [Auto Answer Video Call on page 173](#)
- [Auto Download on page 173](#)
- [Auto Start on page 174](#)
- [Broadcast Call Confirmation on page 175](#)
- [Background Mode on page 174](#)
- [Call From Lock Screen on page 175](#)
- [Call Priority on page 176](#)
- [Capacity on page 176](#)
- [Contact Sorting on page 176](#)
- [Display Name on page 177](#)
- [Emergency on page 177](#)
- [Enhanced Loudness on page 178](#)
- [History Sorting on page 179](#)
- [In Call Tones on page 179](#)
- [Instant Personal Alert on page 180](#)
- [Logout on page 180](#)
- [Message Alert on page 181](#)
- [Missed Call Alert on page 182](#)
- [My PTT Number on page 182](#)
- [Network Loss Tone Repeat on page 183](#)
- [Network Up/Down Tones on page 183](#)
- [One Touch Action on page 184](#)
- [Privacy Mode on page 185](#)
- [PTT Key on page 185](#)
- [Restore Defaults on page 186](#)
- [Using Bluetooth on page 186](#)

- [Voice Message Fallback on page 187](#)
- [Vibrate Alert on page 186](#)
- [Volume Boost on page 187](#)

### 23.1

## Accessing the PTT Application Settings

You can change all settings, except for the **Boundary** settings in the PTT application settings.

### Procedure:

1. From within the [Menu on page 40](#), tap the **Settings** option.



**NOTE:**

For more information on how to change the **Boundary** settings, see the [Boundary Settings on page 131](#) section.

The **Menu** icon is at the upper left corner of the **Main** screen.

2. Find the settings you want to change and follow the instructions.



**NOTE:** All settings show in the default state.

### 23.2

## Important Message

Notifications are sent periodically to ensure that the application is up-to-date with the most current software.

When an update is available, you receive a message when you log in to the PTT application. Important Message notifications show with a yellow star on the **Menu** settings option, and the **Important Message** settings. If there are no important message notifications available, you do not receive a message or see the setting.

For more information, see [Application Updates on page 34](#).

#### 23.2.1

## Upgrading the PTT Application

### Procedure:

1. From the **Settings** screen, scroll to and tap the **Important Message** setting.
2. From the **Important Message Notification**, perform one of the following actions:



**NOTE:** The **Important Message Notifications** may vary in content.

- To download the latest application, tap the **Upgrade** button to be directed to the Google Play Store.
- To dismiss the notification, tap the **Dismiss** button.

## 23.3

# Advanced

The **Advanced** settings provide additional settings, which include Audio Profile and Accessory Compatibility, Audio Rate, and Audio Mode.



**NOTE:** These settings are preset and not available on PTT-certified phones.

### 23.3.1

## Changing the Advanced Settings

You can change your Advanced settings as needed.

### Procedure:

From the **Settings**, scroll to and tap the **Advanced** settings.

### 23.3.2

## Audio Profile

The **Audio Profile** setting allows you to select from several audio profiles for the microphone and audio path.

#### 23.3.2.1

### Changing the Audio Profile Setting

You can change your **Audio Profile** setting as needed.

### Procedure:

1. From the **Advanced Settings**, scroll to and tap the **Audio Profile** setting.
2. Tap the desired profile.
3. Tap **OK**.

### 23.3.3

## Audio Rate

The **Audio Rate** setting allows you to select from two microphone sample rates.

You can change the **Audio Rate** setting if the person you are speaking to receives low-volume audio from you. The low-rate option may reduce PTT voice quality but increases transmit volume on some devices.

#### 23.3.3.1

### Changing the Audio Rate Setting

You can change your **Audio Rate** setting as needed.

### Procedure:

1. From the **Advanced Settings**, scroll to and tap the **Audio Rate** setting.
2. Tap the desired option.
3. Tap **OK**.

## 23.3.4

## Audio Mode

The **Audio Mode** setting allows you to select from two options for microphone audio mode. Changing this setting may fix transmit audio issues.

## 23.3.4.1

### Changing the Audio Mode Setting

You can change your **Audio Mode** setting as needed.

**Procedure:**

1. From the **Advanced Settings**, scroll to and tap the **Audio Mode** setting.
2. Tap the desired option.
3. Tap **OK**.

## 23.3.5

## Accessory Compatibility

You can set the compatibility mode for PTT wired accessories.



**NOTE:** This setting should only be changed if the PTT button on a wired PTT accessory does not take and release the floor properly.

## 23.3.5.1

### Changing the Accessory Compatibility Setting

You can change your **Accessory Compatibility** setting as needed.

**Procedure:**

1. From the **Advanced Settings**, scroll to and tap the **Accessory Compatibility** setting.
2. Tap the desired mode option for the best audio quality.
3. Tap **OK**.

## 23.4

## Alert Repeat

The **Alert Repeat** setting affects how often you are reminded that you have Instant Personal Alerts (IPAs) and Missed Call Alerts (MCAs) waiting.

## 23.4.1

### Changing the Alert Repeat Setting

You can change your **Alert Repeat** setting as needed.

**Procedure:**

1. From the **Settings**, scroll to and tap on the **Alert Repeat** setting.
2. To select how often you want your alerts to repeat, perform one of the following actions:
  - To have alerts play once when you receive the alert, select **Once (default)**.

- To have alerts play every 20 seconds for 10 minutes, select **Repeat**.
- To have alerts play every 20 seconds until you clear the alert, select **Continuous**.



**NOTE:** This option drains the battery faster than the other options.

3. Tap **OK**.

## 23.5

# Alert Tone

The **Alert Tone** setting allows you to select the MCA and IPA tone from a list of choices. The tone is played when you select it.

### 23.5.1

## Changing the Alert Tone Setting

You can change your **Alert Tone** setting as needed.

### Procedure:

1. From the **Settings**, scroll to and tap the **Alert Tone** setting.



**TIP:** When you preview an alert tone, it does not play even if the phone ringer is silent.

2. Select the desired alert tone.



**NOTE:** A **Device Tone** option shows additional tones are available from your device.

3. Perform one of the following actions:
  - To select the tone, tap **Select**.
  - To go back to the previous screen, tap **Cancel**.
4. Tap **OK**.

## 23.6

# Allow Unconfirmed Video Transmission

When enabled, the **Allow Unconfirmed Video Transmission** setting allows an authorized dispatcher to start sending video from this device without your confirmation automatically. When disabled, an authorized user cannot send video from your device automatically without you accepting or declining the video session. This setting requires the Streaming Video feature to be enabled. It is an optional feature and may not be included in your PTT service plan.

### 23.6.1

## Changing the Allow Unconfirmed Video Transmission Setting

You can change your **Allow Unconfirmed Video Transmission** setting as needed.

### Procedure:

1. From the **Settings**, scroll to the **Allow Unconfirmed Video Transmission** setting.
2. To toggle the state of the setting, tap the **On/Off** switch.

## 23.7

## Audio Interaction

The **Audio Interaction** setting sets the audio interaction for PTT and video calls. You can mix both PTT call audio and video audio, or PTT call audio can have priority. When PTT Preemption is set, the PTT audio pre-empts the video audio. Audio interaction is set to **Mix** by default. This setting requires the Streaming Video feature to be enabled. It is an optional feature and may not be included in your PTT service plan.

## 23.7.1

### Changing the Audio Interaction Setting

You can change your **Audio Interaction** setting as needed.

**Procedure:**

1. From the **Settings**, scroll to and tap the **Audio Interaction** setting.
2. Select one of the following desired audio interaction setting options:
  - To pre-empt the video audio while a PTT call member has the floor, select the **PTT Preemption** option.
  - To mix both the PTT audio and video audio, select the **Mix** option.
3. Tap **OK**.

## 23.8

## Auto Answer Video Call

When you enable the **Auto Answer Video Call** setting, video calls are automatically accepted and played. When you disable this setting, an incoming video session alert provides you the option to accept or decline the video session. This setting requires the Streaming Video feature to be enabled. It is an optional feature and may not be included in your PTT service plan.

## 23.8.1

### Changing the Auto Answer Video Call Setting

You can change your **Auto Answer Video Call** setting as needed.

**Procedure:**

1. From the **Settings**, scroll to the **Auto Answer Video Call** setting.
2. To toggle the state of the setting, tap the **On/Off** switch.

## 23.9

## Auto Download

When you enable the **Auto Download** setting, message attachments automatically download to the **PTT Call History**. When you disable this setting, you must manually download by tapping the message attachment. This feature is disabled by default. This requires the Integrated Secure Messaging feature to be enabled by your administrator.

### 23.9.1

## Changing the Auto Download Setting

You can change your **Auto Download** setting as needed.

### Procedure:

1. From the **Settings**, scroll to the **Auto Download** setting.
2. To toggle the state of the setting, tap the **On/Off** switch.

### 23.10

## Auto Start

When the phone is powered up and the **Auto Start** setting is enabled, the PTT application starts in the background. If you have previously logged out manually, the PTT application cannot start, and you have to launch the PTT application manually.

When the phone is powered up, and the **Auto Start** setting is disabled, the PTT application cannot start in the background. You have to launch the PTT application manually. This feature is enabled by default.

### 23.10.1

## Changing the Auto Start Setting

You can change your **Auto Start** setting as needed.

### Procedure:

1. From the **Settings**, scroll to the **Auto Start** setting.
2. To toggle the state of the setting, tap the **On/Off** switch.

### 23.11

## Background Mode

The **Background Mode** setting allows you to choose whether the PTT application remains in the background when receiving or originating a PTT call. Pressing a PTT key or supported Bluetooth PTT accessory takes the floor while the application is in the background. You must bring the PTT application to the foreground to use the on-screen **PTT** button. This feature is disabled by default.

For more information, see [Call Behavior in the Background on page 77](#).

### 23.11.1

## Changing the Background Mode Setting

You can change your **Background Mode** setting as needed.

### Procedure:

1. From the **Settings**, scroll to the **Background Mode** setting.
2. To toggle the state of the setting, tap the **On/Off** switch.



**NOTE:** When the PTT application is in the background, a wired accessory **PTT** button does not work.

## 23.12

## Broadcast Call Confirmation

The **Broadcast Call Confirmation** setting allows you to enable or disable a broadcast call confirmation dialog before initiating a broadcast call.

## 23.12.1

### Changing the Broadcast Call Confirmation Setting

You can change your **Broadcast Call Confirmation** setting as needed.

**Procedure:**

1. From the **Settings**, scroll to and tap the **Broadcast Call Confirmation** setting.
2. Perform one of the following actions:
  - To have a confirmation dialog (pop-up) displayed before the initiation of a broadcast call, tap **ON**.
  - To have a confirmation dialog (pop-up) not displayed and have the initiation of a broadcast call be instantaneous, tap **OFF**.

## 23.13

## Call From Lock Screen

The **Call From Lock Screen** setting allows you to make a PTT call while the phone screen is locked. This feature is disabled by default.

For more information on configuring the contact or talkgroup to call, see [One Touch Action on page 184](#).



**NOTE:** This setting is available on devices that support the One Touch calling feature.

If your device does not have a PTT hard key, the **Call From Lock Screen** setting is hidden. For more information, see the [Using a Bluetooth Accessory without One Touch Calling on page 45](#) section.

The **Call From Lock Screen** setting is available when a wired PTT accessory is connected. For more information, see the [Using a Wired Accessory without One Touch Calling on page 44](#) section.

## 23.13.1

### Changing the Call From Lock Screen Setting

You can change your calls from the **Lock Screen** setting as needed.

**Procedure:**

1. From the **Settings**, scroll to the **Call From Lock Screen** setting.
2. To toggle the state of the setting, tap the **On/Off** switch.

## 23.14

# Call Priority

With call priority, you can allow or reject another incoming call based on the **Call Priority** setting (**Ongoing** or **Phone**). The default is *Ongoing*.

### 23.14.1

## Changing the Call Priority Setting

You can change your **Call Priority** setting as needed.

### Procedure:

1. From the **Settings**, scroll to and tap the **Call Priority** setting.
2. Perform one of the following actions:
  - To have an ongoing cellular call continue and an incoming PTT call be rejected by the User Busy indication, select the **Ongoing** option.  
During a cellular call, a PTT MCA is not provided. An MCA is shown after the cellular call ends. An ongoing PTT call continues, and an incoming cellular call is rejected.
  - To have an incoming PTT call be rejected during a cellular call, select the **Phone** option. An ongoing PTT call ends if a cellular call is answered.
3. Tap **OK**.

## 23.15

# Capacity

The **Capacity** setting allows you to view how many PTT contacts, talkgroups, and favorites are stored on your phone. These numbers include both personal and Administrator-managed.

To see the maximum capacity for your phone, you can refer to the table in [Contacts on page 102](#), [Talkgroups on page 110](#), and [Favorites on page 99](#).

Also, you can dismiss the pop-up displayed by pressing the **Back** button on the title bar.

### 23.15.1

## Viewing the Phone Capacity Setting

You can view your **Phone Capacity** setting as needed.

### Procedure:

- From the **Settings**, scroll to and tap the **Capacity** setting.  
The **Capacity** screen displays.

## 23.16

# Contact Sorting

With the **Contact Sorting** setting, you can choose to view your contacts in a sorted manner.

There are two contact sorting options: according to the alphabetical order of your contacts (default) or according to the availability of your contacts. When contacts are sorted by availability, online contacts show first alphabetically, followed by offline contacts alphabetically. Online contacts include contacts who are

Available and Do Not Disturb. The contact list updates each time a contact changes from online to offline or vice versa.

### 23.16.1

## Changing the Contact Sorting Setting

You can change the **Contact Sorting** setting as needed.

### Procedure:

1. From the **Settings**, scroll to and tap the **Contact Sorting** setting.
2. Perform one of the following actions:
  - To sort the contacts alphabetically, tap the **By Alphabetical** option.
  - To sort the contacts by availability, tap the **By Availability** option.
3. Tap **OK**.

### 23.17

## Display Name

The **Display Name** setting allows you to view and change the name that others, including the System Administrator, see in their contact list. The administrator may change your name at any time. Your administrator may also restrict the ability for you to set your name. The display name can be changed if it has an underline.

### 23.17.1

## Viewing or Changing Your Display Name Setting

You can view or change your display name as needed.

### Procedure:

1. From the **Settings**, scroll to and tap the **Display Name** setting.  
Your current name displays.
2. To dismiss the display name window or continue to set your display name, tap the **Cancel** button.
3. To clear the display name, tap the **Clear Text** button.
4. Type your display name using the on-screen keyboard.
5. To save the display name, tap the **Save** button.

### 23.18

## Emergency

The **Emergency** setting is an optional feature and may not be included in your PTT service plan.

The **Emergency** settings allow you to view a preset list of your primary and secondary emergency contacts and talkgroups. This setting is displayed when your emergency destination is assigned by your administrator and not by the user and requires Emergency Services to be enabled by your administrator.



**NOTE:** You cannot change your emergency contacts set by your administrator.

### 23.18.1

## Viewing Your Emergency Contacts Setting

You can view your **Emergency Contacts** setting as needed.

### Procedure:

From the **Settings**, scroll to and tap the **Emergency** settings.

### 23.19

## Emergency Alert

The **Emergency Alert** setting allows you to control new emergency alert notifications and to select the behavior of incoming emergency alerts.

Emergency alerts are received when another user declares emergency. **Emergency Alert** setting options include **Tone and Display** (default), **Tone Only**, **Display Only**, or **Off**, which provides no alert dialog and no alert tone.

This feature requires the Emergency Services feature to be enabled by your administrator.

### 23.19.1

## Changing the Emergency Alert Setting

You can change the **Emergency Alert** setting as needed.

### Procedure:

1. From the **Settings**, scroll to the **Emergency Alert** setting.
2. Select one of the following desired emergency alert options:
  - To have a persistent alert dialog display, an audible tone play, and the alert added to history, select **Tone and Display** (default).
  - To have an audible alert tone play, and the alert added to history, select **Tone Only**.
  - To have a persistent alert dialog display, no alert tone play, and the alert added to history, select **Display Only**.
  - To have no alert dialog display, no alert tone play, and the alert added to history, select **Off**.
3. Tap **OK**.

### 23.20

## Enhanced Loudness

When you enable the **Enhanced Loudness** setting, the audio volume of PTT calls increases using the speakerphone. This feature is only available on supported devices.

### 23.20.1

## Changing the Enhanced Loudness Setting

You can change the **Enhanced Loudness** setting as needed.

### Procedure:

1. From the **Settings**, scroll to the **Enhanced Loudness** setting.

- To toggle the state of the setting, tap the **On/Off** switch.

### 23.21

## History Sorting

With the **History Sorting** setting, you can view your history in a sorted manner.

The following are the two **History Sorting** setting options that you can select from:

- Sorting from oldest to newest (default), which displays your history with the newest entries at the bottom of the history list.
- Sorting from newest to oldest, which displays the newest entries at the top of the history list.



**NOTE:** This feature applies to conversation details. The first-level history always shows the newest conversations at the top of the list.

### 23.21.1

## Changing the History Sorting Setting

You can change the **History Sorting** setting as needed.

### Procedure:

- From the **Settings**, scroll to and tap the **History Sorting** setting.  
The **History Sorting** screen displays.
- Perform one of the following actions:
  - To sort the history from newest to oldest entries, tap **Newest to oldest**.
  - To sort the history from oldest to newest entries, tap **Oldest to newest**.
- Tap **OK**.

### 23.22

## In Call Tones

When you enable the **In Call Tones** setting, tones play during a PTT call. However, when you disable the **In Call Tones** setting, the tones do not play during a PTT call.

### 23.22.1

## Changing the In Call Tones Setting

You can change the **In Call Tones** setting as needed.

### Procedure:

- From the **Settings**, scroll to and tap the **In Call Tones** setting.
- Select any of the following **In Call Tones** setting behavior options:
  - To have a tone play when you receive a PTT call, select **Incoming Call Tone**.  
The default selection is set to **ON**.
  - To hear a specific tone when the floor is granted or acquired, select **Floor Grant Tone**.  
This tone also indicates you can speak. The default selection is set to **ON**.
  - To hear a specific tone when the floor is free, select **Floor Free Tone**.

The default selection is set to **ON**.

- To hear a specific tone when the user who has the floor releases the floor, select **Floor Release Tone**.

The default selection is set to **OFF**.



**NOTE:** The Floor Release Tone is played when the user who has the floor releases the floor. The tone is the same as the Floor Free Tone. This floor tone condition is not supported in clients before release 8.3.

- To hear a specific tone when the floor is busy, select **Floor Error/Busy Tone**.

The default selection is set to **ON**.

- To hear a specific tone when you receive a voice message, select **Voice Message Tone**.

The default selection is set to **ON**.

## 23.23

# Instant Personal Alert

The **Instant Personal Alert** setting allows you to select the IPA from a list of choices, such as **Tone and Display** (default), **Tone Only**, **Display Only**, or **Off**, which provides no alert dialog and no alert tone.

## 23.23.1

# Changing the Instant Personal Alert Setting

You can change the **Instant Personal Alert** setting as needed.

### Procedure:

1. From the **Settings**, scroll to and tap the **Instant Personal Alert** setting.
2. Select any of the following **Instant Personal Alert** setting options:
  - To have a persistent alert dialog display, an audible tone play (subject to Silent Mode behavior), and the alert added to history, select **Tone and Display** (default).
  - To have an audible alert tone play (subject to Silent Mode behavior), and the alert added to history, select **Tone Only**.
  - To have a persistent alert dialog display, no alert tone play, and the alert added to history, select **Display Only**.
  - To have no alert dialog display, no alert tone play, and the alert added to history, select **Off**.
3. Tap **OK**.

## 23.24

# Logout

While you are logged out, you show as “Offline” to others, and you cannot receive PTT calls, alerts, or secure messages.

If you log out before powering off your phone, you remain logged out after your phone is powered on again even if the **Auto Start** setting is enabled. To send or receive PTT calls, you need to log in. See the [Login on page 34](#) section for details on how to log in.

## 23.24.1

## Changing the Logout Setting

You can change the **Logout** setting as needed.

**Procedure:**

1. From the **Settings**, scroll to and tap the **Logout** setting.
2. Tap **Logout**, a logout confirmation appears.
3. Perform one of the following actions:
  - Tap **Yes** to enable.
  - Tap **No** to disable.

## 23.25

## Message Alert

This setting allows you to control new message alert notifications.

To enable/disable Message Alert for PTT messages, switch ON the setting to enable Message Alert or switch OFF to disable the Message Alert at the Message Alert setting. This requires the Integrated Secure Messaging feature to be enabled by your administrator.

## 23.25.1

### Changing the Message Alert Setting

You can change the **Message Alert** setting as needed.

**Procedure:**

1. From the **Settings**, scroll to the **Message Alert** setting.
2. Tap the **On/Off** switch to toggle the state of the setting.

## 23.26

## Message Alert Tone

This setting allows you to select the MCA and IPA tone from a list of choices. The tone plays when you select it. This requires the Integrated Secure Messaging feature to be enabled by your administrator.

## 23.26.1

### Changing the Message Alert Tone Setting

You can change the **Message Alert Tone** setting as needed.

**Procedure:**

1. From the **Settings**, scroll to and tap the **Message Alert Tone** setting.



**TIP:** When you preview a message alert tone, it plays on the speaker even if the phone ringer is silent.

2. Select the desired alert tone.
3. Tap **OK**.

## 23.27

# Missed Call Alert

This setting allows you to select the MCA from a list of choices to provide a Tone and Display (default), Tone Only, Display Only, or Off, which provides no alert dialog and no alert tone.

## 23.27.1

# Changing the Missed Call Alert Setting

You can change the **Missed Call Alert** setting as needed.

### Procedure:

1. From the Settings, scroll to and tap the **Missed Call Alert** setting.
2. Select the desired MCA option as follows:
  - **Tone and Display** (default)—A persistent alert dialog displays, an audible tone plays (subject to Silent Mode behavior), and the alert is added to history.
  - **Tone Only**—An audible alert tone plays (subject to Silent Mode behavior), and the alert is added to history.
  - **Display Only**—A persistent alert dialog displays, no alert tone plays, and the alert is added to history.
  - **Off**—No alert dialog displays, no alert tone plays, and the alert is added to history.
3. Tap **OK**.

## 23.28

# My PTT Number

This number displays your registered PTT number to other contacts.

## 23.28.1

# Viewing the My PTT Number Setting

### Procedure:

From the **Settings**, scroll to the **My PTT Number** setting.

## 23.28.1.1

# Missed Call Alert

This setting allows you to select the MCA from a list of choices to provide a Tone and Display (default), Tone Only, Display Only, or Off, which provides no alert dialog and no alert tone.

## 23.28.1.1.1

# Changing the Missed Call Alert Setting

You can change the **Missed Call Alert** setting as needed.

### Procedure:

1. From the **Settings**, scroll to and tap the **Missed Call Alert** setting.
2. Select the desired MCA option as follows:

- **Tone and Display** (default)—A persistent alert dialog displays, an audible tone plays (subject to Silent Mode behavior), and the alert is added to history.
  - **Tone Only**—An audible alert tone plays (subject to Silent Mode behavior), and the alert is added to history.
  - **Display Only**—A persistent alert dialog displays, no alert tone plays, and the alert is added to history.
  - **Off**—No alert dialog displays, no alert tone plays, and the alert is added to history.
3. Tap **OK**.

## 23.29

## Network Loss Tone Repeat

The **Network Loss Tone Repeat** setting determines whether the phone plays the network loss tone continuously at a periodic interval or once the user's PTT application detects network loss. When selected, a tone plays when the application transitions from one network to another.

## 23.29.1

### Changing the Network Loss Tone Repeat Setting

You can change the **Network Loss Tone Repeat** setting as needed.

**Procedure:**

1. From Settings, scroll to and tap the **Network Loss Tone Repeat** setting.
2. Select the desired Network Loss Tone Repeat setting option.
 

If the network loss tone is enabled, you can set a repeat period for the network loss tone. Supported values are None (no repeat), 10 seconds, 30 seconds, and 60 seconds. The default option is **None**.
3. Tap **OK**.

## 23.30

## Network Up/Down Tones

The **Network Up/Down Tones** setting allows you to set whether tones are played for network loss, both network loss and network reconnect, network loss during a call only, or none (default is network loss during a call only).

## 23.30.1

### Changing the Network Up/Down Tones Setting

You can change the **Network Up/Down Tones** setting as needed.

**Procedure:**

1. From the Settings, scroll to and tap the **Network Up/Down Tones** setting.
2. Select the desired **Network Up/Down Tones** setting.
3. Perform one of the following actions:
  - **Network Loss**—The phone plays a tone during a network loss.
  - **Network Loss and Reconnect**—The phone plays a tone during a network loss and reconnect.

- **Network Loss during Call Only** (default)—The phone plays a tone during a call when a network loss happens.
  - **None**—No tone plays when the network is lost or reconnected.
4. Tap **OK**.

### 23.31

## One Touch Action

When One Touch Action is set to call, PTT users can call a particular contact or talkgroup or most recent history entry when the PTT button is pressed once. Alternatively, a user can assign the PTT button to open the application to the preferred landing page (History, Contacts, Groups, Favorite Contacts, Favorite Groups). One Touch Action provides a simplified calling experience for PTT users who primarily communicate with a single contact or talkgroup.



**NOTE:**

The **Landing Page** option has no effect when the phone is locked.

The **Landing Page** option is not supported with Android 10 and later.

If your device does not have a PTT hard button, the **One Touch Action** setting is hidden. For more information, see the [One Touch Calling Behavior on page 70](#) section.

When a wired accessory is connected, One Touch Action is shown with the Landing Page option only.



**NOTE:** One Touch calling to contacts and groups is available on devices that support One Touch Action calling. If your device does not support One Touch Action, you can still set the Landing Page.

The One Touch Calling actions (Call Most Recent, Call Contact, Call Group) can be used while the phone is locked if the [Call From Lock Screen on page 175](#) setting is enabled.

### 23.31.1

## Changing the One Touch Action Setting

You can change the **One Touch Action Setting** as needed.

**Procedure:**

1. From the **Settings**, scroll to and tap the **One Touch Action** setting.
2. Select the desired One Touch Action.
  - **Call Most Recent**—Originates a PTT call to the most recent history event.
  - **Call Contact**—Originates a PTT call to a user-selected PTT contact.
  - **Call Group**—Originates a PTT call to a user-selected PTT talkgroup (corporate or public).
  - **Landing Page**—Brings the application to the foreground and goes to the user-selected landing page:
    - a. History
    - b. Favorite Contacts
    - c. Favorite Groups
    - d. Contacts (default)
    - e. Groups
    - f. Map
  - **None**—Disables PTT key action when the PTT application is in the background.

## 23.32

## Privacy Mode

The Privacy Mode setting lets you control how incoming PTT calls are handled whenever your phone ringer setting is set to “silent” or “vibrate-only”. With Privacy Mode, you can control whether an incoming PTT call is heard normally or if the PTT call uses the phone earpiece (default). You can choose the behavior using the Privacy Mode setting within the PTT application.

## 23.32.1

### Changing the Privacy Mode Setting

You can change the privacy mode through this setting.

**Procedure:**

From the **Settings**, scroll to and tap the **Privacy Mode** setting.

- **Earpiece**—Incoming PTT calls are sent to the phone’s earpiece instead of the loudspeaker. You can carry on your PTT call by holding the phone up to your ear, just as a normal phone call. You must still use the PTT button to take and release the floor.
- **Off**—Incoming PTT calls override the phone’s loudspeaker or earpiece, depending on the Speaker setting, even if the phone’s ringer setting is set to “silent” or “vibrate-only”. This option allows you to hear PTT calls even if your phone’s ringer is silent.

## 23.33

## PTT Key

The PTT key setting allows you to assign an alternate key as a PTT key (this setting only applies if your phone does not have a hard key to use as a PTT button).


## 23.33.1

### Changing the PTT Key Setting

You can change the **PTT Key** setting as needed.

**Procedure:**

1. From the **Settings**, scroll to and tap the **PTT Key** setting.
  - **Volume Up/Down**—When the **PTT Key** setting is set to Volume Up/Down, you can use the volume up or down button to activate the PTT key. The PTT call volume can be changed by pressing the **Speaker** button on the call screen and using the slider to adjust the volume.
  - **Camera**

 **NOTE:** If your phone does not have a camera button, the Camera option does not show.
  - **None (on-screen)**—Default
2. Tap **OK**.

## 23.34

# Restore Defaults

You can restore all the PTT application settings to their defaults using the **Restore Defaults** setting. When you choose this setting, you are reminded that the restore cannot be undone and asked to confirm the action.

## 23.34.1

# Restoring the Default Settings

You can change the **Default** settings as needed.

### Procedure:

1. From the **Settings**, scroll to and tap the **Restore Defaults** setting.
2. Tap **Yes** to restore all application settings to their default values or **No** to cancel.

## 23.35

# Using Bluetooth

To enable/disable Bluetooth device usage for PTT calls, switch ON the setting to enable Bluetooth or switch to OFF mode to disable the Bluetooth in the **Bluetooth** setting. This setting is enabled by default.

## 23.35.1

# Changing the Bluetooth Setting

You can change the **Bluetooth** setting as needed.

### Procedure:

1. From the **Settings**, scroll to the **Bluetooth** setting.
2. Tap the **On/Off** switch to toggle the state of the setting.

## 23.36

# Vibrate Alert

When the Vibrate Alert setting is ON, the phone vibrates for new alerts. This setting applies to IPAs and MCAs and is enabled by default.

## 23.36.1

# Changing the Vibrate Alert Setting

You can change the **Vibrate Alert** setting as needed.

### Procedure:

1. From the **Settings**, scroll to the **Vibrate Alert** setting.
2. Tap the **On/Off** switch to toggle the state of the setting.

23.37

## Vibrate Call

When the incoming Call Vibrate setting is ON, the phone vibrates for incoming PTT calls. This setting is disabled by default.



**NOTE:** When the phone ringer is set to Silent only, it overrides this setting unless Privacy Mode is OFF.

23.37.1

### Changing the Vibrate Call Setting

You can change the **Vibrate Call** setting as needed.

**Procedure:**

1. From the **Settings**, scroll to the **Vibrate Call** setting.
2. Tap the **On/Off** switch to toggle the state of the setting.

23.38

## Voice Message Fallback

This setting is for the Voice Message Fallback feature, which allows voice messages to be disabled when needed.

23.38.1

### Changing the Voice Message Fallback Setting

You can change the **Voice Message Fallback** setting as needed.

**Procedure:**

1. From the **Settings**, scroll to and tap the **Broadcast Call Confirmation** setting.
2. Select the following options:
  - Tap **ON** (Default)—Private and Group PTT call will automatically initiate the Voice message screen if the destination is unavailable.
  - Tap **OFF**—Private and Talkgroup PTT calls show an error message if the destination is unavailable.

23.39

## Volume Boost

The Volume Boost setting increases PTT call volume and Integrated Secure Messages (voice messages and video messages) while the device is in speakerphone mode.

Volume Boost does not affect application tones and PTT call volume in accessories, including headsets or RSMs. The volume is not boosted when the speakerphone is disabled.



**NOTE:** Boosting volume may decrease sound quality.

The Volume Boost setting is available on supported devices.

### 23.39.1

## Changing the Volume Boost Setting

You can change the **Volume Boost** setting as needed.

#### Procedure:

1. From the **Settings**, scroll to and tap the **Volume Boost** setting.
2. Adjust the control to indicate the desired percentage of volume boost.
3. Tap **OK**.

## Chapter 24

# Troubleshooting

This section describes the steps you must take to troubleshoot the Push-to-Talk (PTT) application and is organized as follows:

## 24.1

### General

Whenever you are having issues, it is recommended to update your PTT application.

## 24.2

### Activation Failures

The first time you start the application after download, the application must “activate” with the PTT server.

This activation process ensures that you are a PTT subscriber and that you are using a supported Android phone. If a problem occurs during the activation process, you receive an error message. The following error messages may be observed:

`Data connection is unavailable.`

You must ensure that your phone is not on Airplane Mode and you are connected to the cellular data network. See the owner’s manual of your phone to understand the icons shown in the status bar at the top of the screen that indicate data connection is available.

`This service requires a supported phone. Would you like to subscribe now?`

You must have a PTT subscription before you can successfully begin using the PTT service.

## 24.3

### Restarting an Unresponsive PTT Application

In rare cases, the PTT application may suddenly stop working (application freeze). If this happens, you can recover by following these instructions:

#### Procedure:

1. Go to the phone settings on your Android phone.
2. Tap on **Application manager** under **Device**.
3. Choose **Push-to-Talk** from the list.
4. Select only **Force stop** option and not any other option.



**WARNING:** Selecting the Uninstall option uninstalls the complete PTT application from your phone. If this happens, see the sections [Downloading the PTT Application on page 27](#) for how to reinstall the application and reactivate with the server.

Selecting Clear Data clears your history, favorites list, and settings within the PTT application. You also have to reactivate the PTT application using the instructions in the section [First-time Activation on page 29](#). Your contacts and talkgroups are automatically restored during activation, but your avatars and color customizations cannot be restored.

#### 24.4

## Application Asks You to Enter an Activation Code

When you start the application for the first time, you are asked to activate the application.

This activation process ensures that you are a PTT subscriber and that you are using a supported phone. During activation, you must be located in an area with good cellular coverage. Some corporations allow activation of the application over a Wi-Fi network using an activation code. Your administrator typically provides the activation code. If you do not have an activation code, please move to an area with good cellular coverage and try activating again.

#### 24.5

## Application Is Not Visible during an Incoming Call

Check the Background Mode setting to ensure it is disabled.

For more details, see the [Changing the Background Mode Setting on page 174](#) section.

#### 24.6

## Call Failures

A PTT call may not be completed for several reasons:

- The person you are calling has an “Offline” or “Do Not Disturb” status. The PTT application does not allow you to make a call to someone with either status.
- The person you are calling is busy either on another PTT call or a cellular call. Please see the [User Busy on page 193](#) section for more information.
- Your phone loses connection with the data network or PTT server. Please see the [Loss of Data Network Connection on page 192](#) section for more information.
- The person you are trying to call is temporarily unreachable. Please see the [User Unreachable on page 193](#) section for more information.

#### 24.7

## Unexpected Call Endings

A cellular or PTT call may unexpectedly end because of the option selected in the Call Priority setting:

- During a PTT call, an ongoing PTT call ends when a cellular call answers.
- During a cellular call, an incoming PTT call causes the cellular call to end and the PTT call to be received.

Please see the [Call Priority on page 176](#) setting in the Settings section for more information.

#### 24.8

## Incoming Call Rejection

An incoming cellular or PTT call may be rejected because of the option selected in the Call Priority setting.

Please see the [Call Priority on page 176](#) setting in the Settings section for more information.

## 24.9

## Calls Are Always Heard in the Earpiece

If you are hearing PTT calls through the earpiece instead of the loudspeaker, the speakerphone ON/OFF setting may be set to OFF.

You can change this setting in the application settings or during a call. To enable the speakerphone, tap the on-screen speakerphone button to ensure it is ON (shown by the green indicator on the button). More details are found in [Call Screen Icons on page 50](#).

Another reason may be because your phone ringer is set to silent. Ensure that your phone is not in Silent and check that Privacy Mode is not set to Earpiece. See the [Interacting with Silent or Sound Mode on page 76](#) section for more information about interaction with your phone's silent mode.

## 24.10

## Calls Are Only Received from a Small Number of Groups

If you are receiving calls from only a couple of groups, you may have turned Talkgroup Scanning on and are listening to only the groups in the scan list.

More details can be found in [Talkgroup Scanning on page 118](#).

## 24.11

## Unable to Change the Phone Number of a PTT Contact

While the name, avatar, color, and favorite status of a contact can be changed, phone numbers cannot be changed.

If you need to change a contact's phone number, you need to delete the contact and add it again with the new phone number. Please see the [Contacts on page 102](#) section for details on deleting and adding PTT contacts. Contacts that are managed by an administrator cannot be renamed or deleted.

## 24.12

## Unable to Create/Update/Delete a Contact or Group

There are two reasons why you might not be able to create, modify, or delete a contact or group:

### Administrator-managed Contacts and Groups

You cannot change or delete contacts or groups that are managed by an administrator. Please refer to the [Contacts on page 102](#) section and the [Talkgroups on page 110](#) section for more details on Administrator-managed contacts and groups. You need to contact your PTT administrator to make any changes.

### Corporate-only Subscriber

Your PTT administrator may have your PTT service restricted to have only corporate contacts and groups. This means that only your PTT administrator can add, change, or remove contacts and groups on your phone. Even though you cannot change or remove contacts or groups, you can still make them favorites, add avatars, or set colors.

### 24.13

## Unable to Hear an Incoming Call

If you cannot hear an incoming PTT call, your loudspeaker volume may be turned down, or your phone may be in silent mode.

Please see the [Turning the Speaker On/Off and Setting the PTT Call Volume on page 75](#) section to set the PTT call volume. See the [Interacting with Silent or Sound Mode on page 76](#) section for more information about interaction with your phone's silent mode.

### 24.14

## Unable to Send an Instant Personal Alert

If your phone is currently in “Do Not Disturb” (DND) status, you cannot send an Instant Personal Alert (IPA).

You are not able to receive a callback while in DND, so the PTT application does not allow you to send an alert. Please change your presence status to “Available”. See the [My Presence on page 93](#) section for details on how to set your presence status.

### 24.15

## Changing Your SIM Card

Your phone may contain a SIM card that lets you move your phone number from one phone to another phone compatible with your mobile phone service and SIM card.

If you replace the SIM card in your phone with another that has a different phone number, the PTT application automatically erases your PTT history and favorites and restores the contacts and talkgroups associated with the new number (if any exist). After changing the SIM card, the next time you start the PTT application, you are asked to “activate” or re-register your phone with the PTT server to ensure that you subscribe to the PTT service. Please see the [First-time Activation on page 29](#) section for information about registering your phone with the PTT service.

### 24.16

## Explanation of Error Messages

#### 24.16.1

### Loss of Data Network Connection

If the PTT application cannot communicate with the PTT server, it displays `Offline` in the status bar or system notification, and your availability shows `No Connection`.

For more information, refer to the [My Presence on page 93](#) section.

You cannot receive PTT calls or alerts, and you appear as `Offline` to others after some time. You should ensure that you have a good signal on your phone. If you perform any action that requires connection to the PTT server (e.g., outgoing call, change self-availability, contact/group add/modify/delete, etc.), the following message is displayed for a few seconds: `Connection is unavailable`. When the connection restores, you receive the following message: `Connection is restored`.

To see if you have access to the data network, you should try to access a website using your mobile browser. You may also enable Wi-Fi if a Wi-Fi network is in range.

If you want to reconnect only to the cellular data network, disable Wi-Fi in the settings. See the [Menu on page 40](#) settings section for more information.

## 24.16.2

## User Busy

When you make a one-to-one PTT call to another person, and they are engaged in another PTT call or a regular cellular call, you see a message indicating that the person is busy.

If you receive this message, you can try your call later or send an alert. See the [Sending an Alert on page 91](#) section for details.

## 24.16.3

## User Unreachable

In rare cases, a contact might be shown as `Available` in your contact list but might be temporarily outside the range of service coverage. In this case, your PTT call cannot go through. The called person's status updates to `Offline` until they reconnect to the PTT service. If this happens, you should wait for their status to be shown as `Available` and try your call again.

## 24.17

## Login Failures

Login to the PTT service may fail if the phone is in Airplane Mode or if you do not have a data connection. Please check the data connection and try to log in again later.

## 24.18

## Presence Status Does Not Update

If you attempt to change your presence status from `Available` to `Do Not Disturb` or vice versa, and you do not see your status updated, there may be a communication problem between your phone and the PTT server.

Logging out and logging in again should solve the problem. To log out, see the [Logout on page 180](#) section.

## 24.19

## PTT Button Is Not Working or Accesses a Different Application

If your phone has a PTT button on the side and it is not working for PTT, it may not be properly configured for use by the PTT application.

Please see the [Programmable Key Assignment on page 28](#) section for details on how to configure the PTT button.

The following information applies to PTT-certified devices.

If you are using PTT wired accessories and PTT is not working, verify the PTT wired accessories are set up properly using the device user guide. Ensure that the `Advanced > Accessory Compatibility` setting is set correctly using each option until the accessory is working correctly. For more information, see the [Accessory Compatibility on page 171](#) section on how to set the `Advanced > Accessory Compatibility` setting.

If your phone has Google Now or S Voice application running, you must disable it. Otherwise, it takes precedence over the PTT application and interferes with the operation.

#### 24.20

## Quick Group Calls I Receive Are Shown in History as a One-to-One Call

When you receive a quick group call, you notice that the call history shows a call received from the originator of the call, which is normal.

You cannot call a quick group that was created by someone else. Any quick group call that you make shows in the call history with the names of the participants. You can call that group again from your history. For more details on quick groups, please refer to the [Making Quick Group Calls on page 66](#) section.

#### 24.21

## Wi-Fi Connection Problems

Using the PTT application over Wi-Fi requires that the phone can access the Internet through the Wi-Fi connection. While your phone is connected to Wi-Fi if the PTT application gives you the message `Data connection is unavailable`, ensure that the Wi-Fi service provider does not require a username and password and that the Wi-Fi application setting is enabled.

In rare circumstances, the PTT application may not be able to connect to the PTT server over Wi-Fi. In this case, you should disable the Wi-Fi setting in the PTT application or disable the Wi-Fi connection on your phone to use PTT.

Please refer to the [PTT over Wi-Fi on page 61](#) section and the application [Settings on page 168](#) section for more details.

## Chapter 25

# Glossary

This section provides a list of terms used with the Push-to-Talk (PTT) application.

## Authorized User

An authorized user is typically a dispatcher or supervisor who may have permissions to perform the following:

- Allow or disallow remote supervision for assigned contacts
- Remotely declare and cancel an emergency call on behalf of a remote user
- Access user check for the remote user
- Enable or disable the PTT service
- Activate ambient listening for the remote user
- Activate discreet listening for the remote user

## 25.2

# Alert Types

Alert types notify the user of alerts.

The following alert types are supported:

**Instant Personal Alert (IPA)** An IPA allows you to request a callback from another subscriber. For more details, see the [Calling from Instant Personal Alert on page 70](#) section.

**Missed Call Alert (MCA)** An MCA alerts you whenever you miss a PTT call. For more details, see the [Missed Call Alert on page 182](#) section.

## 25.3

# Call Types

There are various call types.

**Broadcast Call** A high-priority call where only designated talkgroup members, called broadcasters, may initiate broadcast talkgroup calls. For more details, see the [Making Broadcast Calls on page 67](#) section.

**Emergency Call (Contact or Talkgroup)** The highest-priority call that pre-empts other PTT calls. See the [Emergency Calling and Alert \(Optional\) on page 79](#) section for more details on how to make an emergency call to a contact or talkgroup.

**Private Call (One-to-One Call)** A private call (also known as a one-to-one call) is a call between you and one other person. For more details, see the [Making One-to-One \(1:1\) Calls with Automatic Call Answer on page 64](#) section.

**Talkgroup Call** A talkgroup call is a call to a group of people. For more details, see the [Talkgroups on page 110](#) section.

## Quick Group Call

A quick group call allows you to make a PTT call to up to 10 people without first creating a talkgroup, which is handy if you want to call a small group of people quickly that are not already in a group. For more details, see the [Making Quick Group Calls on page 66](#) section.

You can create a group from a quick group call in your call history unless your administrator has restricted your phone from adding new groups.

## Display Name

Your display name is shown to others during a PTT call and in their PTT call history. You can change your display name from within the PTT application settings unless restricted by your administrator. For more details, see the [Restore Defaults on page 186](#) section.

## Floor Control

While in a PTT call, only one person can speak at a time. The person speaking is said to “have the floor”. The following terms are used throughout this document:

- [Floor Acquired](#)
- [Idle Floor](#)
- [Floor Unavailable](#)

**Floor Acquired** When you take the floor by pressing the PTT button, the on-screen PTT button changes, and you hear a “chirp”. This chirp indicates that you have the floor and can speak while you press the PTT button. When you stop talking, you should release the PTT button.

**Idle Floor** While no one is speaking, the floor is “idle” and available for anyone to take. The screen changes color and shows the message “No one is speaking...” If you want to speak, you must wait until the floor is idle, you can press the PTT button to acquire the floor.

**Floor Unavailable** Whenever someone else is speaking, you see the speaker’s name and the on-screen PTT button changes. You cannot take the floor while someone else is speaking; you get a bong tone or floor deny. If you are speaking and a supervisor takes the floor, you hear a tone and the on-screen PTT button changes.



**NOTE:** If the call is a group call and you are a supervisor for the group, whenever you press the PTT button, the floor is revoked from the person speaking including another supervisor and you can speak after acquiring the floor. For more details, see the [Supervisory Override on page 90](#) section.

## Talkgroup

A group is a type of PTT contact that connects you to multiple people at once. For more details, see the [Talkgroups on page 110](#) section.

## Integrated Secure Messaging

Integrated Secure Messaging allows a PTT subscriber to send and receive secure text messages, multimedia content, and location information to and from other PTT subscribers. For more details, see the [Integrated Secure Messaging](#) section.

## Supervisory Override

A supervisory override allows a group member to be designated by an administrator as a supervisor and be able to take the floor and speak at any time during a call, even if someone else has the floor. One or more members of a group can be designated as a supervisor. If there are two or more supervisors in the same

group, each supervisor can interrupt the other(s). For more details, see the [Supervisory Override on page 90](#) section.

### **Talkgroup Scanning**

Talkgroup Scanning allows a user's phone to scan through a list of corporate talkgroups for calls and up to three talkgroups can be assigned as priority (1–3) talkgroups. The higher-priority talkgroup calls take precedence over lower-priority talkgroup calls. Talkgroups that are not in the scan lists do not override an ongoing call when scanning is ON. For more details, see the [Talkgroup Scanning on page 118](#) section.

### **Video Streaming**

Allows you to stream your video in real time to another user, typically a dispatcher. For more details, see the [Video Streaming \(Optional\) on page 159](#) section.