

M500 Quick Start

Powering On the M500

Your agency administrator typically configures the M500 to power on with your vehicle ignition.

 

- Start your vehicle.

The M500 boots up. When it has finished, the Display Screen shows the Live View streaming from the front camera.

Live View and Display Control Panel

Live View shows a live video stream overlaid with informational text and icons. Control Panel buttons control basic system functions. Access features with a screen touch or a button press.




1	Current time and date	14	Access near real-time review player
2	Current GPS coordinates	15	Camera view changer
3	Active external inputs and crash indicator	16	Used storage for internal hard drive and USB drive
4	Wi-Fi signal strength, when Wi-Fi is available (MikroTik only)	17	Camera view indicator (text)
5	Event transfer status, connected  or uploading 	18	Speeds from connected radar or GPS-defined patrol speed
6	Active event recording indicator (red bars)	19	On: Power on the M500 and activate/deactivate Covert Mode
7	Camera view indicator (icon)	20	Off: Power off the M500
8	Live streaming indicator	21	Home: Switch between menu and Live View
9	Associated body-worn cameras indicator	22	Record: Start a recorded event
10	Pending update icon	23	Stop: Stop a recorded event
11	Logged-in officer name	24	Cameras: Access camera view controls
12	Vehicle ID	25	Display: Access display options
13	Microphone status, muted or unmuted		

Logging In to the M500

You log in to the M500 at the beginning of each shift to associate your name with the events recorded in your vehicle.

- On Live View, touch the officer name or **Unassigned** in the upper right corner.

The officer name search screen opens.

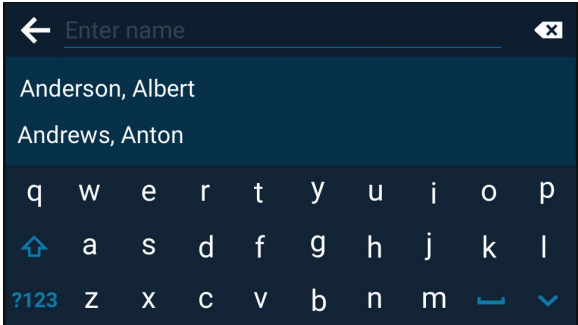


- Start entering your name, then touch your name when it appears on the list.

The M500 logs you in.

Home

Home gives you access to M500 functions and system information.

- From Live View, press **Home** on the Display Control Panel.

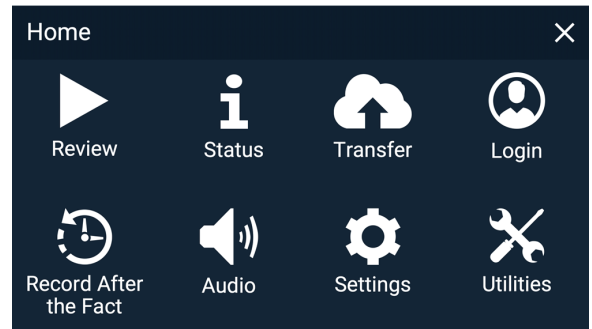

Review:	Opens the review by event feature
Status:	Shows current user, system, and network status information
Transfer:	Shows the status of event transfer to the evidence management system
Login/Logout:	Allows association of officer names with events recorded during their shifts
Record After the Fact:	Opens the Record-After-the-Fact® (RATF) feature to allow RATF event creation
Audio:	Allows adjustment of system volumes and wired microphone input levels
Settings:	Allows adjustment of some system settings
Utilities:	Provides access to some system tools

